Appendix for ATEX and IECEx Certified EX Units Instruction Manual



QuadraTherm[®] 640i and 780i Mass Flow Meters Certified ATEX and IECEx

Part Number: IM-QuadraTherm-ATEX and IECEx Rev D April 2018

GLOBAL SUPPORT LOCATIONS: WE ARE HERE TO HELP!

For Global Service Centers, go to http://www.sierrainstruments.com/facilities.html

CORPORATE HEADQUARTERS

5 Harris Court, Building L Monterey, CA 93940 Phone (831) 373-0200 (800) 866-0200 Fax (831) 373-4402 info@sierrainstruments.com www.sierrainstruments.com

EUROPE HEADQUARTERS

Bijlmansweid 2 1934RE Egmond aan den Hoef The Netherlands Phone +31 72 5071400 Fax +31 72 5071401 sales@sierrainstruments.nl

ASIA HEADQUARTERS

Second Floor Building 5, Senpu Industrial Park 25 Hangdu Road Hangtou Town Pu Dong New District, Shanghai, P.R. China Postal Code 201316 Phone: + 8621 5879 8521 Fax: +8621 5879 8586

IMPORTANT CUSTOMER NOTICE- OXYGEN SERVICE

Sierra Instruments, Inc. is not liable for any damage or personal injury, whatsoever, resulting from the use of Sierra Instruments standard mass flow meters for oxygen gas. You are responsible for determining if this mass flow meter is appropriate for your oxygen application. You are responsible for cleaning the mass flow meter to the degree required for your oxygen flow application.

© COPYRIGHT SIERRA INSTRUMENTS 2018

No part of this publication may be copied or distributed, transmitted, transcribed, stored in a retrieval system, or translated into any human or computer language, in any form or by any means, electronic, mechanical, manual, or otherwise, or disclosed to third parties without the express written permission of Sierra Instruments. The information contained in this manual is subject to change without notice.

TRADEMARKS

QuadraTherm[®] is a trademark of Sierra Instruments, Inc. Other product and company names listed in this manual are trademarks or trade names of their respective manufacturers.

Initial Release: clarify instructions for ATEX and IEC-Ex on 640i/780i Quadratherm product line

Contents

1.	Lab	eling	4
2.	Тур	e Approval Standards	5
3.	Zon	e, Gas Group, Category and Temperature class	5
3	.1.	Area Classification	5
3	.2.	Gas Grouping	6
3	.3.	Equipment Category	6
3	.4.	Temperature Classification	6
3	.5.	Ambient Temperature Range	6
4.	Safe	e Use of ATEX and IECEx Approved Equipment	6
4	.1.	Notes on Safe Use of the ATEX Approved Equipment	6
4	.2.	Mounting, Commissioning, and Operation	6
4	.3.	Explosive Hazardous Area	
4	.4.	Special Conditions for a Safe Use	7
4	.5.	Particular Recommendations: Closing the Cover	7
5.	Ren	note Electronics	8
6.	Maiı	ntenance	9
6	.1.	External Maintenance	9
6	.2.	Sensor Maintenance	9
6	.3.	Internal Maintenance	9
7.	Eart	hing	10
7	.1.	External Earthing	10
7	.2.	Internal Earthing	10
8.	War	ning	10
9.	Retu	urning Equipment to Factory	10
Add	dendu	um: Installation Instructions Cable Gland	12

This is a certified ATEX document. Changes must be approved by the Sierra ATEX Authorized Personnel

1. Labeling

Sierra Instruments Model 640i and 780i ATEX and IECEx Flow Transmitters that have the following label attached have been certified in compliance with ATEX: EN 60079-0: 2012+A11:2013, EN 60079-1:2014, EN 60079-31: 2014 IECEx: IEC 60079-0: 2011, IEC 60079-1: 2014, IEC 60079-31: 2013



ATEX and IECEx label, Enclosure Back, 640i/780i

The following information is provided as part of the labeling of the transmitter:

- Name and website of the manufacturer: Sierra Instruments, www.sierrainstruments.com
- The Model number, serial number and order number of the device
- Input power and maximum temperature and pressure
- Manufacturing date
- CE Mark
- ATEX/IECEx marking:

II 2 G Ex db IIC T3 Gb II 2 D Ex tb IIIC T200°C Db •ATEX/IECEx Ambient temperature range Ta = -20°C to +60°C

- ATEX certificate number: FM13ATEX0082X; IECEx certificate number: IECEx FMG 13.0031X
- Process temperature range: -40°C to +200°C
- IP 66 housing rating

•The following warnings should be obeyed:

WARNING: DO NOT OPEN WHEN AN EXPLOSIVE ATMOSPHERE IS PRESENT WARNING: DO NOT OPEN WHEN ENERGIZED WARNING: POTENTIAL ELECTROSTATIC CHARGING HAZARD—SEE INSTRUCTIONS

2. Type Approval Standards

The Sierra Instruments ATEX/IECEx approved flow meters have an EC Type examination certificate issued by FM Approvals and have been approved to the following standards:

ATEX: EN 60079-0: 2012+A11:2013 & All: 2013, EN 60079-1: 2014, EN 60079-31: 2014 IECEx: IEC 60079-0: 2011, IEC 60079-1: 2014, IEC 60079-31: 2013

3. Zone, Gas Group, Category and Temperature class

The Sierra Instruments 640i/780i ATEX and IECEx units have been certified ATEX/IECEx marking:

II 2 G Ex db IIC T3 Gb

II 2 D Ex tb IIIC T200°C Db

This means that the units can be installed in locations with the following conditions.

3.1. Area Classification

Zone 1	Area in which an explosive gas atmosphere is likely to occur in normal operation occasionally
Zone 2	Area in which an explosive gas atmosphere is not likely to occur in normal operation and if it does occur, is likely to do so only infrequently and will exist for a short period only
Zone 21	Place in which an explosive atmosphere in the form of a cloud of combustible dust in air is likely to occur in normal operation occasionally
Zone 22	Place in which an explosive atmosphere in the form of a cloud of combustible dust in air is not likely to occur in normal operation but, if it does, will persist for a short period only

3.2. Gas Grouping

Group IIA	Propane
Group IIB	Ethylene
Group IIC	Hydrogen and Acetylene

3.3. Equipment Category

2GD (Zone 2 suitable for Gasses and Dust explosive environments)

3.4. Temperature Classification for ATEX

Temperature Class	Maximum Process temperature (°C)	Maximum Surface Temperature (°C)
T6	40	70
T5	50	80
Τ4	85	115
T3	150	180
T2	250	280

3.5. Ambient Temperature Range

Ambient temperature range -20°C to +60°C

4. Safe Use of ATEX Approved Equipment

4.1. Notes on Safe Use of the ATEX Approved Equipment

Approved usage of the meter is restricted to fluids compatible with the wetted materials of the flow meter and within the restrictions on temperature and pressure as defined in the product manual.

4.2. Mounting, Commissioning, and Operation

The device has been designed to operate safely in accordance with the current technical and safety regulations of the EU. If installed incorrectly or used for applications for which it is not intended, it is possible that application related changes may arise. For this reason, the instrument must be installed, connected, operated, and maintained according to the instructions in this and the specific product operating manual.

Persons handling/installing or commissioning this equipment must be authorized and suitably qualified. The manual must be read, understood, and the instructions must be followed. Modifications and repairs to the device are only permissible when they are expressly approved in this manual.

4.3. Explosive Hazardous Area

If the device is to be installed in an explosive hazardous area, then the specifications in the certificate as well as all national and local regulations must be observed.

The instrument will be delivered with the certified ATEX/IECEx marking :

II 2 G Ex db IIC T3 Gb

II 2 D Ex tb IIIC T200°C Db

The certificate type can be identified from the second group of numbers (Feature 2: Approvals) on the model code stamped on the nameplate. For example:

1= NAA : Not suitable for hazardous areas, Non-Agency Approved. 2= cFMus : Explosion proof for Class I, Division 1, Groups B, C, D 3= ATEX/IECEx: II 2 G Ex db IIC T3 Gb/II 2 D Ex tb IIIC T200°C Db

This manual addition only applies to ATEX/IECEx units: II 2 G Ex db IIC T3 Gb or IECEx II 2 D Ex tb IIIC T200°C Db

The unit is supplied without cable glands for the power and signal. It is the user's responsibility to select suitable cable glands that meet or exceed the required ATEX/IECEx approval and that are suitable for the signal and power cable used. The connections on the electronics housing for the input power and signal cable glands is $\frac{3}{4}$ "-14 female NPT threads according to the NPT requirements of ANSI B1.20.1 plus +0.5 to +2.0 turns deeper.

WARNING: UNUSED WIRING ENTRIES ARE TO BE CLOSED USING SUITABLY CERTIFIED PLUGS TO MAINTAIN THE ENCLOSURE TYPE OF PROTECTION

NOTE: Please insure that when you mount these cable glands they are made-up wrench tight. At least 3-1/2 turns of the thread must be engaged inside of the electronics enclosure.

4.4. Special Conditions for a Safe Use

The ambient temperature must never overrun the following limits: -20...+60°C. The surface temperature of the device (indicated on the device) must never exceed this temperature and must take into account both ambient and fluid temperatures.

The flame proof joints are not intended to be repaired. Consult the manufacturer for additional information.


A suitably certified conduit sealing device is required within 13 inches of the enclosure for probes longer than 13 inches.


4.5. Particular Recommendations: Closing the Cover

The safety is guaranteed as long as the covers are correctly screwed and locked.

The lid locking screws are #10-24 Socket Head Cap Screws (SHC Screw) that use a 5/32-inch hex head wrench/driver to adjust. To lock the lids firmly tighten down/secure the lid and then back out the associated SHC screw firmly so that the lid is secured and locked in place. If one of the ribs/bumps on the lid happens to line up so it is blocking access to the SHC screw then

either slightly tighten the lid more or loosen the lid slightly, just enough to gain access to the lid locking SHC screw. *Note that this very minor adjustment, if necessary, does not affect the leak integrity of the enclosure*. To un-lock the lid allowing for removal, just turn in the associated SHC screw so that it is no longer in contact with the lid, then the lid can be removed. There are two lids to be locked on the main enclosure and one lid to be locked on the remote enclosure (If E4 feature was ordered) in order to maintain the safety ratings."

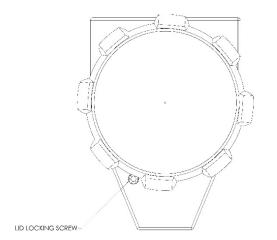

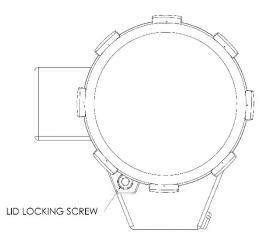

QuadraTherm Main Enclosure Shown With Lid Locking Screw


QuadraTherm Remote Enclosure Shown with Lid Locking Screw

The following warnings should be obeyed: WARNING: DO NOT OPEN WHEN AN EXPLOSIVE ATMOSPHERE IS PRESENT WARNING: DO NOT OPEN WHEN ENERGIZED WARNING: POTENTIAL ELECTROSTATIC CHARGING HAZARD—SEE INSTRUCTIONS

To minimize an electrostatic charging hazard on the exterior of the enclosures both the main and remote (If ordered) enclosures should be connected to earth ground, see section 7 below for more details.

5. Remote Electronics

Sierra Thermal flow transmitters with E4 in the model code have remote electronics. They have a cable with glands between the sensor and the electronics. These units are marked as follows:

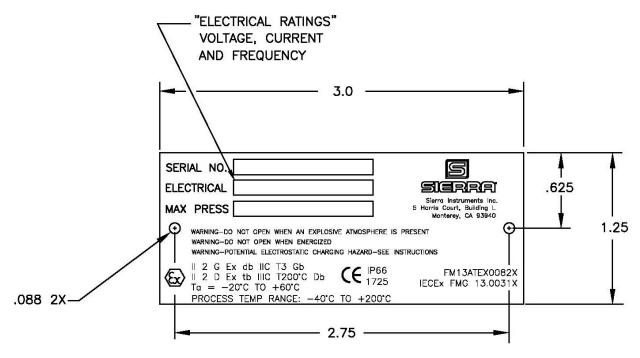

Sierra 640i/780i Remote Label

Please see the previous sections for explanations of all labeling requirements

If the remote wires need to be disconnected refer to the remote sensor wiring section of the instruction manual.

6. Maintenance

6.1. External Maintenance

The Sierra flow meters can be externally maintained with a dry clean cloth.

6.2. Sensor Maintenance

The sensor can be maintained by switching off the power, removing the probe from the process and cleaning the probe with a solvent compatible with 316SS. After cleaning the probe clean and dry the sensor with compressed air before you insert it back it the process. It is not recommended to use any Ultrasonic Bath cleaning.

6.3. Internal Maintenance

Please make sure that the internals of the unit always stay dry and clean. There are no user maintainable components inside the electronic compartment.

7. Earthing

The Sierra Instruments units must be connected to a good quality earth. The units are provided with internal and external earthing terminals.

7.1. External Earthing

The external earthing connections are located on the boss on the outside of both the main housing and remote housing (E4 option if ordered) and consist of an 18-8SS pan head Phillips screw (10-24 UNC-2B thread) and a serrated tooth #10 ring terminal for 16-14 AWG wire.

7.2. Internal Earthing

The internal earthing connection is located in the main housing terminal side and consist of an 18-8SS pan head Phillips screw (10-24 UNC-2B thread) and a serrated tooth #10 ring terminal for 16-14 AWG wire.

8. Warning

The electronics for ATEX and IECEx units contain special dedicated electronics. No customer modifications are available and are strictly forbidden. Any modification or adjustment to the electronics can be performed at the factory only.

9. Returning Equipment to Factory

Factory Calibration—All Models

Sierra Instruments maintains a fully-equipped calibration laboratory. All measuring and test equipment used in the calibration of Sierra transducers are traceable to NIST Standards. Sierra is ISO-9001 registered and conforms to the requirements of ANSI/NCSL-Z540 and ISO/IEC Guide 25.

Instructions for Returning Your Instrument for Service

The following information will help you return your instrument to Sierra Instruments' Factory Service Center and will ensure that your order is processed promptly. Prices may vary depending on the flow range, type of gas and operating pressure of your unit. To request detailed pricing, contact your local Sierra Instruments distributor or contact one of our offices directly.

Please follow these easy steps to return your instrument for factory service:

- To obtain a Return Materials Authorization (RMA) number from the Sierra Instruments to <u>http://www.sierrainstruments.com/rma/new.php</u> to create a Sierra Account.
- 2. Once you have created an account, click on the *Submit New RMA* tab and fill in the RMA form and follow the instructions. You will receive an email confirmation once you have submitted your RMA.
- 3. Print a copy of the RMA (that now includes RMA #) and send a copy of the RMA form along with your meter back to the factory.

- 4. If you require service beyond calibration, but do not know which service(s) will be required, describe the symptoms as accurately as possible on the RMA form.
- 5. Pack your instrument carefully. Use the original packaging and foam or bubble wrap (packing peanuts NOT recommended) and include a copy of the RMA form (complete with Sierra supplied RMA number) with the unit(s).

Ship the unit(s) to the following address:

Sierra Instruments, Inc. Attention: Factory Service Center 5 Harris Court, Building L Monterey, CA 93940 USA RE: RMA# (your number)

Addendum A: Installation Instructions Cable Gland

Manufacturer:

Sealcon (Hummel) 7374 S. Eagle Street Centennial, CO 80112-4221 USA

Cable Glands used on Sierra E4 units:

Sealcon: CD13NR-BE-N-ASMBLD PK=10 (Sierra Reference 30-0647)


Brief Description:

The Sealcon (Hummel) type cable gland is for use in the appropriate Hazardous Areas with braided shield cable. It gives environmental protection to IP66. This cable gland is an EMI/RFI proof Nickel Plated Brass type. A termination suitable for EMI/RFI protection is made using braided shield cables with these glands. These glands are non-corrosive and are resistant to salt water, weak acids, weak alkalis, alcohol, esters, ketones, ether, gasoline, mineral, animal & vegetable oil. RoHS and Deca BDE compliant.

Warning:


PLEASE STUDY CAREFULLY ALL PAGES OF THESE INSTRUCTIONS BEFORE INSTALLATION.

These glands should not be used in any application other than those mentioned here or in our Data Sheets, unless Sealcon (Hummel) states in writing that the product is suitable for such application. Sealcon (Hummel) can take no responsibility for any damage, injury or other consequential loss caused where the glands are not installed or used according to these instructions. This leaflet is not intended to advice on the selection of cable glands.



ATEX/ IECEx Certified Units QuadraTherm® 640i/780i

	4		3		1		2		Ē.		1		
			PART NUMBERS		CABLE	-H6F40			DIMENSION	S INCHES (MM)			
		Sta	nturri	Food-Lonnugh	10000	THREAD TYPE AND SD/F For twood sports set page 29	A Caserenes Hote 27 -27 -27	B Boty H Dan Fitte	kigat na	C Body	D Dronas Length Fittings	EvE Witnotting Ficts Fittings	
	SPECIFICATIONS:	Jone Hitinga	His Hitings	Dome Ethrop	inches (mm)	pape 29	-12 ¹ 00	-45	÷5.	Hody Fogr Fox Fittings	Longth Fittings	Fitte Fittings	
D	Pressure rating: 150 PSIG (10 BAR) NEMA 4x and 6	CD07AA-3L CD07AR BL	C 0/AA-BL CIO/AR 3L	CD07AA. E	.1126 (3 -8.5) .0820 (2 -5)	1/4, / al. 50.5	.49 (12)	.75 (19)	.91 (24)	2.16 (55)	.20 (5)	.85 (14)	
	(Submersible) IP68 Materials:	C DOYAA-3L CDOYAR BL	C OVAA-BL CLOPAR 3L	CD09AA- L	.16 - 31 (4 - 9) .03 - (24 (2 - V)	905	.50 (15)	.82 (21)	1, 13 (28)	2.80 (68)	21 ;6:	.67 (17)	
	Body & Nut: Nickel Plated Brass Splined Bushing: Nickel Plated Nylon (-FE)	CD09NA-3L CD09NR BL	C 09NA-B., CLO9NR 3L	CD09NA L	.1631 (* -9) .0821 (2 -0)	3-8: 101	.88 (17)	.82 (21)	1.11 (29)	2.80 (68)	.83 (* 8)	and 201 m(10) 27(-717 35(10)	
	Nylon (-BE) Form Seal & O-Ring: Buna-N	CD TAA-3L ODTTAR BL	C T AA-BL CI HAR SL	CD11AA-T	.2029 (5 -10) .1127 (3 -7)	PG • 1	.75 (18)	.87 (22)	1.14 (29)	3.03 (77)	.24 (6;	.75 (20)	
-	-40°F to 212°F (-40°C to 100°C)	CD13AA-5E CD13AR BL	CFIBAA-BE CLIBAR 3L	CD13AA-TE	.2447 (6 -12) .2035 (5 -5)	PG 18.5	(30 (23)	.91 (24)	1.22 (81)	3.16 (82)	.28 (8.8)	.87 (22)	
		CD 3NA-3L CD13N8 BL	CITENA-BL CITENR SL	CD13NA-T	.24 • .47 (6 • 12) .29 • .30 (5 • 8)	1-2 NPT	35 (21)	.91(2/)	1.23 (83)	3.16 (88)	.61 (* 3)	.ar (201) 94(66) .ar (201) 94(66)	
		CD 6AA-3L CD16AR BL	CTI6AA-BL CLI6AR 3L	CD16AA-TE	29 - 55 (10 - 4) 27 - 47 (7 -12)	PO 16	.78 (22)	.9" (23)	1.26 (82)	3.26 (92)	.28 (8.8)	.91 (21)	
		CO2TAA-3L CD2TAR BL	C-2 AA-BL CI 21AR 3L	CD2IAA L	.51 - 71 (13 -18) .2523 (9 -16)	PO 21	1.12 (28)	.91(2/)	1.60 (38)	4.27 (111)	.27 ;71	1 18 (50)	
С		CO2INA-3E CD2INR BE	CT2 NA-BL CF21NR 3E	CD2INA L	.51 - 71 (13 -18) .26 - 23 (9 -16)	341 NPT	1.06 (27)	.98 (25)	1.53 (29)	4.27 (111)	.61 (13)	1 18 (50)	С
		CO29AA-3L CD29AR BE		CD29AA L	21 - 38 (18-25) 51 - 79 (13-20)	155 29	1.47 (37)	1.14 (29)	1.69 (43)	2	37 (8)	1 57 (40)	
		C D36AA 3L CD36AR BE		CD36AA L	87 -1.26 (22 -82) 79 -1 32 (23 -26)	(55.36	1.85147)	1.38 (35)	1.89 (48)	-	31 181	1.97 (50)	
		CD42AA-3E CD42AR BL		CD/2AA L	1.26 -1.50 (32 -58) (36 -1.22 (25 -51)	PO 42	2.13 (51)	1/6 (37)	1.77 (15)		.35 (9)	2 24 (67)	
>		CD48AA-3E CD48AR BL		CD48AA L	1.46 -1.73 (37 -44) 1.14 -1.38 (29 -36)	°018	2.5/ (51)	1.50 (38)	1.81 (16)	-	.33 (* 0;	2.52;6/)	4
	Dome Fittings												
	E1/E TIREA	D											
в													в
								NOTES	i:				
								1) GEN	NERAL DIME	INSIONS DRA	WINGS.		
								2) DIM	ENSIONS []	ARE IN INC	HES.		
								3) DIM	ensions n	OTED ARE FO	OR REFEREN	CE ONLY.	
			Flex Fitt	ings	E-/E								
				-06									
		Duum	mmmm	mm H 🛾	TTTP-ATTT			Thin	d angle projectio				-
A				IIIII H I					$\bigcirc \in \neg$	E X	SEAL	.CON	
				()				_	(1)				
		-	(2	D -	_1		14 CE TE	853 HINDSDAL ENTENNIAL, C L: 11-303-699-	E AVE, SUITE E O 80112-4240, US 1135	A		
								E	DLL FREE: +1-8 MAIL: info@sc EBSTIE: www.s	00-456-9012 alconusa.com .	C	<u>nume</u>)
	4		3		Ŷ		2	1.4		and of the state of the	-		5 - J

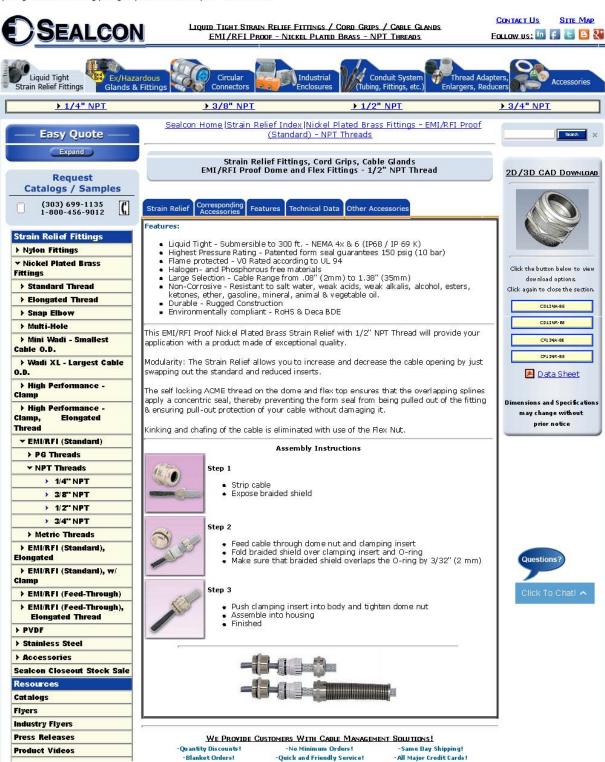

Liquid Tight Strain Relief Fittings, Elongated, Nickel Plated Brass, NPT Thread - Sealcon

http://www.sealconusa.com/strainrelief/nc_emi/nickel_1_2_npt_emi.html[12/18/2013 10:42:43 AM]

6 T 1

Liquid Tight Strain Relief Fittings, Elongated, Nickel Plated Brass, NPT Thread - Sealcon

Advertisements		
Product News		
Product Applications	exemplary customer service. Inventory in Excess of \$25 Million allows the	
Technical Info	provides cable products at competitive prices with	
Strain Relief Fittings, Conduit & Accessories	exemplary customer service. Inventory in Excess of \$25 Million allows the immediate shipment of almost all standard cable types and sizes.	
Circular Connectors	Cables, Wires & Accessories: Domestic & Imported	
Enclosures	Importer of HELUKABEL®. Approvals: RoHS, UL, CSA, Harmonized & CE. We offer cables for Power, Control,	
Products By Industry	High/Low Temp., Hi-Flex, Robotic, Track, Servo, VFD,	
Certificates / Approvals	Composite, Ribbon, Data(CAT), Single Conductor, etc!	
AQ	Plastic Enclosures: Indoor / Outdoor NEMA 4x	
lenefits & Features	Exclusive importer of HENSEL ENCLOSURES . Industrial	
Why Choose Sealcon	🚛 🚛 🎩 Strength, UV & Impact Resistant, Modular Expandable.	
x Hazardous Glands	Materials: Polycarbonate, Polystyrene, Powder-coated Steel	
XIOS Armored	Types: Gray or Transparent Lids, available with Hinges & Latches,	
XIOS Armored + Barrier	Opaque/ Transparent covers, Plain Walls or Knockouts, Hazardous	
lylon Cable Glands	Location, Fire Proof / Functional Integrity, Offshore Applications	
lickel Plated Brass	(Saltwater-proof) Accessories: DIN rails, Mounting plates, Terminal blocks, Hole plugs, etc.	
NOX Stainless Steel		
ircular Connectors	Custom Customize your own Control Solution Device with	
locessories	NEMA Enclosure Rating: 4, 4x (IP66). We offer 1, 2 and 3	
THE EXCLUSIVE IMPORTER OF	Button Solutions. Industrial Enclosures are made of Powder Coated Gray	
(BUILINE)	Die Cast Aluminum alloy. We do the assembly at one low price.	
1	Pneumatic Components: Fittings, Tubing, Yalves & Gauges Fittings: Nickel Plated Brass, Composite, Brass & Compression Fittings, the patented & longstanding Pro-	
	Fit® system, High Pressure Dual Seal fittings, etc.	
	Valves: Flow Control, Manual, Air Piloted, Solenoid, Brass We also offer Tubing, FRL Units (Filters, Regulators & Lubricators).	
	Gauges, Timers and Relays. Manufacturers include CAMOZZI, COUPLINGS COMPANY, PNEUMADYNE, INFITEC, etc.	
4 S. Eagle Street tennial, CO 80112-4221 USA	W95 2011-2	ጰ Top of Pag
Free: 800-456-9012 / 303-699-11	135 Fax: 303-680-5344	
	Copyright © 2012 Sealcon LLC All Rights Reserved	
Strain Relief Fittings Strain Pelie	f for Hazardous Areas (Circular Connectors (Enclosures (Conduit System (Adapter, Enlard	er Reducer Laccessorie

[Copyright Notice|Site Map|Search|Quote Request|

http://www.sealconusa.com/strainrelief/nc_emi/nickel_1_2_npt_emi.html[12/18/2013_10:42:43_AM]

Addendum B: Agency Approvals

cFMus Certificate

ATEX Certificate

IECEx Certificate

cFMus Canadian Certificate

CE Certificate