

smar

LD290

MAR / 15
LD290
VERSION 6

OPERATION AND MAINTENANCE
INSTRUCTION / MANUAL

PRESSURE TRANSMITTER





Specifications and information are subject to change without notice.
Up-to-date address information is available on our website.

web: www.smar.com/contactus.asp

INTRODUCTION

The **LD290** is a pressure transmitter for gauge and level measurement. It is based on a field-proven capacitive sensor that provides reliable operation and high performance.

A liquid crystal display can be added to provide additional operation and local indication. Its microprocessed electronic circuit permits a total interchangeability with Smar's capacitive sensors. It automatically corrects the sensors' characteristic changes caused by temperature variations.

The **LD290**, besides the normal functions offered by other transmitters, offers the following functions:

LOCAL ADJUSTMENT – Adjust through magnet tool the lower and upper value, input/output function, and indication.

Get the best results of the LD290 by carefully reading these instructions.
Smar's pressure transmitters are protected by U.S. patents 6,433,791 and 6,621,443.

NOTE

This manual is compatible with version 6.XX, where 6 note software version and XX software release. The indication 6.XX means that this manual is compatible with any release of software version 6.

Waiver of responsibility

The contents of this manual abides by the hardware and software used on the current equipment version. Eventually there may occur divergencies between this manual and the equipment. The information from this document are periodically reviewed and the necessary or identified corrections will be included in the following editions. Suggestions for their improvement are welcome.

Warning

For more objectivity and clarity, this manual does not contain all the detailed information on the product and, in addition, it does not cover every possible mounting, operation or maintenance cases.

Before installing and utilizing the equipment, check if the model of the acquired equipment complies with the technical requirements for the application. This checking is the user's responsibility.

If the user needs more information, or on the event of specific problems not specified or treated in this manual, the information should be sought from Smar. Furthermore, the user recognizes that the contents of this manual by no means modify past or present agreements, confirmation or judicial relationship, in whole or in part.

All of Smar's obligation result from the purchasing agreement signed between the parties, which includes the complete and sole valid warranty term. Contractual clauses related to the warranty are not limited nor extended by virtue of the technical information contained in this manual.

Only qualified personnel are allowed to participate in the activities of mounting, electrical connection, startup and maintenance of the equipment. Qualified personnel are understood to be the persons familiar with the mounting, electrical connection, startup and operation of the equipment or other similar apparatus that are technically fit for their work. Smar provides specific training to instruct and qualify such professionals. However, each country must comply with the local safety procedures, legal provisions and regulations for the mounting and operation of electrical installations, as well as with the laws and regulations on classified areas, such as intrinsic safety, explosion proof, increased safety and instrumented safety systems, among others.

The user is responsible for the incorrect or inadequate handling of equipments run with pneumatic or hydraulic pressure or, still, subject to corrosive, aggressive or combustible products, since their utilization may cause severe bodily harm and/or material damages.

The field equipment referred to in this manual, when acquired for classified or hazardous areas, has its certification void when having its parts replaced or interchanged without functional and approval tests by Smar or any of Smar authorized dealers, which are the competent companies for certifying that the equipment in its entirety meets the applicable standards and regulations. The same is true when converting the equipment of a communication protocol to another. In this case, it is necessary sending the equipment to Smar or any of its authorized dealer. Moreover, the certificates are different and the user is responsible for their correct use.

Always respect the instructions provided in the Manual. Smar is not responsible for any losses and/or damages resulting from the inadequate use of its equipments. It is the user's responsibility to know and apply the safety practices in his country.

TABLE OF CONTENTS

SECTION 1 - INSTALLATION	1.1
GENERAL.....	1.1
MOUNTING	1.1
ELECTRONIC HOUSING.....	1.8
WIRING	1.8
INSTALLATION IN HAZARDOUS AREAS	1.11
EXPLOSION/FLAME PROOF	1.11
INTRINSICALLY SAFE	1.11
SECTION 2 - OPERATION	2.1
FUNCTIONAL DESCRIPTION - SENSOR	2.1
FUNCTIONAL DESCRIPTION - HARDWARE.....	2.2
THE DISPLAY	2.4
SECTION 3 - PROGRAMMING USING LOCAL ADJUSTMENT	3.1
THE MAGNETIC TOOL.....	3.1
COMPLETE LOCAL ADJUSTMENT.....	3.2
SIMPLE LOCAL ADJUSTMENT	3.2
ZERO AND SPAN RERANGING	3.2
COMPLETE LOCAL ADJUSTMENT.....	3.3
LOCAL PROGRAMMING TREE	3.3
CONFIGURATION [CONF]	3.3
CONFIGURATION BRANCH (CONF)	3.4
RANGE (RANGE).....	3.5
RANGE BRANCH (RANGE)	3.5
FUNCTION (FUNCT)	3.7
PRESSURE TRIM [TRIM]	3.8
ESCAPE LOCAL ADJUSTMENT [ESC]	3.9
SECTION 4 - MAINTENANCE PROCEDURES	4.1
GENERAL.....	4.1
DIAGNOSTIC BY DISPLAY	4.1
DISASSEMBLY PROCEDURE	4.2
SENSOR.....	4.2
ELECTRONIC CIRCUIT.....	4.3
REASSEMBLY PROCEDURE	4.3
SENSOR.....	4.3
ELECTRONIC CIRCUIT.....	4.3
INTERCHANGEABILITY	4.4
RETURNING MATERIALS.....	4.4
ORDERING CODE FOR HOUSING	4.7
ORDERING CODE FOR SENSOR.....	4.7
SECTION 5 - TECHNICAL CHARACTERISTICS	5.1
ORDERING CODE.....	5.5
APPENDIX A - CERTIFICATIONS INFORMATIONS	A.1
EUROPEAN DIRECTIVE INFORMATION.....	1.1
OTHER APROVALS.....	1.1
FMEDA REPORT	1.1
HAZARDOUS LOCATIONS GENERAL INFORMATION	1.1
HAZARDOUS LOCATIONS CERTIFICATIONS.....	1.2
NORTH AMERICAN CERTIFICATIONS.....	1.2
EUROPEAN CERTIFICATIONS	1.3
SOUTH AMERICAN CERTIFICATIONS	1.4
ASIAN CERTIFICATIONS.....	1.4
IDENTIFICATION PLATE AND CONTROL DRAWING.....	1.5

IDENTIFICATION PLATE 1.5

CONTROL DRAWING 1.10

APPENDIX B – SRF – SERVICE REQUEST FORM.....B.1

INSTALLATION

General

NOTE
The installation carried out in hazardous areas should follow the recommendations of the IEC60079-14 standard.

The overall accuracy of a flow, level, or pressure measurement depends on several variables. Although the transmitter has an outstanding performance, proper installation is essential to maximize its performance.

Among all factors, which may affect transmitter accuracy, environmental conditions are the most difficult to control. There are, however, ways of reducing the effects of temperature, humidity and vibration.

The **LD290** has a built-in temperature sensor to compensate for temperature variations. At the factory, each transmitter is submitted to a temperature cycle, and the characteristics under different temperatures are recorded in the transmitter memory. At the field, this feature minimizes the temperature variation effect.

Locating the transmitter in areas protected from extreme environmental changes can minimize temperature fluctuation effects.

In warm environments, the transmitter should be installed to avoid, as much as possible, direct exposure to the sun. Installation close to lines and vessels subjected to high temperatures should also be avoided. Use longer sections of impulse piping between tap and transmitter whenever the process fluid is at high temperatures. Use of sunshades or heat shields to protect the transmitter from external heat sources should be considered, if necessary.

Humidity is fatal to electronic circuits. In areas subjected to high relative humidity, the O-rings for the electronic housing covers must be correctly placed and the covers must be completely closed by tighten them by hand until you feel the O-rings being compressed. Do not use tools to close the covers. Removal of the electronics cover in the field should be reduced to the minimum necessary, since each time it is removed; the circuits are exposed to the humidity.

The electronic circuit is protected by a humidity proof coating, but frequent exposures to humidity may affect the protection provided. It is also important to keep the covers tightened in place. Every time they are removed, the threads are exposed to corrosion, since painting cannot protect these parts. Code-approved sealing methods should be employed on conduit entering the transmitter. The unused outlet connection should be plugged accordingly.

Although the transmitter is virtually insensitive to vibration, installation close to pumps, turbines or other vibrating equipment should be avoided.

Proper winterization (freeze protection) should be employed to prevent freezing within the measuring chamber, since this will result in an inoperative transmitter and could even damage the cell.

NOTE
When installing or storing the level transmitter, the diaphragm must be protected avoid scratching-denting or perforation of its surface.

Mounting

The transmitter has been designed to be both rugged and lightweight at the same time. This make its mounting easier mounting positions are shown in Figure 1.1.

Should the process fluid contain solids in suspension, install valves or rod-out fittings at regular intervals to clean out the pipes.

The pipes should be internally cleaned by using steam or compressed air, or by draining the line with the process fluid, before such lines are connected to the transmitter (blow-down).

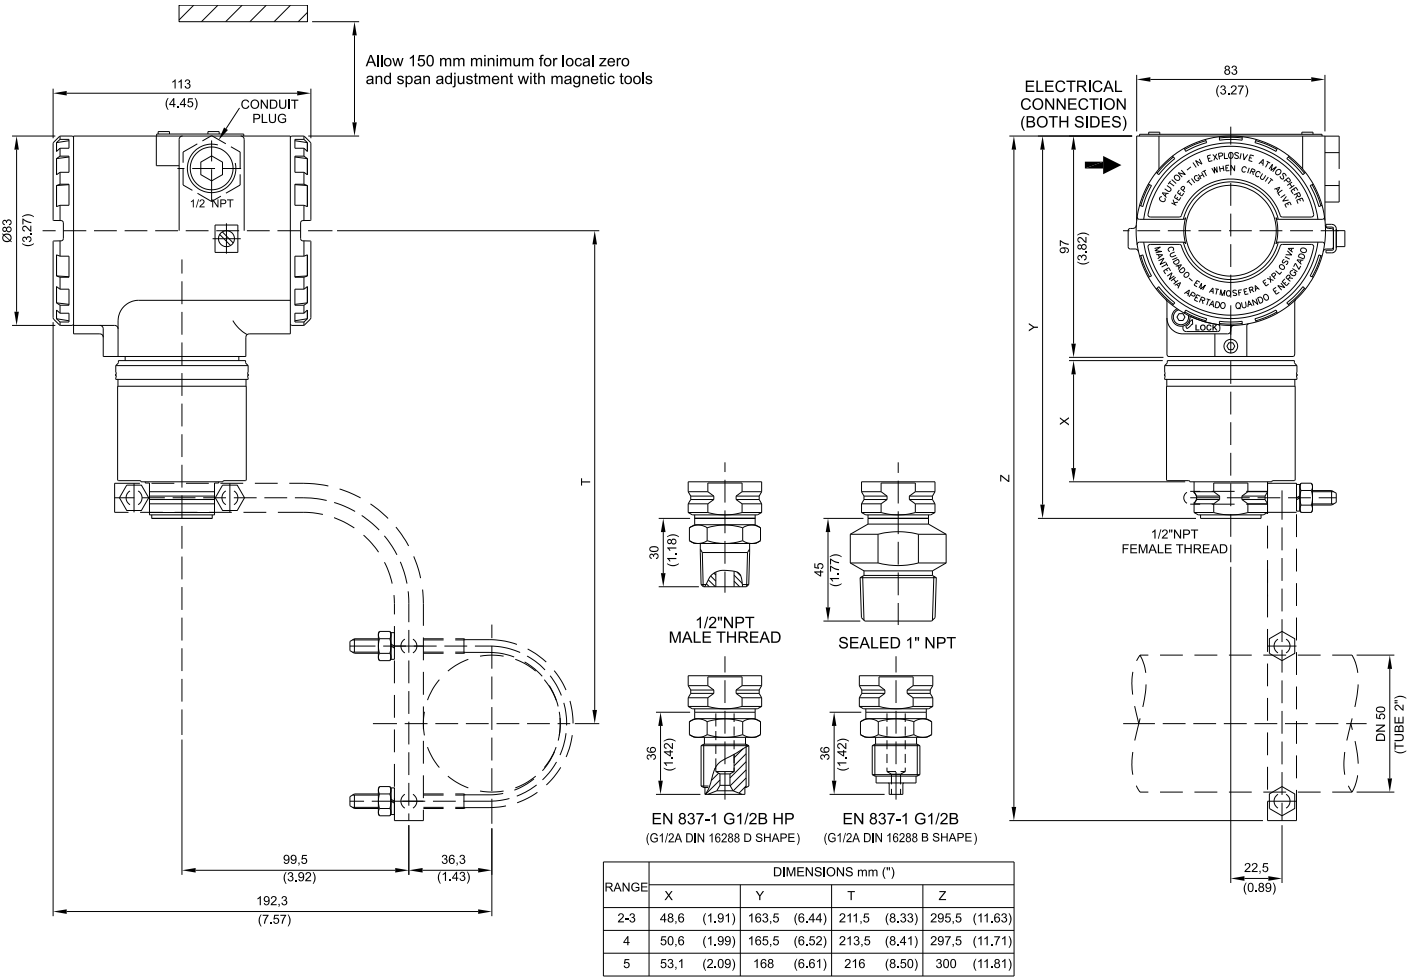


Figure 1.1 (a) – Dimensional Drawing and Mounting Position for LD290


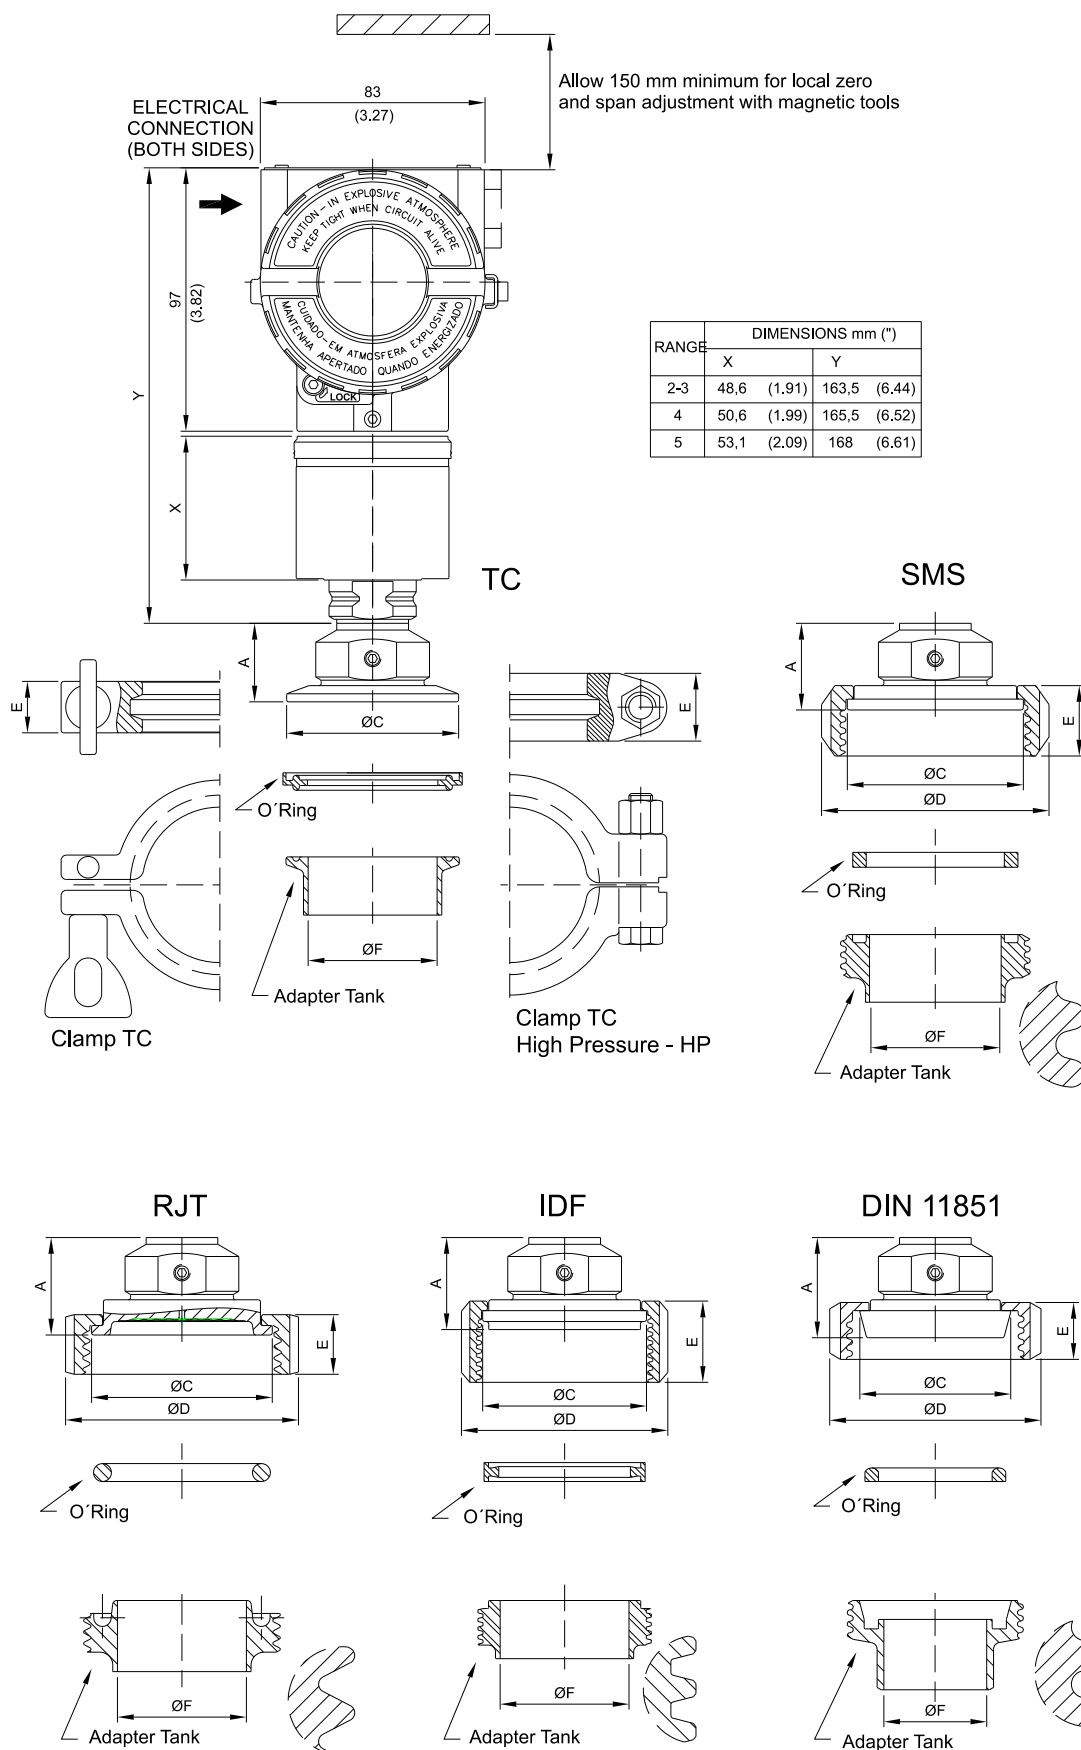


Figure 1.1 (b) – Dimensional Drawing and Mounting Position for LD290 - Sanitary

LD290S - CONNECTIONS					
CONNECTION	Dimensions in mm (inche)				
	A	ØC	ØD	E	ØF
Tri-Clamp - 1 1/2" - without extension	27 (1.06)	50 (1.96)	61 (2.40)	18 (0.71)	35 (1.38)
Tri-Clamp - 1 1/2" HP - without extension	27 (1.06)	50 (1.96)	66 (2.59)	25 (0.98)	35 (1.38)
Tri-Clamp - 2" - without extension	29 (1.14)	63,5 (2.50)	76,5 (3.01)	18 (0.71)	47,6 (1.87)
Tri-Clamp - 2" HP - without extension	29 (1.14)	63,5 (2.50)	81 (3.19)	25 (0.98)	47,6 (1.87)
Threaded DN40 - DIN 11851 - without extension	37 (1.46)	56 (2.20)	78 (3.07)	21 (0.83)	38 (1.50)
Threaded DN50 - DIN 11851 - without extension	38 (1.50)	68,5 (2.70)	92 (3.62)	22 (0.86)	50 (1.96)
Threaded SMS - 1 1/2" - without extension	31 (1.22)	55 (2.16)	74 (2.91)	25 (0.98)	35 (1.38)
Threaded SMS - 2" - without extension	32 (1.26)	65 (2.56)	84 (3.30)	26 (1.02)	48,6 (1.91)
Threaded RJT - 2" - without extension	35 (1.38)	66,7 (2.63)	86 (3.38)	22 (0.86)	47,6 (1.87)
Threaded IDF - 2" - without extension	34 (1.34)	60.5 (2.38)	76 (2.99)	30 (1.18)	47,6 (1.87)

Figure 1.1 (c) – Dimensional Drawing and Mounting Position for LD290 – Sanitary

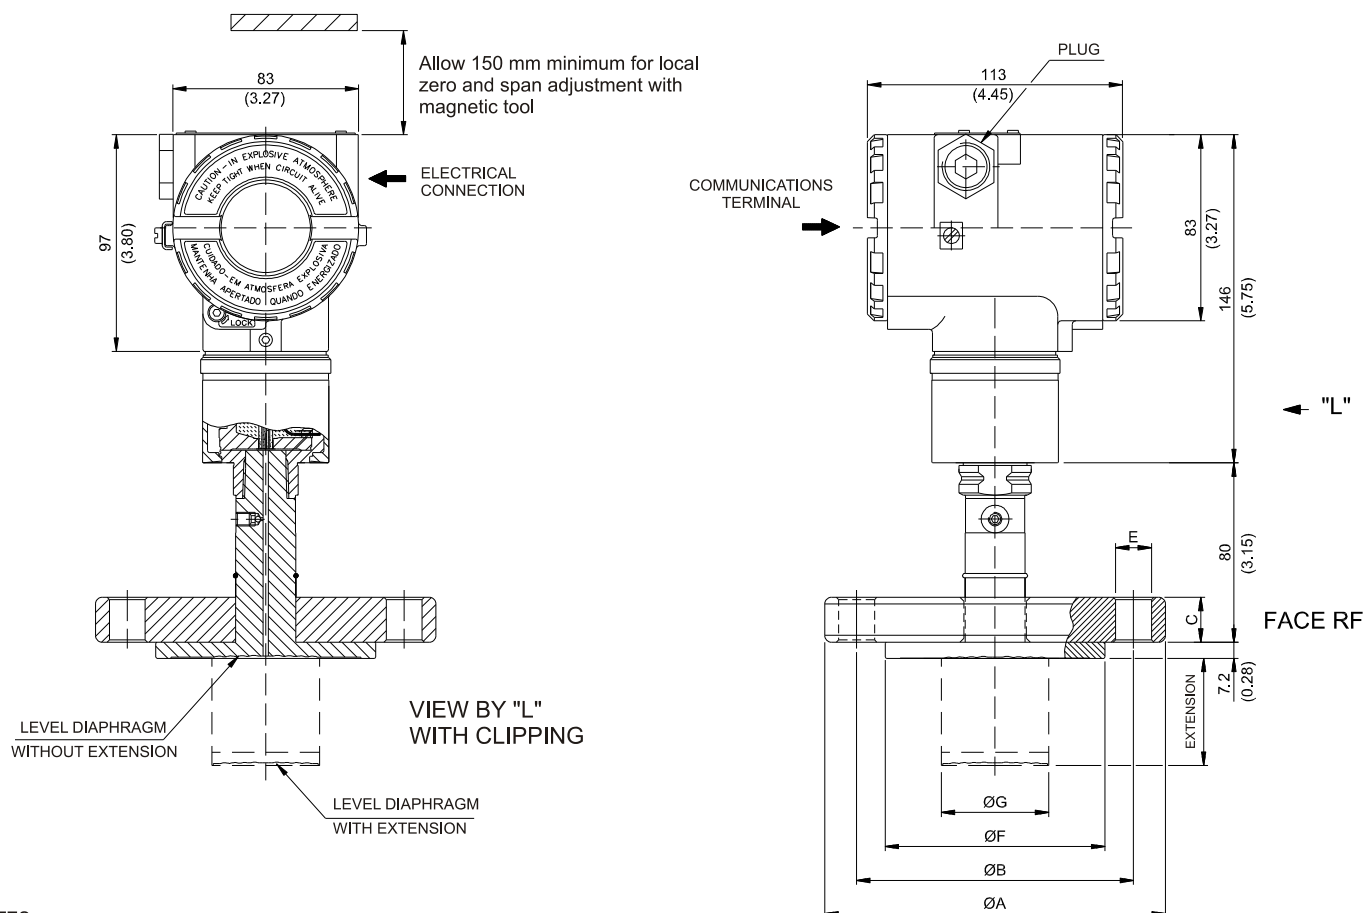

NOTES:
 -EXTENSION LENGTH mm (in): 0, 50 (1.96), 100 (3.93), 150 (5.9) OR 200 (7.87)
 -DIMENSIONS ARE mm (in)

ANSI-B 16.5 DIMENSIONS								
DN	CLASS	A	B	C	E	F (RF) (FF)	G	HOLES
1"	150	108 (4.25)	79.4 (3.16)	14.3 (0.56)	16 (0.63)	50.8 (2)	-	4
	300/600	124 (4.88)	88.9 (3.5)	17.5 (0.69)	19 (0.75)	50.8 (2)	-	4
1.1/2"	150	127 (5)	98.6 (3.88)	20 (0.78)	16 (0.63)	73.2 (2.88)	40 (1.57)	4
	300	155.4 (6.12)	114.3 (4.5)	21 (0.83)	22 (0.87)	73.2 (2.88)	40 (1.57)	4
	600	155.4 (6.12)	114.3 (4.5)	29.3 (1.15)	22 (0.87)	73.2 (2.88)	40 (1.57)	4
2"	150	152.4 (6)	120.7 (4.75)	17.5 (0.69)	19 (0.75)	92 (3.62)	48 (1.89)	4
	300	165.1 (6.5)	127 (5)	20.7 (0.8)	19 (0.75)	92 (3.62)	48 (1.89)	8
	600	165.1 (6.5)	127 (5)	25.4 (1)	19 (0.75)	92 (3.62)	48 (1.89)	8
3"	150	190.5 (7.5)	152.4 (6)	22.3 (0.87)	19 (0.75)	127 (5)	73 (2.87)	4
	300	209.5 (8.25)	168.1 (6.62)	27 (1.06)	22 (0.87)	127 (5)	73 (2.87)	8
	600	209.5 (8.25)	168.1 (6.62)	31.8 (1.25)	22 (0.87)	127 (5)	73 (2.87)	8
4"	150	228.6 (9)	190.5 (7.5)	22.3 (0.87)	19 (0.75)	158 (6.22)	89 (3.5)	8
	300	254 (10)	200 (7.87)	30.2 (1.18)	22 (0.87)	158 (6.22)	89 (3.5)	8
	600	273 (10.75)	215.9 (8.5)	38.1 (1.5)	25 (1)	158 (6.22)	89 (3.5)	8

EN 1092-1 / DIN2501 DIMENSIONS								
DN	PN	A	B	C	E	F	G	HOLES
25	10/40	115 (4.53)	85 (3.35)	18 (0.71)	14 (0.55)	68 (2.68)	-	4
40	10/40	150 (5.9)	110 (4.33)	20 (0.78)	18 (0.71)	88 (3.46)	40 (1.57)	4
50	10/40	165 (6.50)	125 (4.92)	20 (0.78)	18 (0.71)	102 (4.01)	48 (1.89)	4
80	10/40	200 (7.87)	160 (6.30)	24 (0.95)	18 (0.71)	138 (5.43)	73 (2.87)	8
100	10/16	220 (8.67)	180 (7.08)	20 (0.78)	18 (0.71)	158 (6.22)	89 (3.5)	8
	25/40	235 (9.25)	190 (7.50)	24 (0.95)	22 (0.87)	162 (6.38)	89 (3.5)	8

Figure 1.1 (d) – Dimensional Drawing and Mounting Position for LD290 – Level

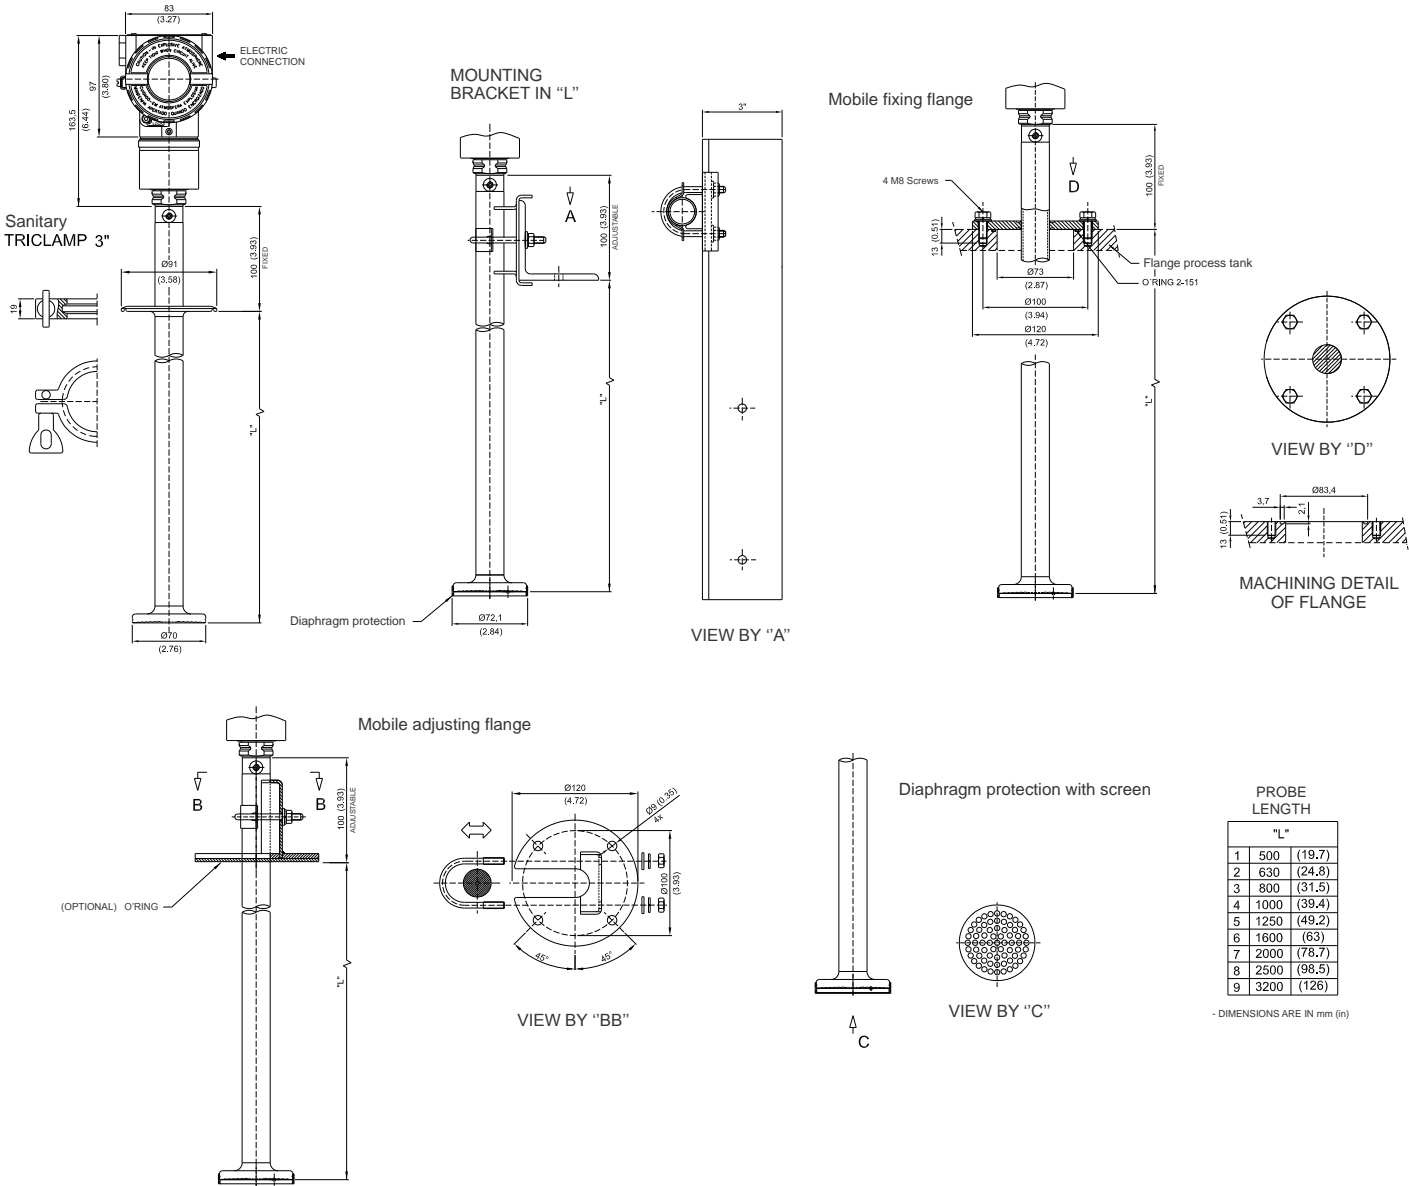


Figure 1.1 (e) – Dimensional Drawing and Mounting Position for LD290 – Level (Insertion)

Observe operating safety rules during wiring, draining or blow-down.

Some examples of installation, illustrating the position of the transmitter in relation to the taps, are shown in Figure 1.3.

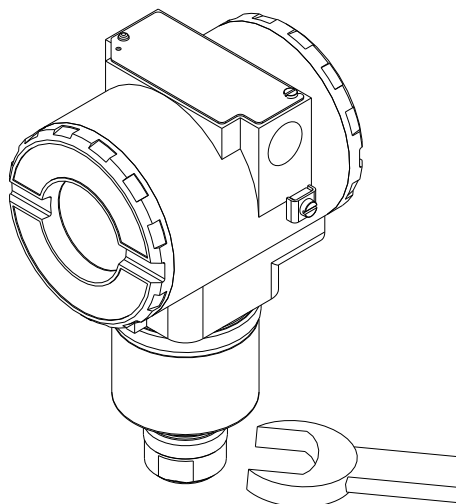


Figure 1.2 – Fixing of the Transmitter in the Tap

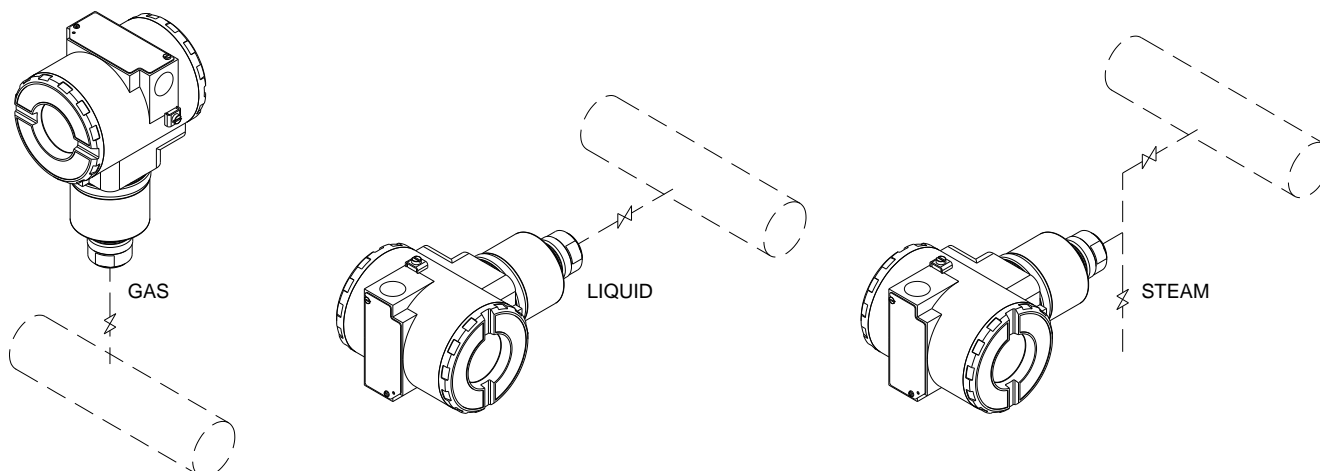


Figure 1.3 – Position of the Transmitter and Taps

The location of pressure taps and the relative position of the transmitter are indicated in Table 1.1.

Process Fluid	Location of Taps	LOCATION OF LD290 IN RELATION TO THE TAPS
Gas	Top or Side	Above the Taps
Liquid	Side	Below the Taps or at the Piping Centerline
Steam	Side	Below the Taps using Sealing (Condensate) Pots

Table 1.1 - Location of Pressure Taps

NOTE

Except for dry gases, all impulse lines should slope at the ratio 1:10, in order to avoid trapping bubbles in the case of liquids, or condensate for steam or wet gases.

Electronic Housing

The electronic housing can be rotated in order to better position the digital display. To rotate it use the Housing Rotation Set Screw, see Figure 1.4.

The digital display itself can also be rotated. See Section 4, Figure 4.3.

Wiring

Reach the wiring block by removing the Electrical Connection Cover. This cover can be locked closed by the cover locking screw (Figure 1.4). To release the cover, rotate the locking screw clockwise.

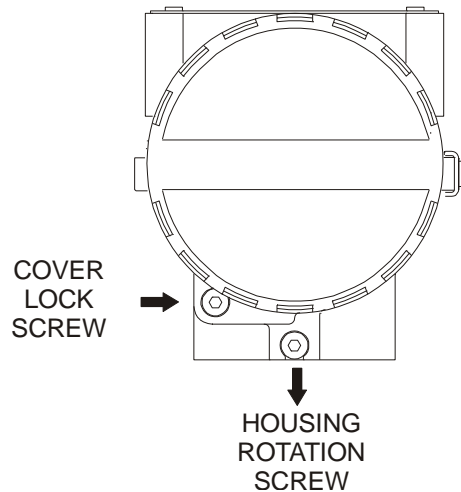


Figure 1.4 – Housing Rotating Set Screw

The wiring block has screws on which fork or ring-type terminals can be fastened. See Figure 1.5.

Test terminals allow measuring the current in the 4 - 20 mA loop, without opening it. To measure it, connect a multimeter in the mA scale in the "–" and "+" terminals.

The wiring block has screws on which fork or ring-type terminals can be fastened. See Figure 1.6.

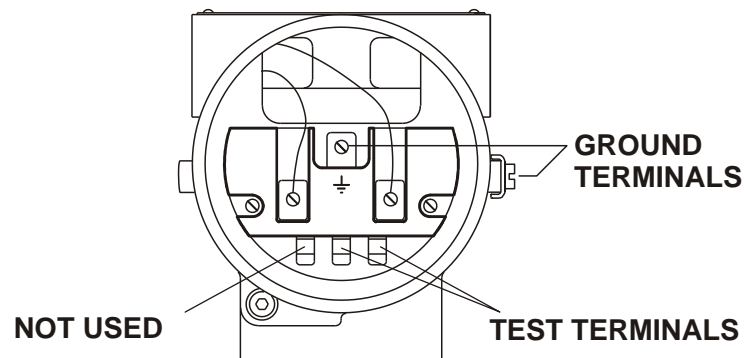


Figure 1.5 – Wiring Block

For convenience there are two ground terminals: one inside the cover and one external, located close to the conduit entries.

Use of twisted pair (22 AWG or greater than) cables is recommended.

Avoid routing signal wiring close to power cables or switching equipment.

The unused outlet connection should be plugged and sealed accordingly. The **LD290** is protected against reverse polarity. However, it will not work in this situation.

The Figure 1.6 shows the correct installation of the conduit, in order to avoid penetration of water, or other substance, which may cause malfunctioning of the equipment.

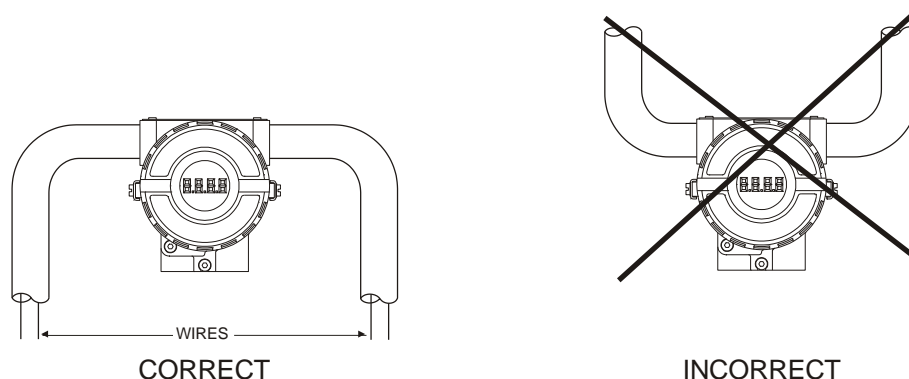


Figure 1.6 - Conduit Installation Diagram

NOTE

The transmitters are calibrated in the vertical position and a different mounting position displaces the zero point. Consequently, the indicator will indicate a different value from the applied pressure. In these conditions, it is recommended to do the zero pressure trim. The zero trim is to compensate the final assembly position and its performance, when the transmitter is in its final position. When the zero trim is executed, make sure the equalization valve is open and the wet leg levels are correct.

In the factory, the transmitter is ranged in the vertical position, and in this position the capacitive sensor is in the horizontal position. If it is mounted in the field in another position, it should be ranged again to avoid readout error. See Figure 1.8.

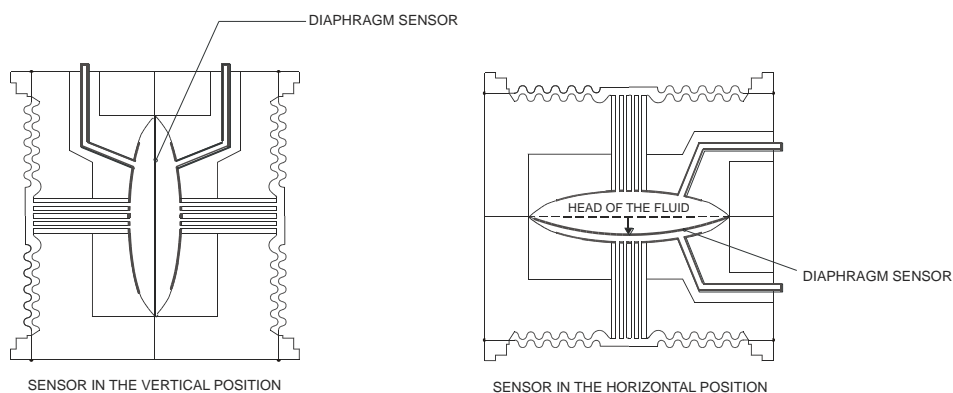


Figure 1.7 - Sensor Positions

It is also recommended to ground the shield of shielded cables at only one end. The ungrounded end must be carefully isolated.

Connection of the **LD290** should be done as in Figure 1.8.

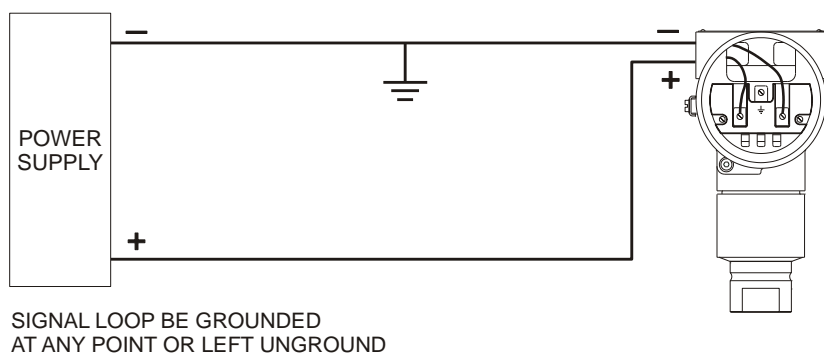


Figure 1.8 - Wiring Diagram for the LD290

NOTE

Make sure that the transmitter is operating within the operating area as shown on the load curve (Figure 1.10).

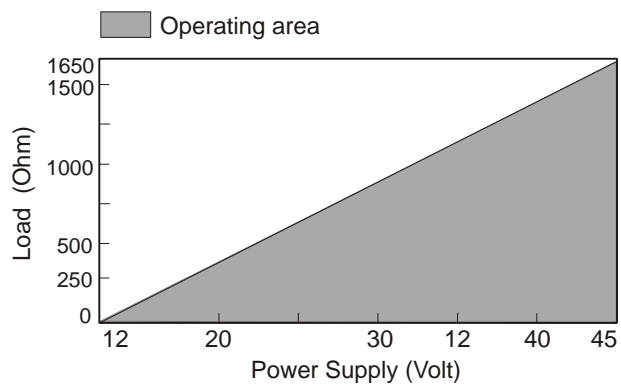


Figure 1.9 - Load Curve

Installation in Hazardous Areas

WARNING

Explosions could result in death or serious injury, besides financial damage. Installation of this transmitter in explosive areas must be carried out in accordance with the local standards and the protection type adopted. Before continuing the installation make sure the certificate parameters are in accordance with the classified area where the equipment will be installed.

The instrument modification or parts replacement supplied by other than authorized representative of Smar is prohibited and will void the certification.

The transmitters are marked with options of the protection type. The certification is valid only when the protection type is indicated by the user. Once a particular type of protection is selected, any other type of protection can not be used.

The electronic housing and the sensor installed in hazardous areas must have a minimum of 6 fully engaged threads. Lock the housing using the locking screw (Figure 1.4).

The cover must be tightened with at least 8 turns to avoid the penetration of humidity or corrosive gases. The cover must be tightened until it touches the housing. Then, tighten more 1/3 turn (120°) to guarantee the sealing. Lock the covers using the locking screw (Figure 1.4).

Consult the Appendix A for further information about certification.

Explosion/Flame Proof

WARNING

Only use Explosion Proof/Flameproof certified Plugs, Adapters and Cable glands.

In Explosion-Proof installations the cable entries must be connected or closed using metal cable gland and metal blanking plug, both with at least IP66 and Ex-d certification.

The standard plugs provided by Smar are certified according to CEPEL certificate. If the plug needs to be replaced, a certified plug must be used.

The electrical connection with NPT thread must use waterproofing sealant. A non-hardening silicone sealant is recommended.

For NEMKO ATEX certificate please to follow the installation guidelines in hazardous locations below: Group II Category 2G, Ex d, Group IIC, Temperature Class T6, EPL Gb U = 28VDC
Ambient Temperature: -20 to 60°C for T6
Environmental Protection: IP66/687 or IP66W/687W
The electrical connection available are ½ - 14NPT and M20x1,5.

Cable entries must be connected or closed using metal cable gland and metal blanking plug, both with at least IP66 and Ex-d certification or any appropriate ATEX approved metal cable gland and metal blanking plug. Do not remove the transmitter covers when power is ON.

Intrinsically Safe

WARNING

In hazardous zones with intrinsically safe or non-incendive requirements, the circuit entity parameters and applicable installation procedures must be observed.

To protect the application the transmitter **must be connected to a barrier**. Match the parameters between barrier and the equipment (Consider the cable parameters). Associated apparatus ground bus shall be insulated from panels and mounting enclosures. Shield is optional. If used, be sure to insulate the end not grounded. Cable capacitance and inductance plus C_i and L_i must be smaller than C_o and L_o of the associated Apparatus.

It is not recommended to remove the transmitter cover when the power is ON.

OPERATION

Functional Description - Sensor

The **LD290** Series Pressure Transmitters use capacitive sensors (capacitive cells) as pressure sensing elements, as shown in Figure 2.1.

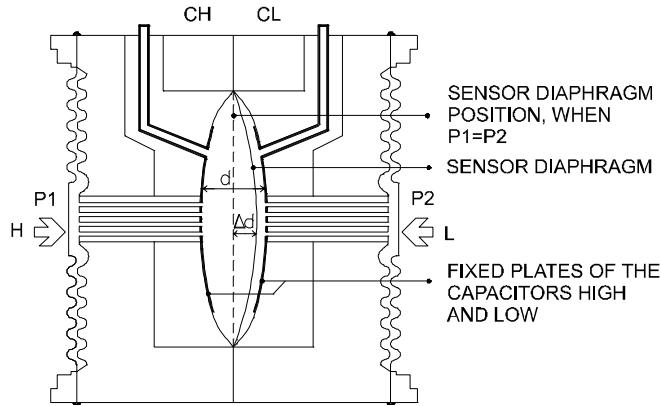


Figure 2.1 – Capacitive Cell

Where,

P_1 and P_2 are the pressures in chambers H and L

CH = capacitance between the fixed plate on P_1 side and the sensing diaphragm.

CL = capacitance between the fixed plate on the P_2 side and the sensing diaphragm.

d = distance between CH and CL fixed plates.

Δd = sensing diaphragm's deflection due to the differential pressure $\Delta P = P_1 - P_2$.

Knowing that the capacitance of a capacitor with flat, parallel plates may be expressed as a function of plate area (A) and distance (d) between the plates as:

$$C = \frac{\epsilon A}{d}$$

Where,

ϵ = dielectric constant of the medium between the capacitor's plates.

Should CH and CL be considered as capacitances of flat and parallel plates with identical areas, then:

$$CH = \frac{\epsilon \cdot A}{(d/2) + \Delta d} \quad \text{and} \quad CL = \frac{\epsilon \cdot A}{(d/2) - \Delta d}$$

However, should the differential pressure (ΔP) applied to the capacitive cell not deflect the sensing diaphragm beyond $d/4$; it is possible to assume ΔP as proportional to Δd .

By developing the expression $(CL - CH) / (CL + CH)$, it follows that:

$$\Delta P = \frac{CL - CH}{CL + CH} = \frac{2\Delta d}{d}$$

as the distance (d) between the fixed plates CH and CL is constant, it is possible to conclude that the expression $(CL - CH) / (CL + CH)$ is proportional to Δd and, therefore, to the differential pressure to be measured.

Thus it is possible to conclude that the capacitive cell is a pressure sensor formed by two capacitors whose capacitances vary according to the applied differential pressure.

Functional Description - Hardware

Refer to the block diagram Figure 2.2. The function of each block is described below.

Oscillator

This oscillator generates a frequency as a function of sensor capacitance.

Signal Isolator

The Control signals from the CPU are transferred through optical couplers, and the signal from the oscillator is transferred through a transformer.

(CPU) Central Processing Unit and PROM

The CPU is the portion of the transmitter, being responsible for the management and operation of all other blocks..

The program is stored in an external PROM. For temporary storage of data the CPU has an internal RAM. The data in the RAM is lost, if the power is switched off, however the CPU also has an internal nonvolatile EEPROM where data that must be retained is stored. Examples of such data are: calibration, configuration and identification data.

EEPROM

Another EEPROM is located within the sensor assembly. It contains data pertaining to the sensor's characteristics at different pressures and temperatures. This characterization is done for each sensor at the factory.

D/A Converter

Converts the digital data from the CPU to an analog signal with 15-bits resolution.

Output

Controls the current in the line feeding the transmitters.

It acts as a variable resistive load whose value depends on the voltage from the D/A converter.

Power Supply

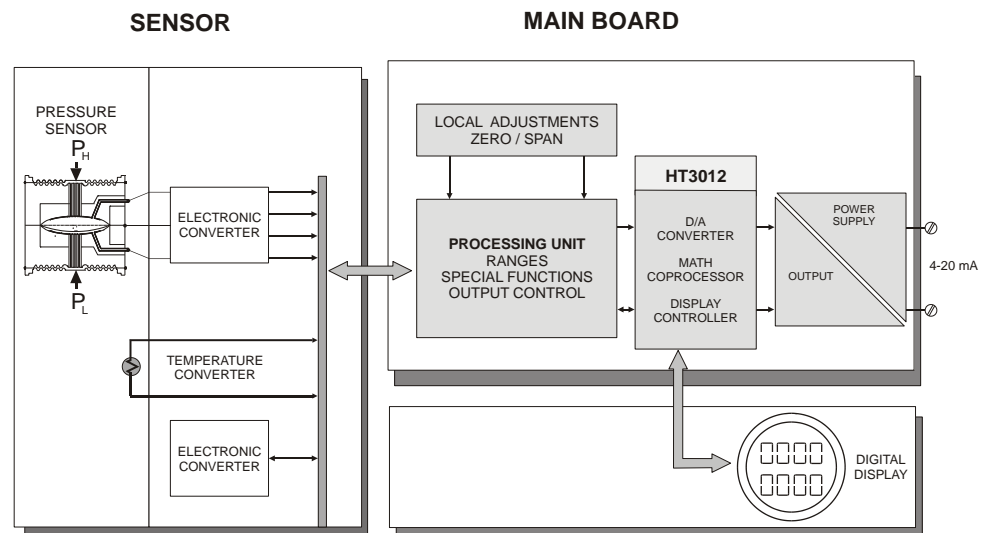


Figure 2.2 – LD290 Block Diagram Hardware

Power shall be supplied to the transmitter circuit using the signal line (2-wire system). The transmitter quiescent consumption is 3.6 mA; during operation, consumption may be as high as 21 mA, depending on the measurement and sensor status.

Power Supply Isolation

The sensor power supply is isolated from the main circuit by this module.

Display Controller

It receives the data from the CPU and activates the LCD segments. Also it activates the back plane and the control signals for each segment.

Local Adjustment

Two switches that are magnetically activated. The magnetic tool without mechanical or electrical contact can activate them.

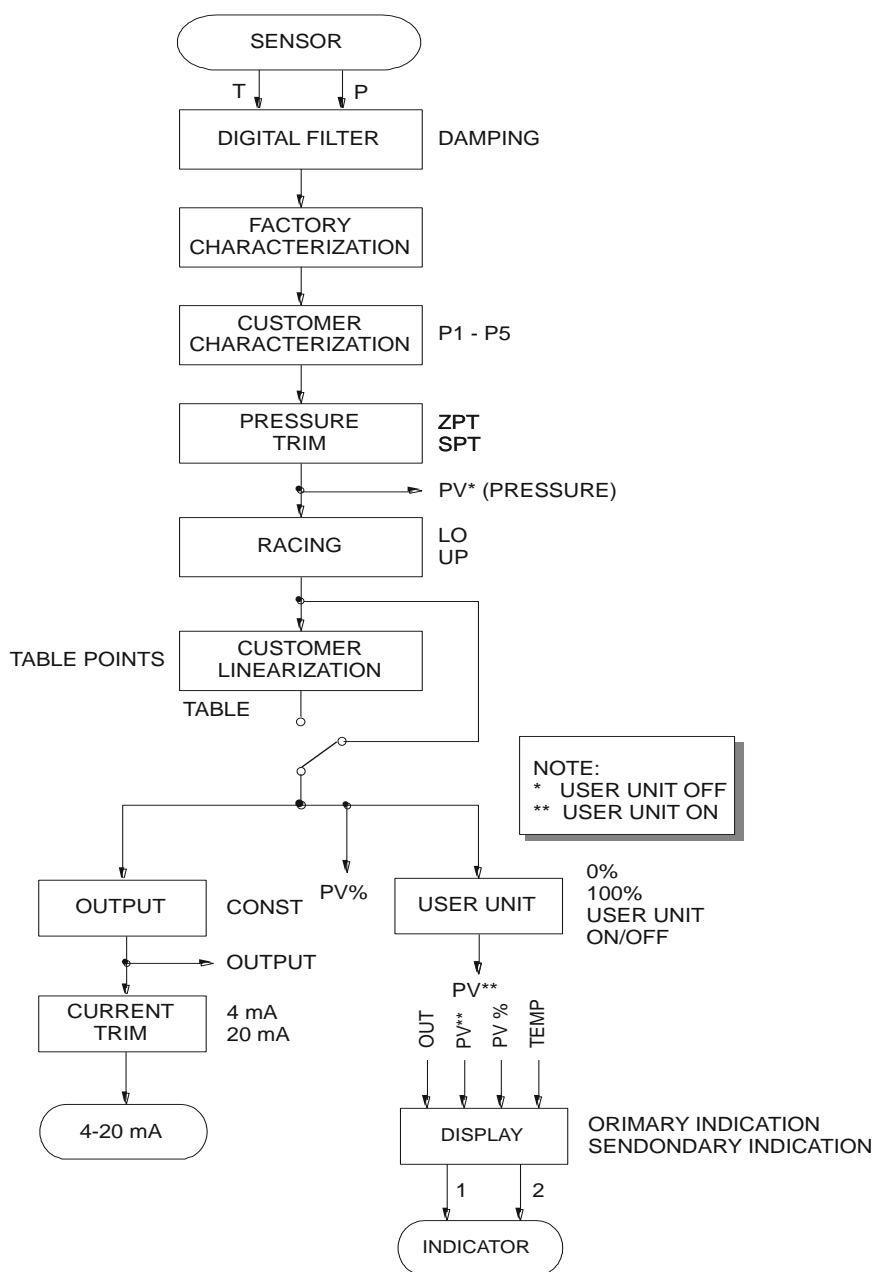


Figure 2.3 – LD290 – Software Block Diagram

Output

Calculates the current proportional to the process variable or manipulated variable to be transmitted on the 4-20 mA output depending on the configuration in OP-MODE. This block also contains the constant current function configured in OUTPUT. The output is physically limited to 3.6 to 21 mA.

Current Trim

The 4 mA TRIM and 20 mA TRIM adjustment is used to make the transmitter current comply with a current standard, should a deviation arise.

User Unit

Converts 0 and 100% of the process variable to a desired engineering unit read out available for the display. It is used, e.g., to get a volume or flow indication from a level or differential pressure measurement, respectively. A unit for the variable can also be selected.

Display

Can alternate between two indications as configured in DISPLAY.

The Display

The integral indicator is able to display one or two variables, which are user selectable. When two variables are chosen, the display will alternate between the two with an interval of 3 seconds.

The liquid crystal display includes a field with 4 ½ numeric digits, a field with 5 alphanumeric digits and an information field, as shown on Figure 2.4.

DISPLAY V6.00

The display controller, from release V6.00 on, is integral to the main board. Please observe the new spare parts codes.

Monitoring

During normal operation, the LD290 is in the monitoring mode. In this mode, indication alternates between the primary and secondary variable as configured by the user. See Figure. 2.5. The display indicates engineering units, values and parameters simultaneously with most status indicators.

The monitoring mode is interrupted when the user does complete local adjustment.

The display is also capable of displaying an error and other messages (See table 2.1).

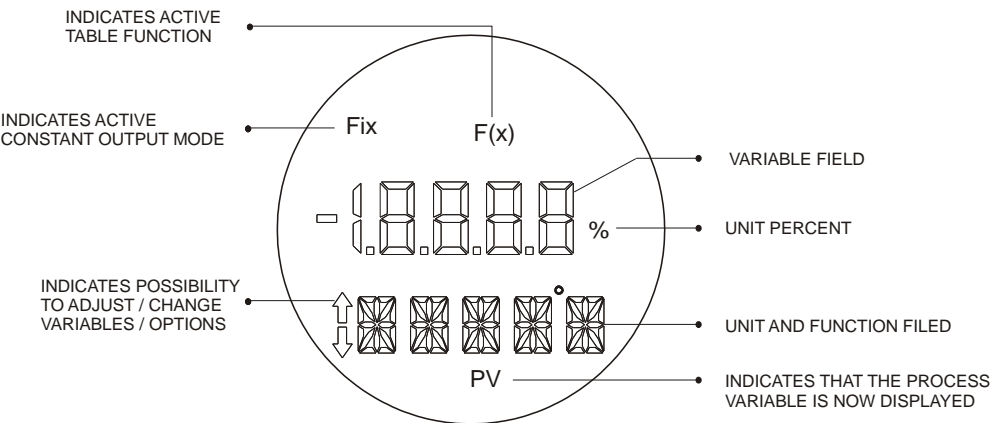


Figure 2.4 - Display

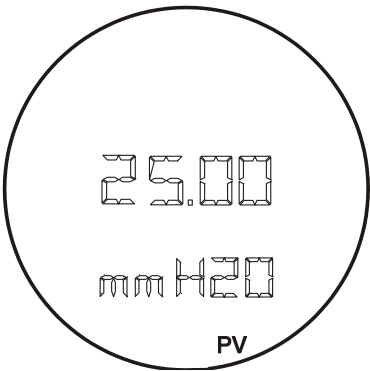


Figure 2.5 – Typical Monitoring Mode Display Showing PV, in this case 25.00 mmH₂O

DISPLAY	DESCRIPTION
INIT	The LD290 is in initializing after power on.
FAIL SENS	Sensor failure. Refer to Section 4 - Maintenance.
SAT	Current output saturated in 3.8 or 20.5 mA. Refer to Section 4 - Maintenance.

Table 2.1 - Display Messages

PROGRAMMING USING LOCAL ADJUSTMENT

The Magnetic Tool

If the transmitter is fitted with a display, and configured for Complete Local Adjustment (using the internal jumper), the magnetic tool become a powerful configuration tool.

If the transmitter is not fitted with a display, or is configured for Simple Local Adjustment (using the internal jumper) the adjustment capability is reduced to reranging.

To select the function mode of the magnetic switches configures the jumpers located at the top of the main circuit board as indicated in Table 3.1.

SI/COM	OFF/ON	NOTE	WRITE PROTECT	SIMPLE LOCAL ADJUSTMENT	COMPLETE LOCAL ADJUSTMENT
• • ◻	• • ◻		Disables	Disables	Disables
◻ • •	• • ◻	1	Enables	Disables	Disables
• • ◻	◻ • •	2	Disables	Enables	Disables
◻ • •	◻ • •		Disables	Disables	Enables

Table 3.1 – Local adjustment Selection

Notes: 1 - If the hardware protection is selected, the EEPROM will be protected.
2 - The local adjustment default condition is simple enabled and write protect disabled.

The transmitter has, under the identification plate, holes for two magnetic switches activated by the magnetic tool (See Figure 3.1).



Figure 3.1 – Local Zero and Span Adjustment and Local Adjustment Switches

The holes are marked with **Z** (Zero) and **S** (Span) and from now on will be designated simply by **(Z)** and **(S)**, respectively. Table 3.2 shows the action performed by the magnetic tool while inserted in **(Z)** and **(S)** in accordance with the selected adjustment type.

Browsing the functions and their branches works as follows:

Inserting the handle of the magnetic tool in **(Z)**, the transmitter passes from the normal measurement state to the transmitter configuration state. The transmitter software automatically starts to display the available functions in a cyclic routine.

1. Inserting the handle of the magnetic tool in **(Z)**, the transmitter passes from the normal measurement state to the transmitter configuration state. The transmitter software automatically starts to display the available functions in a cyclic routine.
2. In order to reach the desired option, browse the options, wait until they are displayed and move the magnetic tool from **(Z)** to **(S)**. Refer to Figure 3.2, in order to know the position of the desired option. By placing the magnetic tool once again in **(Z)**, it is possible to browse for other options within this new branch.
3. The procedure to reach the desired option is similar to the one described on the previous item, for the whole hierarchical level of the programming tree.

Ação	Simple Local Adjustment	Complete Local Adjustment
Z	Selects the Lower Range Value	Moves among all the options
S	Selects the Upper Range Value	Activates the selected Functions

Table 3.2 - Local Adjustment Description

NOTE
For LD290 versions prior to a V6.00 , the digital display shall be number 214-0108 as per spare parts list for LD290 V5.xx.
For LD290 versions V6.xx, the digital display shall be number 400-0559, as per the updated spare parts list

Simple Local Adjustment

The **LD290** allows, only, the calibration of the values inferior and superior in this configuration.

Zero and Span Reranging

The **LD290** can be very easily calibrated. It requires only Zero and Span adjustment in accordance with the working range.

The jumpers shall be configured for simple local adjustment. In case the **LD290** display is not connected, the simple local adjustment is automatically activated.

Zero calibration with reference shall be done as follows:

- ✓ Apply the Lower Value pressure.
- ✓ Wait for the pressure to stabilize.
- ✓ Insert the magnetic tool in the ZERO adjustment hole. (See Figure 3.1)
- ✓ Wait 2 seconds. The transmitter should be reading 4 mA.
- ✓ Remove the tool.

Zero calibration with reference does not affect the span. In order to change the span, the following procedure shall be observed:

- ✓ Apply the Upper Value pressure.
- ✓ Wait for the pressure to stabilize.
- ✓ Insert the magnetic tool in the SPAN adjustment hole.
- ✓ Wait 2 seconds. The transmitter should be reading 20 mA.
- ✓ Remove the tool.


Zero adjustment causes zero elevation / suppression and a new upper value (URV) is calculated in accordance with the effective span. In case the resulting URV is higher than the Upper Limit Value (URL), the URV will be limited to the URL value, and the span will be automatically affected.

Complete Local Adjustment

The transmitter must be fitted with the digital display for this function to be enabled. The following functions are available for local adjustment: Engineering Unit, Lower and Upper Range Value, Zero and Span Adjust with Reference, Damping, Pressure Trim,

Local Programming Tree

The local adjustment uses a tree structure where, by placing the magnetic tool in (Z) it is possible to browse the options of a branch and, by placing it in (S), details of the chosen option are shown. Figure 3.2 shows the **LD290** available options.

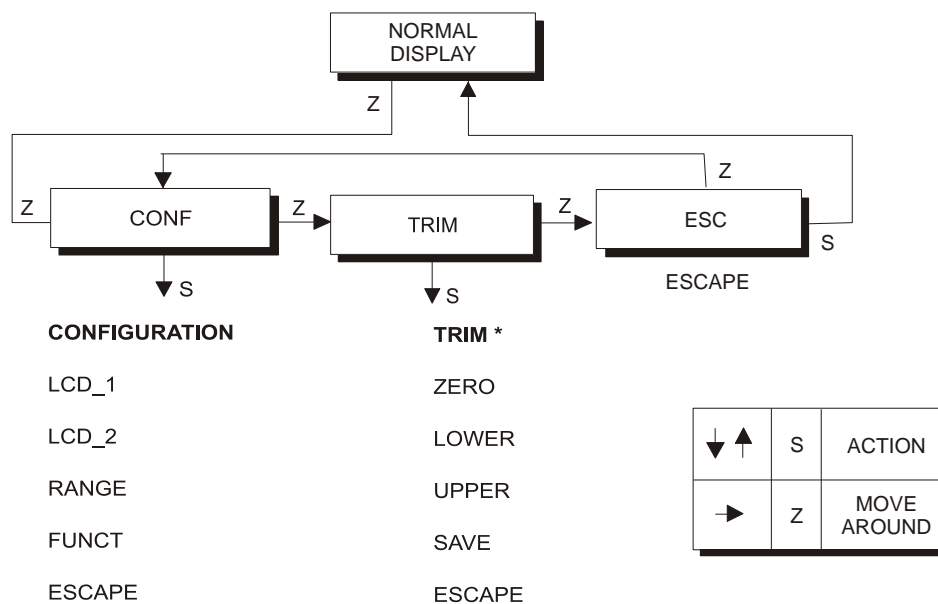

* PROTECTED BY A PASSWORD

THE PASSWORD CONSIST IN INSERT SCREWDRIVER HANDLE 2 TIMES IN THE "S" ORIFICE.

Figure 3.2 – Local Adjustment Programming Tree – Main Menu

NOTE

The following functions are **NOT** available for local adjustment: Constant Current, Table Points Adjustment, User Units, Fail-safe, and Current Trim.

CONFIGURATION (CONF) - Is the option where the output and display related parameters are configured: unit, primary and secondary display, calibration, function, and operation mode.

TRIM (TRIM) - Is the option used to calibrate the "without reference" characterization and the digital reading.

ESCAPE (ESC) - Is the option used to go back to normal monitoring mode.

The local adjustment is activated by actuation in (Z).

Configuration [CONF]

Configuration functions affect directly the 4-20 mA output current and the display indication. The configuration options implemented in this branch are the following:

- ✓ Selection of the variable to be shown on Display 1 and on Display 2.
- ✓ Working range calibration of work. Options With and Without Reference are available.
- ✓ Digital filter damping time configuration of the readout signal input.
- ✓ Selection of the transference function to be applied to the measured variable.

Figure 3.3 shows branch CONF with the available options.


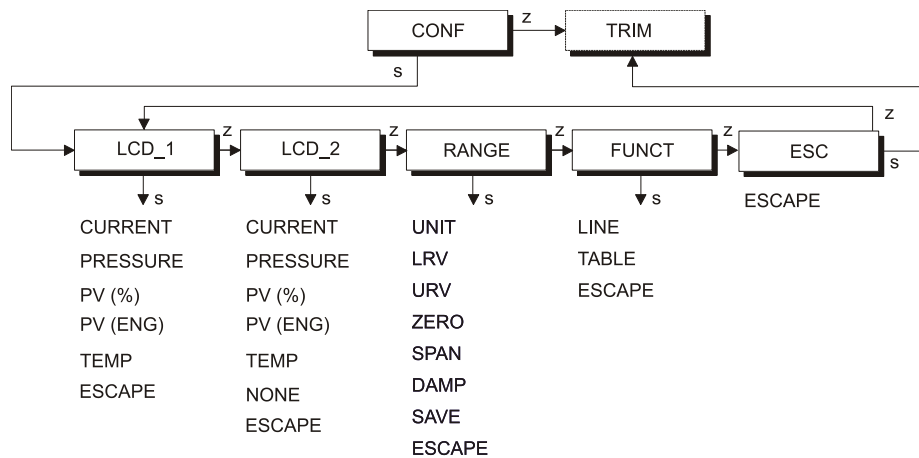


Figure 3.3 – Local Adjustment Configuration Tree


* NOTE
Among the units shown by LD290 only the units from Table 3.3 are valid.

Configuration Branch (CONF)

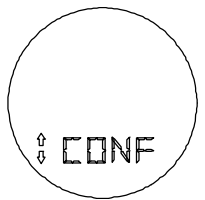


Display 1 (LCD_1)

- Z:** Moves to the TRIM branch.
- S:** Enters the CONFIGURATION branch, starting with function display (LCD_1).

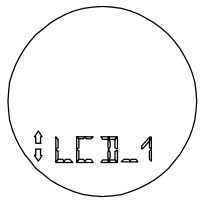

Display 2 (LCD_2)

- Z:** Moves to the function Display 2 (LCD_2).
- S:** Starts selection of variable to be indicated as primary display. After activating (**S**), you can move around the options available in the following table by activating (**Z**). See table 3.3.
The desired variable is activated using (**S**). Escape leaves primary variable unchanged.

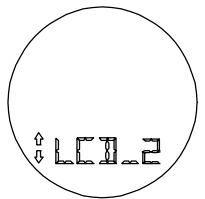

- Z:** Moves to the RANGE function.
- S:** Starts selection of variable to be indicated as secondary display. The procedure for selection is the same as for LCD_1, above.

CURRENT	CURRENT IN MILIAMPÈRES
CO	Analog Output Current in mA
PR	Pressre in pressure unit.
PV%	Process Variable in percentage.
PV	Process Variable in engineering units.
TE	Ambient temperature.
	NONE - No variable on display (only LCD_2)
ESC	Escape.

Table 3.3 - Display Indication

Range (RANGE)

Function Calibration (RANGE) presents the calibration options as a tree branch, as described on Figure 3.4.


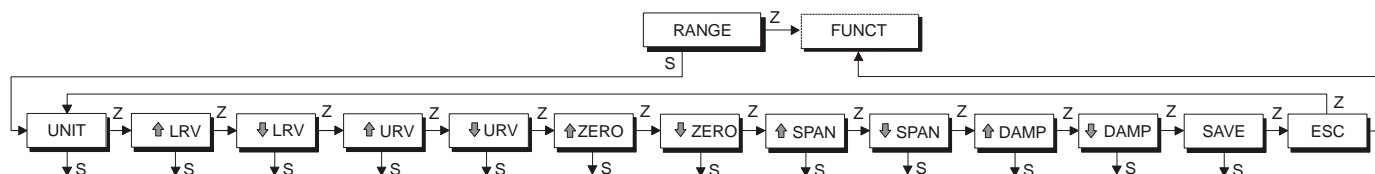


Figure 3.4 – Local Range Tree


Range Branch (RANGE)

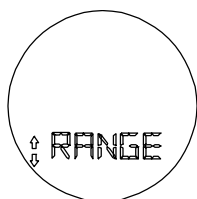

Z: Moves to the FUNCT function.

S: Enters the RANGE branch, starting with the function UNIT.

Unit (UNIT)

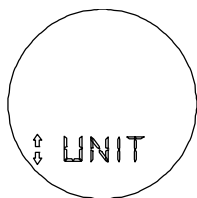

Z: Moves to the LRV function.


S: Starts selection of engineering unit for process variable and setpoint indication. After activating (**S**), you can move around the options available in the table below by activating (**Z**). Using (**S**) activates the desired unit. Escape leaves the unit unchanged.

UNIT	
DISPLAY	DESCRIPTION
InH ₂ O	Inches water column at 20°C
InHg	Inches mercury column at 0°C
ftH ₂ O	Feet water column at 20°C
mmH ₂ O	millimeter water column at 20°C
mmHg	millimeter mercury column at 0°C
psi	pounds per square centimeter
Bar	Bar
Mbar	Millibar
g/cm ²	grams per square centimeter
k/cm ²	Kilograms per square centimeter
Pa	Pascals
kPa	Kilo Pascals
Torr *	Torr at 0°C
atm	Atmospheres
ESC	-escape-

Table 3.4 – Units


The Torr unit has been changed to mH₂O@20°C for version 6.04 or greater.

Lower Range Value Adjustment without Reference (LRV)

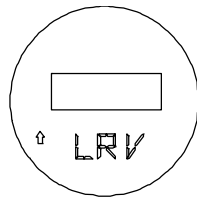

Z: Moves to the LRV DECREASE function.


S: Increases the Lower Value until the magnetic tool is removed or the maximum for the Lower Value is reached.

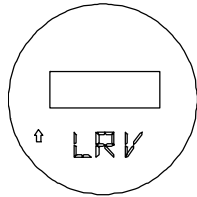

Z: Moves to the URV ADJUSTMENT function.


S: Decreases the Lower Value until the magnetic tool is removed or the minimum for the Lower Value is reached.

Upper Range Value Adjust without Reference {URV}

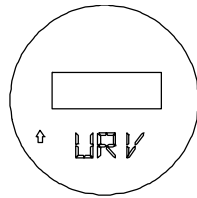

Z: Moves to the URV DECREASE function.


S: Increases the Upper Value until the magnetic tool is removed or the maximum for the Upper Value is reached.

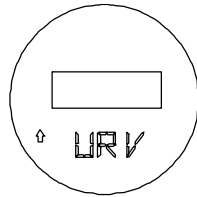

Z: Moves to the ZERO ADJUSTMENT function.


S: Decreases the Upper Value until the magnetic tool is removed or the minimum for the Upper Value is reached.

Zero Adjust with Reference {ZERO}

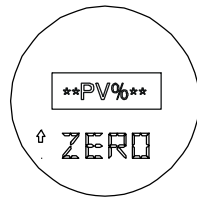

Z: Moves to the ZERO DECREASE function.


S: Increases output in transmitter mode, decreases the Lower Pressure Value until the magnetic tool is removed or the minimum for the Lower Value is reached. The span is maintained.

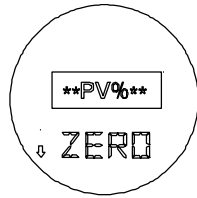

Z: Moves to the SPAN ADJUSTMENT function.


S: Decreases Output in transmitter mode, increases the Lower Pressure Value until the magnetic tool is removed or the maximum for the Lower Value is reached. The span is maintained.

Span Adjust with Reference (SPAN)

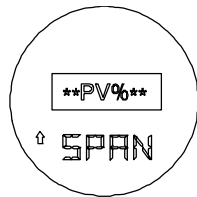

Z: Moves to the SPAN DECREASE function.


S: Increases the Output in transmitter mode, decreases the Upper Pressure Value until the magnetic tool is removed or the minimum for the Upper Value is reached.

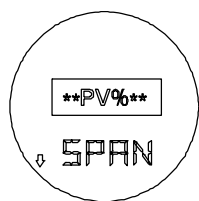

Z: Moves to the DAMPING function.


S: Decreases the Output in transmitter mode, increases the Upper Pressure Value until the magnetic tool is removed or the maximum for the Upper Value is reached.

Damping (DAMP)

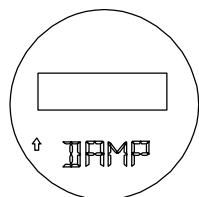

Z: Moves to the DAMPING DECREASE function.


S: Increases the damping time constant until the magnetic tool is removed or 32 seconds are reached.

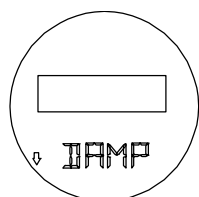

Z: Moves to the SAVE function.

S: Decreases the damping time constant until the magnetic tool is removed or 0 seconds is reached.


Save (SAVE)

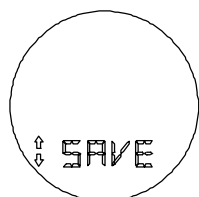

Z: Moves to the ESCAPE of RANGE menu.

S: Saves the LRV, URV, ZERO, SPAN and DAMP values in the transmitter EEPROM.


Escape (ESC)

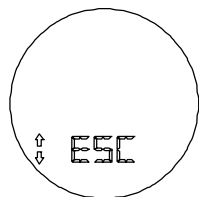

Z: Moves to the UNIT function.

S: Escapes to the ESC function, of the RANGE branch.

Function (FUNCT)

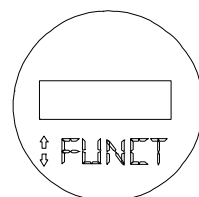

Z: Moves to the ESCAPE function.

S: Starts selection of input function. After activating (**S**) you can move around the available options in the table below by activating (**Z**).

FUNCTIONS	
DISPLAY	DESCRIPTION
LINE	Linear to Pressure
TABLE	16 Point Table
ESC	-escape-

Table 3.5 - Functions

The desired function is activated using (S). Escape leaves function unchanged.

Pressure Trim [TRIM]

This field of the tree is used to adjust the digital reading according to the applied pressure. The pressure TRIM differs from RANGING WITH REFERENCE, since the TRIM is used to correct the measure and RANGING WITH REFERENCE reach only the applied pressure with the output signal of 4 to 20 mA.


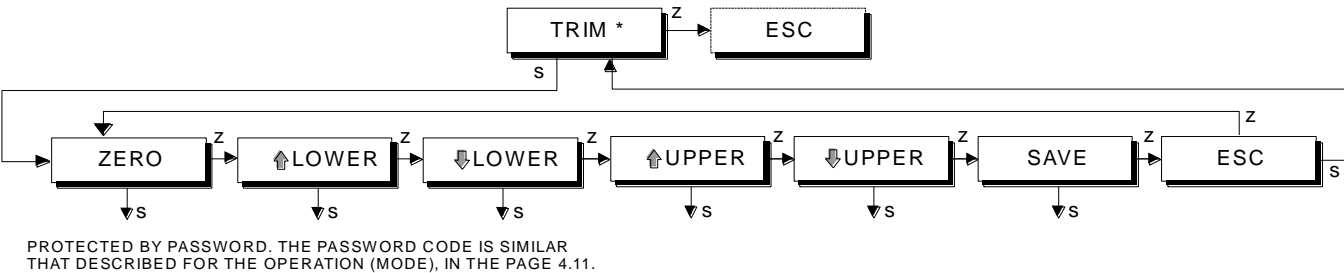


Figure 3.5 shows the options available to run the pressure TRIM.

Figure 3.5 – Pressure Trim Tree


Trim Branch (TRIM)

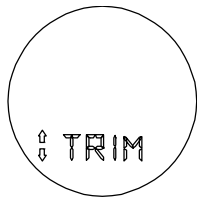

- Z: Moves to ESC function.
- S: These functions are protected by a "password." When prompted PSWD activates (S) 2 times to proceed. After entering the password, the TRIM branch starting with the Zero Trim function is accessed.


Zero Pressure Trim (ZERO)

NOTE
Check on section 1, the note on the influence of the mounting position on the indicator. For better accuracy, the trim adjustment should be made in the in the lower and upper values of the operation range values.

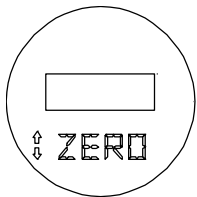


- Z: Moves to the LOWER pressure TRIM function.
- S: Trims the transmitters' internal reference to read 0 at the applied pressure.

Lower Pressure Trim (Lower)

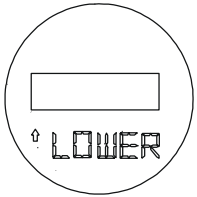


- Z: Moves to option DECREASES THE LOWER PRESSURE VALUE.
- S: Adjusts the transmitter's internal reference, increasing the displayed value that will be interpreted as the Lower Pressure value corresponding to the applied pressure.

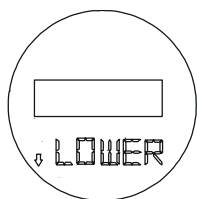

Z: Moves on to function SAVE if the Lower Pressure Trim (LOWER) is running or to the Upper Pressure Trim (UPPER).


S: Adjusts the transmitter's internal reference, decreasing the displayed value that will be interpreted as the Lower Pressure value corresponding to the applied pressure.

Upper Pressure Trim (UPPER)

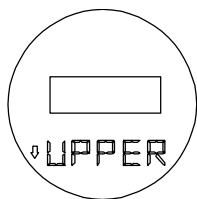

Z: Moves to the decrease upper pressure reading.


S: Sets the transmitters' internal reference increasing to the value on the display, which is the reading of the applied pressure.

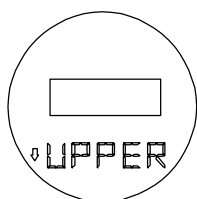

Z: Moves to the SAVE function.

S: Sets the transmitters' internal reference decreasing to the value on display, which is the reading of the applied pressure.


Save (SAVE)

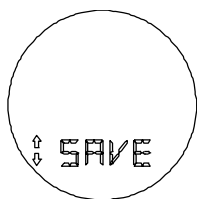

Z: Moves to the ESCAPE from TRIM menu.

S: Saves the LOWER and UPPER TRIM point in the transmitter EEPROM and actualize the internal parameters pressure measurement.

Escape (ESC)

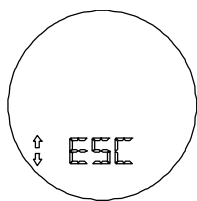


Z: Moves to the ZERO TRIM function.

S: Escapes to the MAIN menu.

Escape Local Adjustment [ESC]

This branch of the main tree is used to leave the Local Adjustment mode, placing the Transmitter in the monitoring mode.

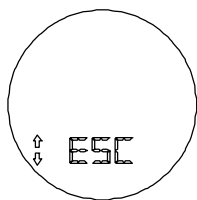

Z: Selects the OPERATION branch.

S: Escapes to NORMAL DISPLAY mode, adjusting the **LD290** in monitoring mode.

MAINTENANCE PROCEDURES

General

NOTE
Equipments installed in hazardous atmospheres must be inspected in compliance with the IEC60079-17 standard.

SMAR **LD290** pressure transmitters are extensively tested and inspected before delivery to the end user. Nevertheless, its design includes additional information for diagnosis purposes, in order to provide an easier fault detection capability and, as a consequence, an easier maintenance.

In general, it is recommended that end users do not try to repair printed circuit boards. Spare circuit boards may be ordered from SMAR whenever necessary.

The sensor has been designed to operate for many years without malfunctions. Should the process application require periodic cleaning of the transmitter, the flanges may be easily removed and reinstalled.

Should the sensor eventually require maintenance, it may not be changed in the field. In this case, the possibly damaged sensor should be returned to SMAR for evaluation and, if necessary, repair. Refer to the item "Returning Materials" at the end of this Section.

Diagnostic by Display

Symptom: NO LINE CURRENT

Probable Source of Trouble:

- ✓ **Transmitter Connections**
 - Check wiring polarity and continuity.
 - Check for shorts or ground loops.
 - Check if the power supply connector is connected to main board.
- ✓ **Power Supply**
 - Check power supply output. The voltage must be between 12 and 45 Vdc at transmitter terminals.
- ✓ **Electronic Circuit Failure**
 - Check the main board for defect by using a spare one.

Symptom: CURRENT OF 21.0 mA or 3.6 mA

Probable Source of Trouble:

- ✓ **Pressure Tap (Piping)**
 - Verify if blocking valves are fully open.
 - Check for gas in liquid lines or for liquid in dry lines.
 - Check the pressure connection.
 - Check if pressure applied is not over upper limit of transmitter's range.
Sensor to Main Circuit Connection
- ✓ **Electronic Circuit Failure**
 - Check the sensor circuit for damage by replacing it with a spare one.
 - Replace sensor.

Symptom: INCORRECT OUTPUT

Probable Source of Trouble:

- ✓ **Transmitter Connections**
 - Check power supply voltage.
 - Check for intermittent short circuits, open circuits and grounding problems.

- ✓ **Noise Measurement Fluid**
 - Adjust damping
- ✓ **Pressure Tap**
 - Check for gas in liquid lines and for liquid in steam or gases lines.
 - Check the integrity of the circuit by replacing it with a spare one.
- ✓ **Calibration**
 - Check calibration of the transmitter.

NOTE

A 3.6 or 21.0 mA current indicates that the transmitter is in BURNOUT, and 3.8 or 20.5 mA Indicates that it is SATURATED.

Symptom: DISPLAY INDICATES "FAIL SENS"

Probable Error Source:

- ✓ **Sensor Connection to the Main Board**
Check the connection (flat cable, male and female connectors).
- ✓ **Type of Sensor Connected to the Main Board**
Check if the sensor connected to the main board is the one specified for the **LD290** model: Sensor type shall be hyper - High Performance.
- ✓ **Electronic Circuit Failure**
Check if the sensor set is damaged, replacing it for a spare one.

Disassembly Procedure

WARNING

Do not disassemble with power on.

Figure 4.3 shows transmitter's exploded view and will help you to visualize the following.

Sensor

In order to have access to the sensor (**18**) for cleaning purposes, the transmitter should be removed from its process connections.

Loosen the hex screw (**8**) and carefully unscrew the electronic housing from the sensor, observing that the flat cable is not excessively twisted.

CAUTION

To avoid damage do not rotate the electronic housing more than 270° starting from the fully threaded without disconnecting the electronic circuit from the sensor and from the power supply. See Figure 4.1.

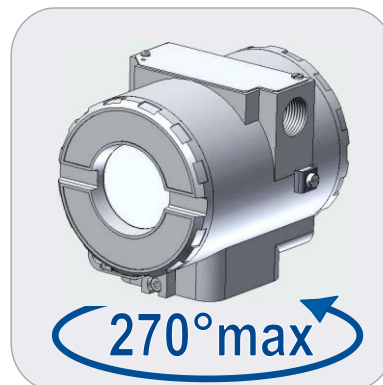


Figure 4.1 – Safety Housing Rotation

Electronic Circuit

To remove the circuit board (6), loosen the two screws (5) that anchor the board and hold the (7) spacers in the other side to avoid losing them.

WARNING

The board has CMOS components, which may be damaged by electrostatic discharges. Observe correct procedures for handling CMOS components. It is also recommended to store the circuit boards in electrostatic-proof cases.

Pull the main board out of the housing and disconnect the power supply and the sensor connectors.

Reassembly Procedure

WARNING

Do not assemble with power on.

Sensor

When mounting the sensor (18), it is recommended to make use of a new set of gaskets (17) compatible with the process fluid.

O-rings should be lightly lubricated with silicone oil before they are fitted into their recesses. Use halogen grease for inert fill applications.

The fitting of the sensor must be done with the main board out of the electronic housing. Mount the sensor to the housing turning it clockwise until it stops. Tighten the screw (8) to lock the body to the sensor.

Electronic Circuit

Plug sensor connector and power supply connector to main board. If there is a display, attach it to the main board by means of 4 screws (3). The display can be installed in any of the 4 possible positions (See Figure 4.2).

The "▲" mark indicates up position.

Pass the screws (5) through the main board holes (6) and the spacers (7) as shown on Figure 4.3 and tighten them to the body.

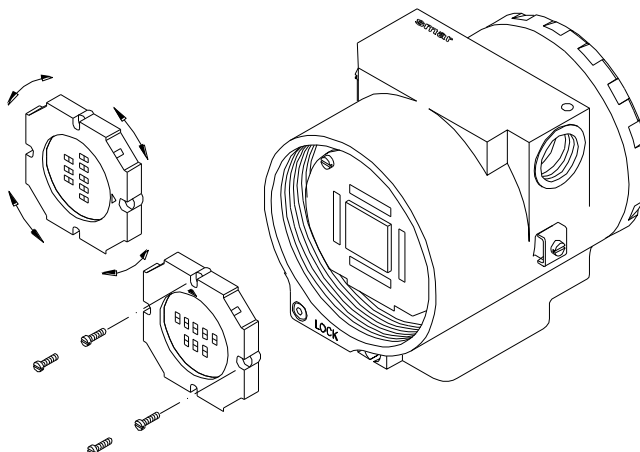


Figure 4.2 – Four Possible Positions of the Display

After tightening the protective cover (1), mounting procedure is complete. The transmitter is ready to be energized and tested. It is recommended that adjustment be done on the ZERO TRIM and on the UPPER PRESSURE TRIM.

Interchangeability

In order to obtain an accurate and better temperature compensated response, each sensor is submitted to a characterization process and the specific data is stored in an EEPROM located in the sensor body.

The main board, in this operation, reads the sensor serial number and compares it with the number stored in the main board. In case they do not match, the circuit considers that the sensor has been changed and will probe the memory of the new sensor for the following information:

- ✓ Temperature compensation coefficients.
- ✓ Sensor trim data, including 5-point characterization curve.
- ✓ Sensor characteristics: type, range, diaphragm material and fill fluid.

Information not transferred during sensor replacement will remain unchanged in the main board memory. Thus, information such as Upper Value, Lower Value, Damping, Pressure Unit and replaceable transmitter parts (Flange, O-ring, etc.) shall be updated, depending whether the correct information is that of the sensor or the main board. In the case of a new sensor, the main board will have the most updated information; in the opposite case, the sensor will have the correct information. Depending on the situation, the updating shall be from one or the other.

Returning Materials

Should it become necessary to return the transmitter and/or configurator to **SMAR**, simply contact our office, informing the defective instrument serial number, and return it to our factory.

If it becomes necessary to return the transmitter and/or configurator to Smar, simply contact our office, informing the defective instrument's serial number, and return it to our factory. In order to speed up analysis and solution of the problem, the defective item should be returned with the Service Request Form (SRF – Appendix B) properly filled with a description of the failure observed and with as much details as possible. Other information concerning to the instrument operation, such as service and process conditions, is also helpful.

Instruments returned or to be revised outside the guarantee term should be accompanied by a purchase order or a quote request.

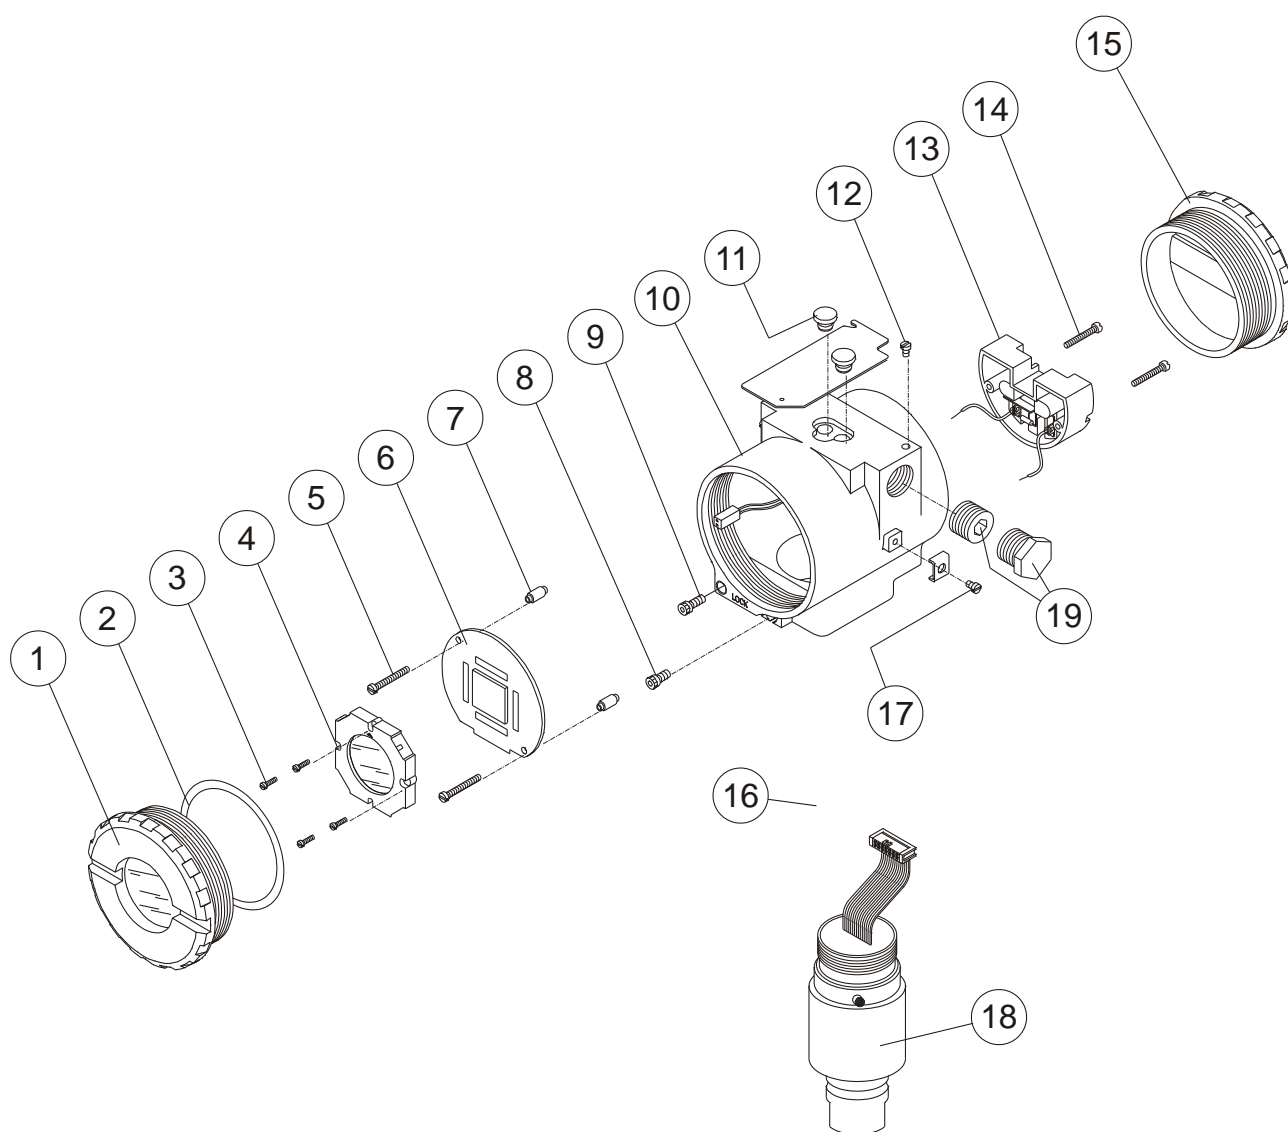


Figure 4.1 – Exploded View

ACCESSORIES	
ORDERING CODE	DESCRIPTION
SD-1	Magnetic Tool for local adjustment

SPARE PARTS LIST FOR TRANSMITTER				
DESCRIPTION OF PARTS		POSITION	CODE	CATEGORY (NOTE 1)
HOUSING (NOTE 2)		10	(NOTE 6)	
COVER (Includes O-ring)	. Aluminum	1 and 15	204-0102	
	. Stainless Steel 316	1 and 15	204-0105	
COVER WITH WINDOW FO120 R INDICATOR (Includes O-ring)	. Aluminum	1	204-0103	
	. Stainless Steel 316	1	204-0106	
COVER LOCKING SCREW		9	204-0120	
SENSOR LOCKING SCREW	. Without Head M6 Screw	8	400-1121	
EXTERNAL GROUND SCREW		21	204-0124	
IDENTIFICATION PLATE FIXING SCREW		12	204-0116	
DISPLAY (Included Screws)		3 and 4	400-0559	
TERMINAL BLOCK ISOLATOR		13	400-0058	
MAIN BOARD (Without display and mounting Kit Included) GLL 1071		6	400-0607	A
MAIN BOARD (Display and Mounting Kit not Included) – GLL 1071		6	400-0570	A
MAN BOARD with Mounting Kit and without display - GLL 1071		6	400-0608	A
MAIN FIXATION BOARD KIT (Screws and Spacers)		5 and 7	400-0560	
O-RINGS (NOTE 3)	. Cover, BUNA-N	2	204-0122	B
	. Neck, BUNA-N	20	204-0113	
TERMINAL HOLDING SCREW	. HOUSING, Aluminum	14	304-0119	
	. HOUSING, 316 SS	14	204-0119	
MAIN BOARD SCREW HOUSING IN ALUMINUM	.Units without indicator	3	304-0118	
	.Units with indicator	3	304-0117	
MAIN BOARD SCREW HOUSING IN 316 STAINLESS STEEL	.Units with indicator	3	204-0118	
	.Units without indicator	3	204-0117	
MOUNTING BRACKET FOR 2" PIPE MOUNTING (NOTE 5)	.Carbon Steel	-	209-0801	
	.Stainless Steel 316	-	209-0802	
	.Carbon Steel with bolts, nuts, washers and U-clamp in 316SS	-	209-0803	
LOCAL ADJUSTMENT PROTECTION CAP		11	204-0114	
SENSOR		27	(NOTE 4)	B
PLUG	Interno 1/2 NPT Aço Carbono Bicromatizado BR Ex d.	19	400-0808	
	Interno 1/2 NPT Aço Inox 304 BR Ex d.	19	400-0809	
	Externo M20 X 1.5 Aço Inox 316 BR Ex d.	19	400-0810	
	Externo PG13.5 Aço Inox 316 BR Ex d.	19	400-0811	

- Note:** 1) for category **A**, it is recommended to keep, in stock, 25 parts installed for each set, and for category **B**, 50.
2) Includes Terminal Block, Screws, caps and Identification plate without certification.
3) O-rings and Backup Rings are packaged in packs of 12 units, except for spring loaded.
4) To specify sensors, use the ordering code for sensors.
5) Including U-Clamp, nuts, bolts and washers.
6) To specify housing, use the ordering code for housing.

Ordering Code for Housing

CODE	DESCRIPTION				
400-1314 - 2	HOUSING: LD290				
	Option	Communication Protocol			
	0	4-20 mA			
	Option	Electrical Connection			
	0	½ NPT			
	A	M20 X 1.5			
	B	PG13.5			
	Option	Material			
	H0	Aluminium (IP/Type)			
	H1	316 SST (IP/Type)			
	H2	Aluminium – for saline atmospheres (IPW/Type X)			
	H4	Aluminium Copper Free (IPW/Type X)			
	Option	Painting			
	P0	Gray Munsell N 6,5			
	P8	Without Painting			
	P9	Safe Blue Base EPÓXI – electrostatic painting			

400-1314 - 2	0	0	H0	P0
--------------	---	---	----	----

Ordering Code for Sensor

209-0241	SPARE PART NUMBER FOR PRESSURE GAGE SENSOR						
CODE	Type	Range Limits			Range Limits		
		Min.	Max.	Unit	Min.	Max.	Unit
M2	Gage	12.5	500	mbar	5.02	201.09	inH ₂ O
M3	Gage	62.5	2500	mbar	25.13	1005.45	inH ₂ O
M4	Gage	0.625	25	bar	157.1	10054.5	inH ₂ O
M5	Gage	6.25	250	bar	90.65	3625.94	psi
CODE	Diaphragm Material and Fill Fluid						
1	316L SST - Silicone Oil				E	Hastelloy C276 – Inert Krytox Oil (2)	
2	316L SST – Inert Fluorolube Oil (2)				Q	316L SST – Inert Halocarbon 4.2 Oil (2)	
3	Hastelloy C276 - Silicone Oil (1)				R	Hastelloy C276 – Inert Halocarbon 4.2 Oil (2)	
4	Hastelloy C276 – Inert Fluorolube Oil (2)				Z	User's specifications	
D	316L SST – Inert Krytox Oil (2)						
CODE	Process Connections Material						
H	Hastelloy C276 (1)			I	316L SST		Z User's specifications
CODE	Process Connections						
1	1/2 - 14 NPT - Female				U	1/2 BSP – Male	
A	M20 X 1.5 Male				V	Valve Manifold integrated to the transmitter	
G	G 1/2 A DIN 16288 - Form B (3)				X	1" NPT Sealed	
H	G 1/2 DIN 16288 - Form D (3)				Z	User's specifications	
M	1/2 - 14 NPT - Male						
209-0241	M2	1	I	A	← Typical Model Number		

← Typical Model Number

NOTE

- (1) Meets NECE MR - 01 - 75/ISO 15156 recommendations.
- (2) Inert Fluid: safe for oxygen service.
- (3) The DIN 16288 standards was substituted by the DIN EN 837-1.

209-0241	SPARE PART NUMBER FOR SANITARY PRESSURE SENSOR							
	CODE	Type	Range Limits			Range Limits		
			Min.	Max.	Unit	Min.	Max.	Unit
2		Sanitary	12.5	500	mbar	5.02	201.09	inH ₂ O
3		Sanitary	62.5	2500	mbar	25.13	1005,45	inH ₂ O
4		Sanitary	0.625	25	bar	157.1	10054.5	inH ₂ O
5		Sanitary	6.25	55.15	bar	90.65	799.89	psi
		CODE	Diaphragm Material					
		H	Hastelloy C276			M	Monel	
		I	316L SST			T	Tantalum	
		CODE	Fill Fluid (Low Side)					
		D	Silicone DC-704 Oil (2)				N	Propileno Glicol Neobee M20 Oil (Approved 3A) (3)
		F	Inert Fluorolube MO-10 Oil (1) (4)				S	Silicone DC-200/20 Oil (2)
		K	Inert Krytox Oil (1) (4)				T	Syltherm 800 Oil
		CODE	Process Connections					
		B	Thread IDF - 2" 300#			H	DN40 300# - DIN 11851	
		C	Thread RJT - 2" 300#			P	Tri-Clamp - 2" 800#	
		D	Tri-Clamp - 2" 300#			Q	Tri-Clamp - 1 1/2" 800#	
		E	Thread SMS - 2" 300#			Z	User's specifications	
		F	Tri-Clamp - 1 1/2" 300#					
		CODE	Optional Items					
209-0241	2	I	N	D	*	← Typical Model Number		

209-0241 2 I N D * ← Typical Model Number

*Leave blank for no optional items.

NOTES


- (1) Meets NACE MR - 01 - 75/ISO 15156 recommendations.
 (2) Silicone Oil is not recommended for Oxygen (O₂) or Chlorine service.
 (3) Compliant with 3A-7403 standard for food and other applications where sanitary connections are required:
 - Neobee M20 Fill Fluid
 - Finishing wet Face: 0,8 µm Ra (32 µ" AA)
 - Wet O-Ring: Viton, Buna-N and Teflon
 (4) Inert Fluid: Oxygen Compatibility, safe for oxygen service.

209-0241	SPARE PART NUMBER FOR FLANGED PRESSURE SENSOR											
	COD.	Type	Range Limits Min. Max.		Min. Span	Unit		Range Limits Min. Max.		Min. Span	Unit	
	L2	Level	-50	50	1,25	kPa		-200	200	5	inH ₂ O	Note: The range can be extended up to 0.75 LRL and 1.2 URL with small degradation of accuracy. The upper range value must be limited to the flange rating.
	L3	Level	-250	250	2,08	kPa		-36	36	0,3	psi	
	L4	Level	-2500	2500	20,83	kPa		-360	360	3	psi	
	L5	Level	-25000	25000	208,30	kPa		-3625	3625	30,2	psi	
	COD.	Diaphragm Material (Sensor) and Fill Fluid (Sensor)										
	1	316L SST - Silicone Oil										
	COD.	Process Connection										
	U	1" 150# (ANSI B16.5)							C	3" 600# (ANSI B16.5)		
	V	1" 300# (ANSI B16.5)							3	4" 150# (ANSI B16.5)		
	W	1" 600# (ANSI B16.5)							4	4" 300# (ANSI B16.5)		
	O	1½" 150# (ANSI B16.5)							D	4" 600# (ANSI B16.5)		
	P	1½" 300# (ANSI B16.5)							5	DN25 PN 10/40		
	Q	1½" 600# (ANSI B16.5)							R	DN40 PN 10/10		
	9	2" 150# (ANSI B16.5)							E	DN50 PN10/40		
	A	2" 300# (ANSI B16.5)							6	DN80 PN25/40		
	B	2" 600# (ANSI B16.5)							7	DN100 PN10/16		
	1	3" 150 # (ANSI B16.5)							8	DN100 PN25/40		
	2	3" 300# (ANSI B16.5)							Z	User's specifications		
	COD.	Type and Material Flange										
	4	304 SST (slip-on flange)							6	Carbon Steel (slip-on flange)		
	5	316 SST (slip-on flange)							Z	User's specifications		
	COD.	Extension Length										
	0	0 mm (0")							3	150 mm (6")		
	1	50 mm (2")							4	200 mm (8")		
	2	100 mm (4")							Z	User's specifications		
	COD.	Diaphragm Material/Extension (Process Connection)										
	1	316 L SST / 316 SST							5	Titanium / 316 SST (3)		
	2	Hastelloy C276 / 316 SST							6	316L SST with Teflon Lining		
	3	Monel 400 / 316 SST							L	316L SST with Halar Lining		
	4	Tantalum / 316 SST (3)							Z	User's specifications		
	COD.	Fill Fluid (Process Connection)										
	S	Silicone DC-200/20 Oil							H	Halocarbon 4.2 Oil		
	F	Inert Fluorolube MO-10 Oil (4)							N	Propileno Glicol (Neobee) Oil		
	D	Silicone DC-704 Oil							T	Syltherm 800 Oil		
	K	Krytox Oil							Z	User's specifications		
	COD.	Lower Housing Material										
	0	Without Lower Housing							4	Duplex (UNS 31803)		
	1	316L SST							5	304L SST		
	2	Hastelloy C276							Z	User's specifications		
	3	Super Duplex (UNS 32750)										
	COD.	Gasket Material										
	0	Without Gasket							T	Teflon (PTFE)		
	C	Copper							Z	User's specifications		
	G	Grafoil (Flaxible Lead)										
209-0241	L2	1	1	6	0	1	S	1	0	TYPICAL MODEL NUMBER		

NOTES

- (1) Silicone Oils not recommendations for Oxygen (O₂) or Chlorine service.
- (2) Not applicable for vacuum service.
- (3) Attention, check corrosion rate for the process, tantalum plate 0.1 mm, AISI 316L extension 3 to 6mm.
- (4) Fluorolube fill fluid is not available for Monel diaphragm.
- (5) Inert Fluid: Safe for oxygen service.

TECHNICAL CHARACTERISTICS

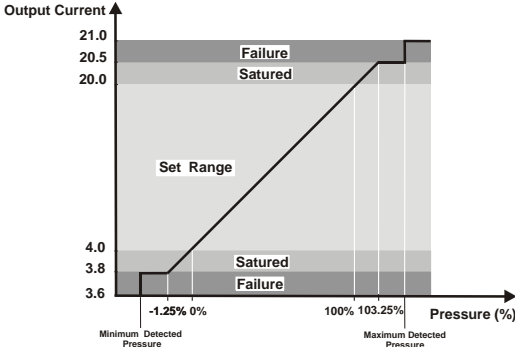Functional Specifications																																																														
Process Fluid	Liquid, gas or steam.																																																													
Output	<div>Two-wire, 4-20 mA controlled according to NAMUR NE43 Specification. See the figure below.</div> <div></div>																																																													
Power Supply	12 to 45 Vdc.																																																													
Load Limitation	Max. Impedance ≈ (Vpower suply - 12VDC) / 0.02 Ω.																																																													
Indicator	Optional 4½-digit numerical and 5-character alphanumeric LCD indicator.																																																													
Hazardous Area Certifications	Intrinsic Safe (FM, CSA, NEMKO, DEKRA/EXAM, CEPEL and NEPSI), non-incendive (FM, CSA and CEPEL), explosion proof (FM, NEMKO and CEPEL) and dust ignition proof (FM).																																																													
European Directive Information	<div>European Directive Information</div> <div>Authorized representative in European Community</div> <div>Smar GmbH-Rheingastrasse 9-55545 Bad Kreuznach</div> <div>PED Directive (97/23/EC) – Pressure Equipment Directive</div> <div>This product is in compliance with the directive and it was designed and manufactured in accordance with sound engineering practice using several standards from ANSI, ASTM, DIN and JIS.</div> <div>EMC Directive (2004/108/EC) - Eletromagnetic Compatibility</div> <div>The EMC test was performed according to IEC standard: IEC61326-1:2006, IEC61326-2-3:2006, IEC61000-6-4:2006, IEC61000-6-2:2005. For use in environment only.</div> <div>Keep the shield insulated at the instrument side, connecting the other one to the ground if necessary to use shielded cable.</div> <div>ATEX Directive (94/9/EC) – Equipment and protective systems intended for use in potentially explosive atmospheres.</div> <div>This product was certified according European Standards at NEMKO and EXAM (old DMT). The certified body for manufacturing quality assessment is EXAM (number 0158).</div> <div>LVD Directive 2006/95/EC – Electrical Equipment designed for use within certain voltage limits</div> <div>According the LVD directive Annex II the equipment under ATEX “Electrical equipment for use in an explosive atmosphere” directive are excluded from scope from this directive.</div> <div>The EC declarations of conformity for all applicable European directives for this product can be found at www.smar.com.</div>																																																													
Zero and Span Adjustments	Non interactive, via magnet tool.																																																													
Zero Adjustment Limit	<div>By Local Adjustment from 0 to 0.975 URL, URL = Upper Range Limit.</div> <table><tr><th colspan="6">Temperature Limits</th></tr><tr><th>Ambient</th><td>-40</td><td>to</td><td>85 °C</td><td>-40</td><td>to 185 °F</td></tr><tr><td></td><td>-15</td><td>to</td><td>85 °C</td><td>-59</td><td>to 185 °F</td></tr><tr><td rowspan="5">Process</td><td>-40</td><td>to</td><td>100 °C</td><td>-40</td><td>to 212 °F</td></tr><tr><td>0</td><td>to</td><td>85 °C</td><td>32</td><td>to 185 °F</td></tr><tr><td>-25</td><td>to</td><td>85 °C</td><td>-13</td><td>to 185 °F</td></tr><tr><td>-40</td><td>to</td><td>150 °C</td><td>-40</td><td>to 302 °F</td></tr><tr><td>-15</td><td>to</td><td>150 °C</td><td>-59</td><td>to 302 °F</td></tr><tr><td>Storage</td><td>40</td><td>to</td><td>100 °C</td><td>-40</td><td>to 212 °F</td></tr><tr><td rowspan="2">Digital Display</td><td>-20</td><td>to</td><td>80 °C</td><td>-4</td><td>to 176 °F</td></tr><tr><td>-40</td><td>to</td><td>85 °C</td><td>-40</td><td>to 185 °F</td></tr></table>	Temperature Limits						Ambient	-40	to	85 °C	-40	to 185 °F		-15	to	85 °C	-59	to 185 °F	Process	-40	to	100 °C	-40	to 212 °F	0	to	85 °C	32	to 185 °F	-25	to	85 °C	-13	to 185 °F	-40	to	150 °C	-40	to 302 °F	-15	to	150 °C	-59	to 302 °F	Storage	40	to	100 °C	-40	to 212 °F	Digital Display	-20	to	80 °C	-4	to 176 °F	-40	to	85 °C	-40	to 185 °F
Temperature Limits																																																														
Ambient	-40	to	85 °C	-40	to 185 °F																																																									
	-15	to	85 °C	-59	to 185 °F																																																									
Process	-40	to	100 °C	-40	to 212 °F																																																									
	0	to	85 °C	32	to 185 °F																																																									
	-25	to	85 °C	-13	to 185 °F																																																									
	-40	to	150 °C	-40	to 302 °F																																																									
	-15	to	150 °C	-59	to 302 °F																																																									
Storage	40	to	100 °C	-40	to 212 °F																																																									
Digital Display	-20	to	80 °C	-4	to 176 °F																																																									
	-40	to	85 °C	-40	to 185 °F																																																									

Functional Specifications																																																																																									
Failure Alarm	In case of sensor or circuit failure, the self-diagnostics drives the output to 3.6 or 21.0 mA, according to the user's choice.																																																																																								
Turn-on Time	Performs within specifications in less than 5 seconds after power is applied to the transmitter.																																																																																								
Overpressure and Static Pressure Limits (MWP – Maximum Working Pressure)	14 MPa (138 bar) for ranges 2, 3, 4. 31 MPa (310 bar) for range 5. For Level Ranges ANSI/DIN (models LD290L): 150#: 6 psia to 235 psi (-0,6 to 16 bar) to 199,4 °F (93 °C) 300#: 6 psia to 620 psi (-0,6 to 43 bar) to 199,4 °F (93 °C) 600#: 6 psia to 1240 psi (-0,6 to 85 bar) to 199,4 °F (93 °C) PN10/16: -60 kPa to 1,02 MPa to 212 °F (100 °C) PN25/40: -60 kPa to 2,55 MPa to 212 °F (100 °C) Overpressures above will not damage the transmitter, but a new calibration may be necessary.																																																																																								
	<div><div>WARNING</div><div>It is described here only the maximum pressures of the materials referenced in each rule, it can not be manufactured on request.</div><div>Temperatures above 150 ° C are not available in standard models.</div></div>																																																																																								
	PRESSURES TABLE FOR SEAL AND LEVEL FLANGES DIN EN 1092-1 2008 STANDARD																																																																																								
			<table><tr><th rowspan="3">Material Group</th><th rowspan="3">Pressure Class</th><th colspan="7">Maximum Temperature Allowed</th></tr><tr><th>RT</th><th>100</th><th>150</th><th>200</th><th>250</th><th>300</th><th>350</th></tr><tr><th colspan="7">Maximum Pressure Allowed (bar)</th></tr><tr><td rowspan="6">10E0 AISI 304/304L</td><td>PN 16</td><td>16</td><td>13.7</td><td>12.3</td><td>11.2</td><td>10.4</td><td>9,6</td><td>9.2</td></tr><tr><td>PN 25</td><td>25</td><td>21.5</td><td>19.2</td><td>17.5</td><td>16.3</td><td>15.1</td><td>14.4</td></tr><tr><td>PN 40</td><td>40</td><td>34.4</td><td>30.8</td><td>28</td><td>26</td><td>24.1</td><td>23</td></tr><tr><td>PN 63</td><td>63</td><td>63</td><td>57.3</td><td>53.1</td><td>50.1</td><td>46.8</td><td>45</td></tr><tr><td>PN 100</td><td>100</td><td>86.1</td><td>77.1</td><td>70</td><td>65.2</td><td>60.4</td><td>57.6</td></tr><tr><td>PN 160</td><td>160</td><td>137.9</td><td>123.4</td><td>112</td><td>104.3</td><td>96.7</td><td>92.1</td></tr><tr><td>PN 250</td><td>250</td><td>215.4</td><td>192.8</td><td>175</td><td>163</td><td>151.1</td><td>144</td></tr></table>							Material Group	Pressure Class	Maximum Temperature Allowed							RT	100	150	200	250	300	350	Maximum Pressure Allowed (bar)							10E0 AISI 304/304L	PN 16	16	13.7	12.3	11.2	10.4	9,6	9.2	PN 25	25	21.5	19.2	17.5	16.3	15.1	14.4	PN 40	40	34.4	30.8	28	26	24.1	23	PN 63	63	63	57.3	53.1	50.1	46.8	45	PN 100	100	86.1	77.1	70	65.2	60.4	57.6	PN 160	160	137.9	123.4	112	104.3	96.7	92.1	PN 250	250	215.4	192.8	175	163	151.1	144
	Material Group	Pressure Class	Maximum Temperature Allowed																																																																																						
			RT	100	150	200	250	300	350																																																																																
			Maximum Pressure Allowed (bar)																																																																																						
	10E0 AISI 304/304L	PN 16	16	13.7	12.3	11.2	10.4	9,6	9.2																																																																																
		PN 25	25	21.5	19.2	17.5	16.3	15.1	14.4																																																																																
		PN 40	40	34.4	30.8	28	26	24.1	23																																																																																
PN 63		63	63	57.3	53.1	50.1	46.8	45																																																																																	
PN 100		100	86.1	77.1	70	65.2	60.4	57.6																																																																																	
PN 160		160	137.9	123.4	112	104.3	96.7	92.1																																																																																	
PN 250	250	215.4	192.8	175	163	151.1	144																																																																																		
		<table><tr><th rowspan="3">Material Group</th><th rowspan="3">Pressure Class</th><th colspan="7">Maximum Temperature Allowed</th></tr><tr><th>RT</th><th>100</th><th>150</th><th>200</th><th>250</th><th>300</th><th>350</th></tr><tr><th colspan="7">Maximum Pressure Allowed (bar)</th></tr><tr><td rowspan="6">14E0 AISI 316/316L</td><td>PN 16</td><td>16</td><td>16</td><td>14.5</td><td>13.4</td><td>12.7</td><td>11.8</td><td>11.4</td></tr><tr><td>PN 25</td><td>25</td><td>25</td><td>22.7</td><td>21</td><td>19.8</td><td>18.5</td><td>17.8</td></tr><tr><td>PN 40</td><td>40</td><td>40</td><td>36.3</td><td>33.7</td><td>31.8</td><td>29.7</td><td>28.5</td></tr><tr><td>PN 63</td><td>63</td><td>63</td><td>57.3</td><td>53.1</td><td>50.1</td><td>46.8</td><td>45</td></tr><tr><td>PN 100</td><td>100</td><td>100</td><td>90.9</td><td>84.2</td><td>79.5</td><td>74.2</td><td>71.4</td></tr><tr><td>PN 160</td><td>160</td><td>160</td><td>145.5</td><td>134.8</td><td>127.2</td><td>118.8</td><td>114.2</td></tr><tr><td>PN 250</td><td>250</td><td>250</td><td>227.3</td><td>210.7</td><td>198.8</td><td>185.7</td><td>178.5</td></tr></table>							Material Group	Pressure Class	Maximum Temperature Allowed							RT	100	150	200	250	300	350	Maximum Pressure Allowed (bar)							14E0 AISI 316/316L	PN 16	16	16	14.5	13.4	12.7	11.8	11.4	PN 25	25	25	22.7	21	19.8	18.5	17.8	PN 40	40	40	36.3	33.7	31.8	29.7	28.5	PN 63	63	63	57.3	53.1	50.1	46.8	45	PN 100	100	100	90.9	84.2	79.5	74.2	71.4	PN 160	160	160	145.5	134.8	127.2	118.8	114.2	PN 250	250	250	227.3	210.7	198.8	185.7	178.5	
Material Group	Pressure Class	Maximum Temperature Allowed																																																																																							
		RT	100	150	200	250	300	350																																																																																	
		Maximum Pressure Allowed (bar)																																																																																							
14E0 AISI 316/316L	PN 16	16	16	14.5	13.4	12.7	11.8	11.4																																																																																	
	PN 25	25	25	22.7	21	19.8	18.5	17.8																																																																																	
	PN 40	40	40	36.3	33.7	31.8	29.7	28.5																																																																																	
	PN 63	63	63	57.3	53.1	50.1	46.8	45																																																																																	
	PN 100	100	100	90.9	84.2	79.5	74.2	71.4																																																																																	
	PN 160	160	160	145.5	134.8	127.2	118.8	114.2																																																																																	
PN 250	250	250	227.3	210.7	198.8	185.7	178.5																																																																																		
		<table><tr><th rowspan="3">Material Group</th><th rowspan="3">Pressure Class</th><th colspan="7">Maximum Temperature Allowed</th></tr><tr><th>RT</th><th>100</th><th>150</th><th>200</th><th>250</th><th>300</th><th>350</th></tr><tr><th colspan="7">Maximum Pressure Allowed (bar)</th></tr><tr><td rowspan="6">16E0 1.4410 Super Duplex 1.4462 Duplex</td><td>PN 16</td><td>16</td><td>16</td><td>16</td><td>16</td><td>16</td><td>-</td><td>-</td></tr><tr><td>PN 25</td><td>25</td><td>25</td><td>25</td><td>25</td><td>25</td><td>-</td><td>-</td></tr><tr><td>PN 40</td><td>40</td><td>40</td><td>40</td><td>40</td><td>40</td><td>-</td><td>-</td></tr><tr><td>PN 63</td><td>63</td><td>63</td><td>63</td><td>63</td><td>63</td><td>-</td><td>-</td></tr><tr><td>PN 100</td><td>100</td><td>100</td><td>100</td><td>100</td><td>100</td><td>-</td><td>-</td></tr><tr><td>PN 160</td><td>160</td><td>160</td><td>160</td><td>160</td><td>160</td><td>-</td><td>-</td></tr><tr><td>PN 250</td><td>250</td><td>250</td><td>250</td><td>250</td><td>250</td><td>-</td><td>-</td></tr></table>							Material Group	Pressure Class	Maximum Temperature Allowed							RT	100	150	200	250	300	350	Maximum Pressure Allowed (bar)							16E0 1.4410 Super Duplex 1.4462 Duplex	PN 16	16	16	16	16	16	-	-	PN 25	25	25	25	25	25	-	-	PN 40	40	40	40	40	40	-	-	PN 63	63	63	63	63	63	-	-	PN 100	100	100	100	100	100	-	-	PN 160	160	160	160	160	160	-	-	PN 250	250	250	250	250	250	-	-	
Material Group	Pressure Class	Maximum Temperature Allowed																																																																																							
		RT	100	150	200	250	300	350																																																																																	
		Maximum Pressure Allowed (bar)																																																																																							
16E0 1.4410 Super Duplex 1.4462 Duplex	PN 16	16	16	16	16	16	-	-																																																																																	
	PN 25	25	25	25	25	25	-	-																																																																																	
	PN 40	40	40	40	40	40	-	-																																																																																	
	PN 63	63	63	63	63	63	-	-																																																																																	
	PN 100	100	100	100	100	100	-	-																																																																																	
	PN 160	160	160	160	160	160	-	-																																																																																	
PN 250	250	250	250	250	250	-	-																																																																																		

Functional Specifications

PRESSURES TABLE FOR SEAL AND LEVEL FLANGES ASME B16.5 2009 STANDARD

Material Group	Pressure Class	Maximum Temperature Allowed								
		-29 to 38	50	100	150	200	250	300	325	350
		Maximum Pressure Allowed (bar)								
Hastelloy C276	150	20	19.5	17.7	15.8	13.8	12.1	10.2	9.3	8.4
	300	51.7	51.7	51.5	50.3	48.3	46.3	42.9	41.4	40.3
	400	68.9	68.9	68.7	66.8	64.5	61.7	57	55	53.6
	600	103.4	103.4	103	100.3	96.7	92.7	85.7	82.6	80.4
	900	155.1	155.1	154.6	150.6	145	139	128.6	124	120.7
	1500	258.6	258.6	257.6	250.8	241.7	231.8	214.4	206.6	201.1
	2500	430.9	430.9	429.4	418.2	402.8	386.2	357.1	344.3	335.3

Material Group	Pressure Class	Maximum Temperature Allowed								
		-29 to 38	50	100	150	200	250	300	325	350
		Maximum Pressure Allowed (bar)								
S31803 Duplex S32750 Super Duplex	150	20	19.5	17.7	15.8	13.8	12.1	10.2	9.3	8.4
	300	51.7	51.7	50.7	45.9	42.7	40.5	38.9	38.2	37.6
	400	68.9	68.9	67.5	61.2	56.9	53.9	51.8	50.9	50.2
	600	103.4	103.4	101.3	91.9	85.3	80.9	77.7	76.3	75.3
	900	155.1	155.1	152	137.8	128	121.4	116.6	114.5	112.9
	1500	258.6	258.6	253.3	229.6	213.3	202.3	194.3	190.8	188.2
	2500	430.9	430.9	422.2	382.7	355.4	337.2	323.8	318	313.7

Material Group	Pressure Class	Maximum Temperature Allowed								
		-29 to 38	50	100	150	200	250	300	325	350
		Maximum Pressure Allowed (bar)								
AISI316L	150	15.9	15.3	13.3	12	11.2	10.5	10	9.3	8.4
	300	41.4	40	34.8	31.4	29.2	27.5	26.1	25.5	25.1
	400	55.2	53.4	46.4	41.9	38.9	36.6	34.8	34	33.4
	600	82.7	80	69.6	62.8	58.3	54.9	52.1	51	50.1
	900	124.1	120.1	104.4	94.2	87.5	82.4	78.2	76.4	75.2
	1500	206.8	200.1	173.9	157	145.8	137.3	130.3	127.4	125.4
	2500	344.7	333.5	289.9	261.6	243	228.9	217.2	212.3	208.9

Material Group	Pressure Class	Maximum Temperature Allowed								
		-29 to 38	50	100	150	200	250	300	325	350
		Maximum Pressure Allowed (bar)								
AISI316	150	19	18.4	16.2	14.8	13.7	12.1	10.2	9.3	8.4
	300	49.6	48.1	42.2	38.5	35.7	33.4	31.6	30.9	30.3
	400	66.2	64.2	56.3	51.3	47.6	44.5	42.2	41.2	40.4
	600	99.3	96.2	84.4	77	71.3	66.8	63.2	61.8	60.7
	900	148.9	144.3	126.6	115.5	107	100.1	94.9	92.7	91
	1500	248.2	240.6	211	192.5	178.3	166.9	158.1	154.4	151.6
	2500	413.7	400.9	351.6	320.8	297.2	278.1	263.5	257.4	252.7

Material Group	Pressure Class	Maximum Temperature Allowed								
		-29 to 38	50	100	150	200	250	300	325	350
		Maximum Pressure Allowed (bar)								
AISI304	150	19	18.3	15.7	14.2	13.2	12.1	10.2	9.3	8.4
	300	49.6	47.8	40.9	37	34.5	32.5	30.9	30.2	29.6
	600	99.3	95.6	81.7	74	69	65	61.8	60.4	59.3
	1500	248.2	239.1	204.3	185	172.4	162.4	154.6	151.1	148.1
	2500	413.7	398.5	340.4	308.4	287.3	270.7	257.6	251.9	246.9

Overpressure and Static Pressure Limits (MWP – Maximum Working Pressure) (continuation)

Humidity Limits	0 to 100% RH (Relative Humid).
Damping Adjustment	Through magnet tool: adjustable for any value from 0 to 128 seconds, added to the sensor response time (0.2 seconds).

Performance Specifications	
Reference Conditions	Range starting at zero, temperature 25°C (77°F), atmospheric pressure, power supply of 24 Vdc, silicone oil fill fluid, isolating diaphragms in 316L SS and digital trim equal to lower and upper range values.
Accuracy	<p>For ranges 2, 3, 4 and 5: $\pm 0.075\%$ of span (for span ≥ 0.1 URL) $\pm [0.0375 + 0.00375 \text{ URL/SPAN}] \%$ of span (for span < 0.1 URL)</p> <p>For Level Transmitter: $\pm 0.08 \%$ of span (for span ≥ 0.1 URL) $\pm [0.0504 + 0.0047 \text{ URL/span}] \%$ of span (for span < 0.1 URL)</p> <p>For Insertion Model: $\pm 0.2\%$ of span</p>
Stability	$\pm 0.15\%$ of URL + for 5 years.
Temperature Effect	$\pm [0.02 \text{ URL} + 0.06\% \text{ of span}]$, per 20 °C (68 °F) for span ≥ 0.2 URL $\pm [0.023 \text{ URL} + 0.045\% \text{ of span}]$, per 20°C (68 °F) for span < 0.2 URL For LD290L 6 mmH ₂ O per 20 °C for 4" and DN100 17 mmH ₂ O per 20 °C for 3" and DN80
Power Supply Effect	$\pm 0.005\%$ of calibrated span per volt.
Mounting Position Effect	Zero shift of up to 250 Pa (1 inH ₂ O), which can be calibrated out. No span effect.
Electromagnetic Interference Effect	Approved according to IEC61326-1:2006, IEC61326-2-3:2006, IEC61000-6-4:2006, IEC61000-6-2:2005.

Physical Specifications	
Electrical Connection	1/2 -14 NPT, PG 13.5, or M20 x 1.5.
Process Connection	See ordering code.
Wetted Parts	Isolating Diaphragms and Process Connection 316L SST or Hastelloy C276.
Nonwetted Parts	<p>Electronic Housing Injected aluminum with polyester painting or 316 SST. According to NEMA Type 4X or Type 4, IP66, IP66W*. <small>*The IP66W sealing test (immersion) was performed at 1 bar for 24 hours. For any other situation, please consult Smar. IP66W tested for 200h to according NBR 8094 / ASTM B 117 standard.</small></p> <p>Level Flange (LD290L) 316L SST, 304 SST and Plated Carbon Steel.</p> <p>Fill Fluid Silicone or Inert Fluorolube Oil.</p> <p>Cover O-Rings Buna-N.</p> <p>Mounting Bracket Optional universal mounting bracket for surface or vertical/horizontal 2"-pipe (DN 50) Carbon Steel with polyester painting or 316 SST. Accessories (bolts, nuts, washers and U-clamp) in Carbon Steel or 316 SST.</p> <p>Identification Plate 316 SST.</p>
Approximate Weights	$< 2.0\text{kg}$ (4 lb): aluminum housing without mounting bracket.

Ordering Code

MODEL	GAGE PRESSURE TRANSMITTERS								
LD290M	4-20 mA								
CODE	Type	Range Limits			Range Limits				
		Min.	Max.	Unit	Min.	Max.	Unit		
2	Gage	12.5	500	mbar	5.02	201.09	inH ₂ O		
3	Gage	62.5	2500	mbar	25.13	1005.45	inH ₂ O		
4	Gage	0.625	25	bar	157.1	10054.5	inH ₂ O		
5	Gage	6.25	250	bar	90.65	3625.94	psi		
CODE	Diaphragm Material and Fill Fluid								
1	316L SST - Silicone Oil								
2	316L SST – Inert Fluorolube Oil (2)								
3	Hastelloy C276 - Silicone Oil (1)								
4	Hastelloy C276 – Inert Fluorolube Oil (2)								
D	316L SST – Inert Krytox Oil (2)								
E	Hastelloy C276 – Inert Krytox Oil (2)								
Q	316L SST – Inert Halocarbon 4.2 Oil (2)								
R	Hastelloy C276 – Inert Halocarbon 4.2 Oil (2)								
CODE	Process Connections Material								
H	Hastelloy C276 (1)								
I	316L SST								
Z	User's specifications								
CODE	Local Indicator								
0	Without Indicator				1	With Indicator			
CODE	Process Connections								
1	1/2 - 14 NPT - Female				U	1/2 BSP – Male			
A	M20 X 1,5 Male				V	Valve Manifold integrated to the transmitter			
G	G 1/2 A DIN 16288 - Form B				X	1" NPT Sealed			
H	G 1/2 DIN 16288 - Form D				Z	User's specifications			
M	1/2 - 14 NPT - Male								
CODE	Electrical Connections								
0	1/2 - 14 NPT (3)				A	M20 X 1.5 (5)			
1	1/2 - 14 NPT X 3/4 NPT (316 SST) - with adapter (4)				B	PG 13.5 DIN (5)			
2	1/2 - 14 NPT X 3/4 BSP (316 SST) - with adapter (6)				Z	User's specifications			
3	1/2 - 14 NPT X 1/2 BSP (316 SST) - with adapter (6)								
4	1/2 - 1/2 NPTF (316 SST) - with adapter								
5	1/2 - 3/4 NPTF (316 SST) - with adapter								
CODE	Mounting Bracket								
0	Without Mounting Bracket								
1	Carbon Steel Mounting Bracket with Carbon Steel accessories								
2	316 SST Mounting Bracket with 316 SST accessories								
7	Carbon Steel Mounting Bracket with 316 SST accessories								
A	Flat; 304 SST Mounting Bracket with 316SST accessories								
CODE	Optional Items								
LD290M	2	1	I	1	1	A	0	*	TYPICAL MODEL NUMBER

TYPICAL MODEL NUMBER

* Leave blank for no optional items.

MODEL	GAGE PRESSURE TRANSMITTER (CONTINUATION)									
	CODE	Output Signal								
	G0	4-20 mA								
	G4	4 - 20 mA + Output for Remote Indicator								
	CODE	Housing Material (9) (10)								
	H0	Aluminium (IP/TYPE)				H3	316 SST for Saline Atmosphere (IPW/TYPEX) (8)			
	H1	316 SST (IP/TYPE)				H4	Copper Free Aluminium (IPW/TYPEX) (8)			
	H2	Aluminium for Saline Atmosphere (IPW/TYPEX) (8)								
	CODE	Identification Plate								
	I1	FM: XP, IS, NI, DI			I5	CEPEL: Ex-d, Ex-ia		I7	EXAM (DMT) Grupo I, M1 Ex-ia	
	I3	CSA: XP, IS, NI, DI			I6	Without Certification		ID	NEPSI: Ex-ia, Ex-d	
	I4	EXAM (DMT): Ex-ia; NEMKO: Ex-d								
	CODE	Painting								
	P0	Munsell N 6,5 Gray				P5	Polyester Yellow			
	P3	Polyester Black				P8	Without Painting			
	P4	Epoxy White				P9	Blue Safety Base Epoxy –Eletrostatic Painting			
	CODE	Display Unit 1								
	Y0	Percentage				Y3	Temperature (Temperature)			
	Y1	Current (mA)				YU	User's specification (7)			
	Y2	Pressure (Eng. Unit)								
	CODE	Display Unit 2								
	Y0	Percentage				Y6	Temperature (Temperature)			
	Y4	Current (mA)				YU	User's specification (7)			
	Y5	Pressure (Eng. Unit)								
	CODE	Tag Plate								
	J0	With TAG				J2	User's specification			
	J1	Without TAG								

LD290M G0 H0 I1 P0 Y0 Y5 J0 ← TYPICAL MODEL NUMBER

Optional Items

Special Procedures	C1 –Degrease Cleaning (Oxygen or Chlorine Service)
Burnout	BD – Down Scale BU – Up Scale
Características Especiais	ZZ – User Specification

NOTES

- (1) Meets NACE material recommendation per MR-01-75.
- (2) Inert fluid: safe for oxygen service.
- (3) Certificate for use in Hazardous Locations (CEPEL, NEPSI, NEMKO, EXAM, FM, CSA).
- (4) Certificate for use in Hazardous Locations (CEPEL, CSA).
- (5) Certificate for use in Hazardous Locations (CEPEL, NEPSI, NEMKO, EXAM).
- (6) Not certified for use in hazardous locations.
- (7) Limited values to 4 1/2 digits; limited unit to 5 characters.
- (8) IPW/TYPEX was tested for 200 hours according to NBR 8094 / ASTM B 117 standard.
- (9) IPX8 tested for 10 meters of water column for 24 hours.
- (10) Ingress Protection:

Products	CEPEL	NEMKO/EXAM	FM	CSA	NEPSI
LD29X	IP66/W	IP66/68/W	Type 4X/6/6P	Type 4X	IP67

MODEL	SANITARY PRESSURE TRANSMITTERS										
LD290S	4-20 mA										
	CODE	Type	Range Limits			Range Limits					
			Min.	Max.	Unit	Min.	Max.	Unit			
	2	Sanitary	12.5	500	mbar	5.02	201.09	inH ₂ O			
	3	Sanitary	62.5	2500	mbar	25.13	1005,45	inH ₂ O			
	4	Sanitary	0.625	25	bar	157.1	10054.5	inH ₂ O			
	5	Sanitary	6.25	55.15	bar	90.65	799.89	psi			
	CODE	Diaphragm Material									
	I	316L SST									
	CODE	Fill Fluid									
	S	Silicone DC-200/20 Oil									
	CODE	Local Indicator									
	0	Without Indicator									
	1	With Indicator									
	CODE	Process Connections									
	B	Thread IDF - 2" 300# (2)					H	DN40 300# - DIN 11851			
	C	Thread RJT - 2" 300#					P	Tri-Clamp - 2" 800# (2)			
	D	Tri-Clamp - 2" 300# (2)					Q	Tri-Clamp - 1 1/2" 800# (2)			
	E	Thread SMS - 2" 300# (2)					Z	User's specifications			
	F	Tri-Clamp - 1 1/2" 300# (2)									
	CODE	Electrical Connections									
	0	1/2 - 14 NPT (3)							A	M20 X 1.5 (5)	
	1	1/2 - 14 NPT X 3/4 NPT (316 SST) - with adapter (4)							B	PG 13.5 DIN (5)	
	2	1/2 - 14 NPT X 3/4 BSP (316 SST) - with adapter (9)							Z	User's specifications	
	3	1/2 - 14 NPT X 1/2 BSP (316 SST) - with adapter (9)									
	4	1/2 - 1/2 NPTF (316 SST) - with adapter									
	5	1/2 - 3/4 NPTF (316 SST) - with adapter									
	CODE	O'Ring Material									
	0	Without O'Ring					V	Viton (2)			
	B	Buna-N (2)					Z	User's specifications			
	T	Teflon (2)									
	CODE	Adaptation Sleeve									
	0	Without Sleeve									
	1	With Adaptation Sleeve in 316 SST									
	CODE	Tri-Clamp Connection									
	0	Without Clamp									
	2	With Tri-Clamp in 304 SST									
	CODE	Optional Items									
LD290S	2	I	N	1	D	0	V	1	2	*	← Typical Model Number

LD290S 2 I N 1 D 0 V 1 2 * ← Typical Model Number

*Leave blank for no optional items.

MODEL	SANITARY PRESSURE TRANSMITTERS (CONTINUATION)									
	COD.	Output Signal								
	G0	4-20 mA								
	G4	4 - 20 mA + Output for Remote Indicator								
	COD.	Housing Material (7) (8)								
	H0	Aluminium (IP/TYPE)								
	H1	316 SST (IP/TYPE)								
	COD.	Identification Plate								
	I1	FM: XP, IS, NI, DI				I5	CEPEL: Ex-d, Ex-ia			
	I3	CSA: XP, IS, NI, DI				I6	Without Certification			
	I4	EXAM (DMT): Ex-ia; NEMKO: Ex-d								
	COD.	Painting								
	P0	Munsell N 6,5 Gray				P5	Polyester Yellow			
	P3	Polyester Black				P6	Epoxy Yellow			
	P4	Epoxy White								
	COD.	Display Unit 1								
	Y0	Percentage				Y3	Temperature (Temperature)			
	Y1	Current (mA)				YU	User's specification (6)			
	Y2	Pressure (Eng. Unit)								
	COD.	Display Unit 2								
	Y0	Percentage				Y6	Temperature (Temperature)			
	Y4	Current (mA)				YU	User's specification (6)			
	Y5	Pressure (Eng. Unit)								
	COD.	Tag Plate								
	J0	With TAG				J2	User's specification			
	J1	Without TAG								
LD290S	G0	H0	I1	P0	Y0	Y5	J0	← TYPICAL MODEL NUMBER		

LD290S

G0

H0

I1

P0

Y0

Y5

J0

← TYPICAL MODEL NUMBER

Optional Items

Special Procedures	C1 –Degrease Cleaning (Oxygen or Chlorine Service) C4 - Polishing of the sanitary connections according to 3A Certification (2)
Burnout	BD – Down Scale BU – Up Scale

NOTE

- (1) Inert Fluid: safe for oxygen service.
 (2) Compliant with 3A-7403 standard for food and other applications where sanitary connections are required:
 - Neobee M20 Fill Fluid
 - Finishing wet Face: 0.8 µm Ra (32 µ" AA)
 - Wet O-Ring: Viton, Teflon and Buna-N
 (3) Certificate for use in Hazardous Locations (CEPEL, NEPSI, NEMKO, EXAM, FM, CSA).
 (4) Certificate for use in Hazardous Locations (CEPEL, CSA).
 (5) Certificate for use in Hazardous Locations (CEPEL, NEPSI, NEMKO, EXAM).
 (6) Limited values to 4 1/2 digits; limited unit to 5 characters.
 (7) IPX8 tested for 10 meters of water column for 24 hours.
 (8) Ingress Protection:

Produtos	CEPEL	NEMKO/EXAM	FM	CSA	NEPSI
LD29X	IP66/W	IP66/68/W	Type 4X/6/6P	Type 4X	IP67

- (9) Not certified for use in hazardous locations.

MODEL	LOW COST FLANGED PRESSURE TRANSMITTER												
LD290L	4-20 mA												
COD.	Type	Range Limits		Unit	Range Limits		Unit						
		Min.	Max.		Min.	Max.							
2	Level	12.5	500	mbar	5.02	201.09	inH ₂ O						
3	Level	62.5	2500	mbar	25.13	1005.45	inH ₂ O						
4	Level	0.625	25	bar	157.1	10054.5	inH ₂ O						
5	Level	6.25	250	bar	90.65	3625.94	psi						
COD.	Diaphragm Material (Sensor) and Fill Fluid (Sensor)												
1	316L SST - Silicone Oil												
COD.	Local Indicator												
0	Without Indicator					1	With Digital Indicator						
COD.	Process Connection												
U	1" 150# (ANSI B16.5)						C	3" 600# (ANSI B16.5)					
V	1" 300# (ANSI B16.5)						3	4" 150# (ANSI B16.5)					
W	1" 600# (ANSI B16.5)						4	4" 300# (ANSI B16.5)					
O	1½" 150# (ANSI B16.5)						D	4" 600# (ANSI B16.5)					
P	1½" 300# (ANSI B16.5)						5	DN25 PN 10/40					
Q	1½" 600# (ANSI B16.5)						R	DN40 PN 10/10					
9	2" 150# (ANSI B16.5)						E	DN50 PN10/40					
A	2" 300# (ANSI B16.5)						6	DN80 PN25/40					
B	2" 600# (ANSI B16.5)						7	DN100 PN10/16					
1	3" 150 # (ANSI B16.5)						8	DN100 PN25/40					
2	3" 300# (ANSI B16.5)						Z	User's specifications					
COD.	Electrical Connection												
0	1/2 - 14 NPT (3)						5	1/2 - 3/4 NPTF (Al 316) - with adapter					
1	1/2 - 14 NPT X 3/4 NPT (Al 316) - with adapter (4)						A	M20 X 1.5 (5)					
2	1/2 - 14 NPT X 3/4 BSP (Al 316) - with adapter (13)						B	PG 13.5 DIN (5)					
3	1/2 - 14 NPT X 1/2 BSP (Al 316) - with adapter (13)						Z	User's specifications					
4	1/2 - 1/2 NPTF (Al 316) - with adapter												
COD.	Type and Material Flange												
4	304 SST (slip-on flange)						6	Carbon Steel (slip-on flange)					
5	316 SST (slip-on flange)						Z	User's specifications					
COD.	Extension Length												
0	0 mm (0")				2	100 mm (4")				4	200 mm (8")		
1	50 mm (2")				3	150 mm (6")				Z	User's specifications		
COD.	Diaphragm Material / Extension (Process Connection)												
1	316 L SST / 316 SST						5	Titanium / 316 SST (6)					
2	Hastelloy C276 / 316 SST						6	316L SST with Teflon Lining					
3	Monel 400 / 316 SST						L	316L SST with Halar Lining					
4	Tantalum / 316 SST (6)						Z	User's specifications					
COD.	Fill Fluid (Process Connection)												
S	Silicone DC-200/20 Oil						H	Halocarbon 4.2 Oil					
F	Inert Fluorolube MO-10 Oil (7)						N	Propileno Glicol (Neobee) Oil					
D	Silicone DC-704 Oil						T	Syltherm 800 Oil					
K	Krytox Oil						Z	User's specifications					
COD.	Lower Housing Material												
0	Without Lower Housing						4	Duplex (UNS 31803)					
1	316L SST						5	304L SST					
2	Hastelloy C276						Z	User's specifications					
3	Super Duplex (UNS 32750)												
COD.	Gasket Material												
0	Without Gasket						I	316L SST					
C	Copper						T	Teflon (PTFE)					
G	Grafoil (Flexible Lead)						Z	User's specifications					
CODE	Optional Items												
LD290L	2	1	1	1	0	6	2	1	S	1	T	*	TYPICAL MODEL NUMBER

*Leave it blank when there are not optional items.

MODEL	LOW COST FLANGED PRESSURE TRANSMITTER (CONTINUATION)									
	COD.	Output Signal								
	G0	4-20 mA								
	G4	4 - 20 mA + Output for Remote Indicator								
	COD.	Housing Material (11) (12)								
	H0	Aluminium (IP/TYPE)				H3	316 SST for saline atmosphere (IPW/TYPEX) (10)			
	H1	316 SST (IP/TYPE)				H4	Copper Free Aluminium (IPW/TYPEX) (10)			
	H2	Aluminium for saline atmosphere (IPW/TYPEX) (10)								
	COD.	Identification Plate								
	I1	FM: XP, IS, NI, DI				I5	CEPEL: Ex-d, Ex-ia			
	I3	CSA: XP, IS, NI, DI				I6	Without Certification			
	I4	EXAM (DMT): Ex-ia; NEMKO: Ex-d				I7	EXAM (DMT) Grupo I, M1 Ex-ia			
	COD.	Painting								
	P0	Munsell N 6,5 Gray				P6	Epoxy Yellow			
	P3	Polyester Black				P8	Without Painting			
	P4	Epoxy White				P9	Blue Safety Base Epoxy – Eletrostatic Painting			
	P5	Polyester Yellow				PC	Safety Base Polyester – Eletrostatic Painting			
	COD.	Display Unit 1								
	Y0	Percentage				Y3	Temperature (Temperature)			
	Y1	Current (mA)				YU	User's specification (9)			
	Y2	Pressure (Eng. Unit)								
	COD.	Display Unit 2								
	Y0	Percentage				Y6	Temperature (Temperature)			
	Y4	Current (mA)				YU	User's specification (9)			
	Y5	Pressure (Eng. Unit)								
	COD.	Tag Plate								
	J0	With TAG				J2	User's specification			
	J1	Without TAG								
LD290L	G0	H0	I1	P0	Y0	Y5	J0	← TYPICAL MODEL NUMBER		

Optional Items

Special Procedures	C1 –Degrease Cleaning (Oxygen or Chlorine Service)
Burnout	BD – Down Scale BU – Up Scale
Lower Housing Connection	U0 – With 1 Flush Connection 1/4" NPT (if supplied with lower housing) U1 – With 2 Flush Connections 1/4" NPT per 180° U2 – With 2 Flush Connections 1/4" NPT per 90° U3 – With 2 Flush Connections 1/2" - 14 NPT per 180° (with cover) U4 – Without Flush Connection

NOTES

- (1) Silicone Oils not recommendations for Oxygen (O₂) or Chlorine service.
- (2) Not applicable for vacuum service.
- (3) Certificate for use in Hazardous Locations (CEPEL, NEPSI, NEMKO, EXAM, FM, CSA).
- (4) Certificate for use in Hazardous Locations (CEPEL, CSA).
- (5) Certificate for use in Hazardous Locations (CEPEL, NEPSI, NEMKO, EXAM).
- (6) Attention, check corrosion rate for the process, tantalum plate 0.1 mm, AISI 316L extension 3 to 6mm.
- (7) Fluorolube fill fluid is not available for Monel diaphragm.
- (8) Inert Fluid: Safe for oxygen service.
- (9) Limited values to 4 1/2 digits; limited unit to 5 characters.
- (10) IPW/TYPEX was tested for 200 hours according to NBR 8094 / ASTM B 117 standard.
- (11) IPX8 tested for 10 meters of water column for 24 hours.
- (12) Ingress Protection:

Products	CEPEL	NEMKO/EXAM	FM	CSA	NEPSI
LD29X	IP66/W	IP66/68/W	Type 4X/6/6P	Type 4X	IP67

- (13) Not certified for use in hazardous locations.

MODEL	PRESSURE TRANSMITTER WITH EXTENDED PROBE										
LD290I	4-20 mA										
	COD.	Type	Range Limits								
		Min.		Max.	Unit						
	2	Level	12.5	500	mbar						
	COD.	Diaphragm Material and Fill Fluid									
		1	316L SST – Silicon Oil (1)								
	COD.	Local Indicator									
		0	Without Indicator								
		1	With Indicator								
	COD.	Fixing Transmitter									
		1	Bracket in L					Z	User's specification		
		2	Flanged Bracket								
		3	Triclamp 3" (10)								
	COD.	Electrical Connection									
		0	1/2 - 14 NPT (2)					A	M20 X 1.5 (4)		
		1	1/2 - 14 NPT X 3/4 NPT (316 SST) – with adapter (3)					B	PG 13.5 DIN (4)		
		2	1/2 - 14 NPT X 3/4 BSP (316 SST) - with adapter (5)					Z	User's specification		
		3	1/2 - 14 NPT X 1/2 BSP (316 SST) - with adapter (5)								
		4	1/2 - 1/2 NPTF (316 SST) - with adapter								
		5	1/2 - 3/4 NPTF (316 SST) - with adapter								
	COD.	Probe Material/Diaphragm (Wetted Parts)									
		A	304L SST / 316L SST								
		I	316L SST / 316L SST								
		U	316L SST / Hastelloy C276								
		Z	User's specification								
	COD.	Probe Length									
1		500 mm					6	1600 mm			
	2	630 mm					7	2000 mm			
	3	800 mm					8	2500 mm			
	4	1000 mm					9	3200 mm			
	5	1250 mm					Z	User's specification			
COD.	Probe Fill Fluid										
	N	Propileno Glicol Oil (Neobee M20) (10)									
	Z	User's specification									
COD.	Optional Items										
LD290I	2	1	1	3	A	I	1	N	*		

← TYPICAL MODEL

← TYPICAL MODEL

*Leave blank for no optional items.

MODEL	PRESSURE TRANSMITTER WITH EXTENDED PROBE (CONTINUATION)									
	COD.	Output Signal								
	G0	4-20 mA								
	G4	4-20 mA + Output for Remote Indicator								
	COD.	Housing Material (8) (9)								
	H0	Aluminium (IP/TYPE)				H3	316 SST for saline atmosphere (IPW/TYPEX) (7)			
	H1	316 SST (IP/TYPE)				H4	Copper Free Aluminium (IPW/TYPEX) (7)			
	H2	Aluminium for saline atmosphere (IPW/TYPEX) (7)								
	COD.	Identification Plate								
	IN	CEPEL: Ex-ia								
	COD.	Painting								
	P0	Munsell N 6,5 Gray				P6	Epoxy Yellow			
	P3	Polyester Black				P8	Without Painting			
	P4	Epoxy White				P9	Blue Safety Base Epoxy – Eletrostatic Painting			
	P5	Polyester Yellow				PC	Safety Base Polyester – Eletrostatic Painting			
	COD.	Display Unit 1								
	Y0	Percentage				Y3	Temperature (Temperature)			
	Y1	Current (mA)				YU	User Specification (6)			
	Y2	Pressure (Eng. Unit)								
	COD.	Display Unit 2								
	Y0	Percentage				Y6	Temperature (Temperature)			
	Y4	Current (mA)				YU	User Specification (6)			
	Y5	Pressure (Eng. Unit)								
	COD.	Tag Plate								
	J0	With TAG				J2	User Specification			
	J1	Without TAG								

LD290I

G0

H0

IN

P0

Y0

Y5

J0

← TYPICAL MODEL NUMBER

Optional Items

Special Procedures	C1 –Degrease Cleaning (Oxygen or Chlorine Service) C4 - Polishing of the sanitary connections according to 3A Certification (10)
Burnout	BD – Down Scale BU – Up Scale
Special Characteristics	ZZ – User's specifications

NOTES

- (1) Silicone Oils not recommendations for Oxygen (O₂) or Chlorine service.
 (2) Certificate for use in Hazardous Locations (CEPEL, NEPSI, NEMKO, EXAM, FM, CSA).
 (3) Certificate for use in Hazardous Locations (CEPEL, CSA).
 (4) Certificate for use in Hazardous Locations (CEPEL, NEPSI, NEMKO, EXAM).
 (5) Not certified for use in hazardous locations.
 (6) Limited values to 4 1/2 digits; limited unit to 5 characters.
 (7) IPW/TYPEX was tested for 200 hours according to NBR 8094 / ASTM B 117 standard.
 (8) IPX8 tested for 10 meters of water column for 24 hours.
 (9) Ingress Protection:

Products	CEPEL	NEMKO/EXAM	FM	CSA	NEPSI
LD29X	IP66/W	IP66/68/W	Type 4X/6/6P	Type 4X	IP67

- (10) Compliant with 3A-7403 standard for food and other applications where sanitary connections are required.
 - Neobee M2O Fill Fluid
 - Finishing wet Face: 0.8 µm Ra (32 µ" AA)
 - Wet O-Ring: Viton, Teflon and Buna-N

CERTIFICATIONS INFORMATIONS

European Directive Information

Authorized representative in European Community
Smar Gmbh-Rheingastrasse 9-55545 Bad Kreuznach

PED Directive (97/23/EC) – Pressure Equipment Directive

This product is in compliance with the directive and it was designed and manufactured in accordance with sound engineering practice using several standards from ANSI, ASTM, DIN and JIS.

EMC Directive (2004/108/EC) - Eletromagnetic Compatibility

The EMC test was performed according to IEC standard: IEC61326-1:2006, IEC61326-2-3:2006, IEC61000-6-4:2006, IEC61000-6-2:2005. For use in environment only.

Keep the shield insulated at the instrument side, connecting the other one to the ground if necessary to use shielded cable.

ATEX Directive (94/9/EC) – Equipment and protective systems intended for use in potentially explosive atmospheres.

This product was certified according European Standards at NEMKO and EXAM (old DMT). The certified body for manufacturing quality assessment is EXAM (number 0158).

LVD Directive 2006/95/EC – Electrical Equipment designed for use within certain voltage limits

According the LVD directive Annex II the equipment under ATEX “Electrical equipment for use in an explosive atmosphere” directive are excluded from scope from this directive.

The EC declarations of conformity for all applicable European directives for this product can be found at www.smar.com.

Other Approvals

FMEDA Report

Certifier Body: Exida

Failure Modes, Effects and Diagnostics Analysis (Report No. R02 / 11-19).

Hazardous Locations General Information

Ex Standards:

Ex Standards:

IEC 60079-0: 2008 General Requirements

IEC 60079-1:2009 Flameproof Enclosures “d”

IEC 60079-11:2009 Intrinsic Safety “i”

IEC 60079-26:2008 Equipment with equipment protection level (EPL) Ga

IEC 60529:2005 Classification of degrees of protection provided by enclosures (IP Code)

Customer responsibility:

IEC 60079-10 Classification of Hazardous Areas

IEC 60079-14 Electrical installation design, selection and erection

IEC 60079-17 Electrical Installations, Inspections and Maintenance

Warning:

Explosions could result in death or serious injury, besides financial damage. Installation of this instrument in an explosive environment must be in accordance with the national standards and according to the local environmental protection method. Before proceeding with the installation match the certificate parameters according to the environmental classification.

General Notes:

- **Maintenance and Repair**

The instrument modification or replaced parts supplied by any other supplier than authorized representative of Smar Equipamentos Industriais Ltda is prohibited and will void the Certification.

- **Marking Label**

Once a device labeled with multiple approval types is installed, do not reinstall it using any other approval types. Scratch off or mark unused approval types on the approval label.

- **For Ex-i protection application**

- Connect the instrument to a proper intrinsically safe barrier.
- Check the intrinsically safe parameters involving the barrier, equipment including the cable and connections.
- Associated apparatus ground bus shall be insulated from panels and mounting enclosures.
- When using shielded cable, isolate the not grounded cable end.
- Cable capacitance and inductance plus C_i and L_i must be smaller than C_o and L_o of the Associated Apparatus.

- **For Ex-d protection application**

- Only use Explosion Proof/Flameproof certified Plugs, Adapters and Cable glands.
- As the instrument is non-ignition capable under normal conditions, the statement "Seal Not Required" could be applied for Explosion Proof version regarding to electric conduits connection. (CSA Approved)
- In an Explosion-Proof/Flame-Proof installation, do not remove the instrument housing covers when powered on.

- **Electrical Connection**

In Explosion-Proof installations the cable entries must be connected through conduit with sealed unit or closed using metal cable gland or closed using metal blanking plug, all with at least IP66 and Ex-d certification. For enclosure with saline environment protection (W) and ingress protection (IP) applications, all NPT thread parts must apply a proper water-proof sealant (a non-hardening silicone group sealant is recommended).

- **For Ex-d and Ex-i protection application**

- The transmitter has a double protection. In this case the transmitter shall be fitted with appropriate certified cable entries Ex-d and the electric circuit supplied by a certified diode safety barrier as specified for the protection Ex-ia.

- **Environmental Protection**

- Enclosure Types (Type X): Supplementary letter X meaning special condition defined as default by Smar the following: Saline Environment approved - salt spray exposed for 200 hours at 35°C. (Ref: NEMA 250).
- Ingress protection (IP W): Supplementary letter W meaning special condition defined as default by Smar the following: Saline Environment approved - salt spray exposed for 200 hours at 35°C. (Ref: IEC60529).
- Ingress protection (IP x8): Second numeral meaning continuous immersion in water under special condition defined as default by Smar the following: 1 Bar pressure during 24hours. (Ref: IEC60529).

Hazardous Locations Certifications

NOTE
The IP68 sealing test (immersion) was performed at 1 bar for 24 hours. For any other situation, please consult Smar.

North American Certifications

FM Approvals

Intrinsic Safety (FM 4B9A4.AX)
IS Class I, Division 1, Groups A, B, C and D
IS Class II, Division 1, Groups E, F and G
IS Class III, Division 1

Explosion Proof (FM 4B9A4.AX)
XP Class I, Division 1, Groups A, B, C and D

Dust Ignition Proof (FM 4B9A4.AX)
DIP Class II, Division 1, Groups E, F and G
DIP Class III, Division 1

Non Incendive (FM 4B9A4.AX)
NI Class I, Division 2, Groups A, B, C and D

Environmental Protection (FM 4B9A4.AX)
Option: Type 4X/6P or Type 4/6P

Special conditions for safe use:

Entity Parameters:

$V_{max} = 30V_{dc}$, $I_{max} = 110mA$, $C_i = 8nF$, $L_i = 0.24mH$

Temperature Class: T4

Maximum Ambient Temperature: 60°C (-20 to 60 °C)

Overpressure Limits:

2000 psi for ranges 2, 3 and 4

4500 psi for range 5

CSA International (Canadian Standards Association)

Class 2258 02 – Process Control Equipment – For Hazardous Locations (CSA1111005)

Class I, Division 1, Groups B, C and D

Class II, Division 1, Groups E, F and G

Class III, Division 1

Class I, Division 2, Groups A, B, C and D

Class II, Division 2, Groups E, F and G

Class III

Dual Seal

Class 2258 03 – Process Control Equipment – Intrinsically Safe and Non-Incendive Systems – For Hazardous Locations (CSA 1111005)

Class I, Division 1, Groups A, B, C and D

Class II, Division 1, Groups E, F and G

Class III, Division 1

Model LD290 Series Pressure Transmitters, supply 12 – 42Vdc, 4-20mA; Maximum pressure 3600 psi; Enclosure Type 4/4X; intrinsically safe when connected through CSA Certified Diode Safety Barrier, 28V max, 300 ohms min, per Smar Installation Drawing 102A0435; Dual Seal.

Class 2258 04 – Process Control Equipment – Intrinsically Safe Entity – For Hazardous Locations (CSA 1111005)

Class I, Division 1, Groups A, B, C and D

Class II, Division 1, Groups E, F and G

Class III, Division 1

Model LD290 Series Pressure Transmitters, supply 12 – 42Vdc, 4-20mA; Maximum pressure 3600 psi; Enclosure Type 4/4X; intrinsically safe with Entity parameters:

$V_{max} = 28V$, $I_{max} = 110mA$, $C_i = 5nF$, $L_i = 0uH$,

when connected through CSA Certified Safety Barriers as per Smar Installation Drawing 102A0435; Dual Seal.

Note: Only models with stainless steel external fittings are Certified as Type 4X.

Special conditions for safe use:

Maximum Working Pressure: 3600psi

Maximum Ambient Temperature: 40°C (-20 to 40 °C)

Dual Seal (Process)

European Certifications

Certificate No: NEMKO 13 ATEX 1574X

Explosion Proof Group II, Category 2 G, Ex d, Group IIC, Temperature Class T6, EPL Gb

Ambient Temperature: -20 to 60 °C

Certificate No: NEMKO 13 ATEX 1574X

Environmental Protection

Options: IP66W/68W

Special Conditions for Safe Use

Repairs of the flameproof joints must be made in compliance with the structural specifications provided by the manufacturer. Repairs must not be made on the basis of values specified in tables 1 and 2 of EN/IEC 60079-1

The Essential Health and Safety Requirements are assured by compliance with:
EN 60079-0:2012 General Requirements
EN 60079-1:2007 Flameproof Enclosures “d”

Certificate No: DMT 01 ATEX E 059 – In Progress

ATEX Intrinsically Safe
Group I M1, Ex ia, I EPL Mb
Group II 1/2 G, Ex ia, IIC T4/T5/T6

Supply and signal circuit designed for the connection to an intrinsically safe 4-20 mA current loop:
 $U_i = 28 \text{ Vdc}$, $I_i = 93 \text{ mA}$, $C_i \leq 5 \text{ nF}$, $L_i = \text{neg}$

Maximum Permissible Power:

Max. Ambient Temperature T_a	Temperature Class	Power P_i
85 °C	T4	700 mW
75 °C	T4	760 mW
44 °C	T5	760 mW
50 °C	T5	700 mW
55 °C	T5	650 mW
60 °C	T5	575 mW
65 °C	T5	500 mW
70 °C	T5	425 mW
40 °C	T6	575 mW

Ambient Temperature: $-40 \text{ °C} < T_{amb} < +85 \text{ °C}$

The Essential Health and Safety Requirements are assured by compliance with:
EN 60079-0:2009 General Requirements
EN 60079-11:2007 Intrinsic Safe “I”
EN 60079-26:2007 Equipment with equipment protection level (EPL) Ga

South American Certifications**Certificate No: CEPEL 95.0049X**

Intrinsically Safe - Ex-ia IIC T5, EPL Ga
• Parameters: $U_i = 30 \text{ Vdc}$ $I_i = 100 \text{ Ma}$ $C_i = 6.4 \text{ nF}$ $L_i = \text{neg}$ $P_i = 0.7 \text{ W}$
Ambient Temperature: $(-20 \text{ °C} < T_{amb} < +50 \text{ °C})$.

Certificate No: CEPEL 96.0039

Explosion Proof - Ex-d IIC T6 EPL Gb
Ambient Temperature: $(-20 \text{ °C} < T_{amb} < +40 \text{ °C})$.

Environment Protection (95.0049X e 96.0039): IP66 ou IP66W.

Special conditions for safe use:

The certificate number ends with the letter "X" to indicate that for the version of Pressure Transmitter model **LD290** equipped with housing made of aluminum alloy, only can be installed in "Zone 0" if is excluded the risk of occurs impact or friction between the housing and iron/steel itens.

The Essential Health and Safety Requirements are assured by compliance with:

ABNT NBR IEC 60079-0:2008 General Requirements
ABNT NBR IEC 60079-1:2009 Flameproof Enclosures “d”
ABNT NBR IEC 60079-11:2009 Intrinsic Safety “i”
ABNT NBR IEC 60079-26:2008 Equipment with equipment protection level (EPL) Ga
ABNT NBR IEC 60529:2005 Classification of degrees of protection provided by enclosures (IP Code)

Asian Certifications**Certificate No: Nepsi GYJ05602**

Intrinsically safe - Ex ia, IIC T4/T5/T6
Ambient Temperature: $-40 \text{ °C} < T_{amb} < +85 \text{ °C}$
Entity Parameters: $U_i = 28 \text{ Vdc}$ $I_i = 93 \text{ mA}$ $C_i \leq 5 \text{ nF}$ $L_i = \text{neg}$

Certificate No: Nepsi GYJ05601



Explosion proof - Ex d IIC T6
Ambient Temperature: $-20 \text{ °C} < T_{amb} < +40 \text{ °C}$.

Identification Plate and Control Drawing



Identification Plate

- Identification of Intrinsically Safe and Explosion Proof for gas and steam:


CEPEL

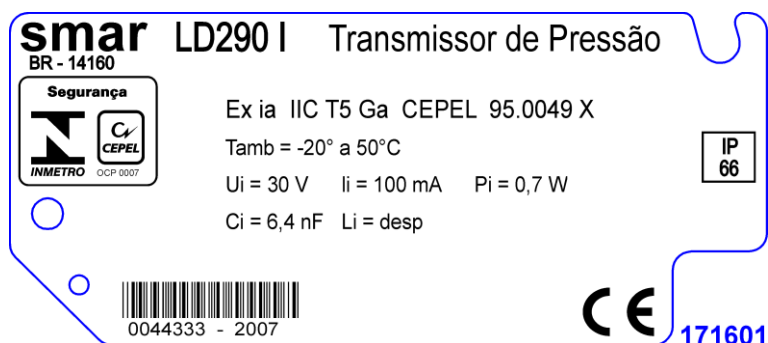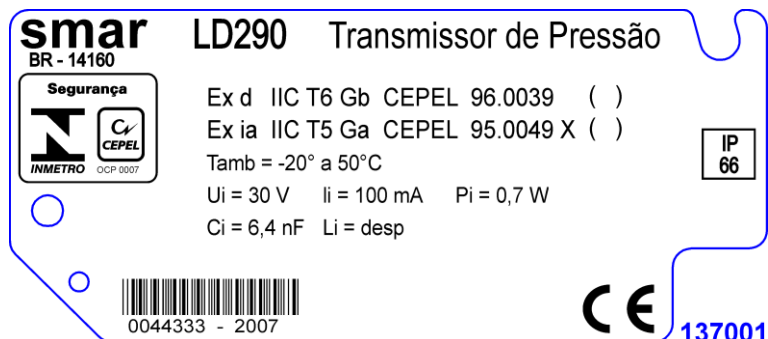


FM

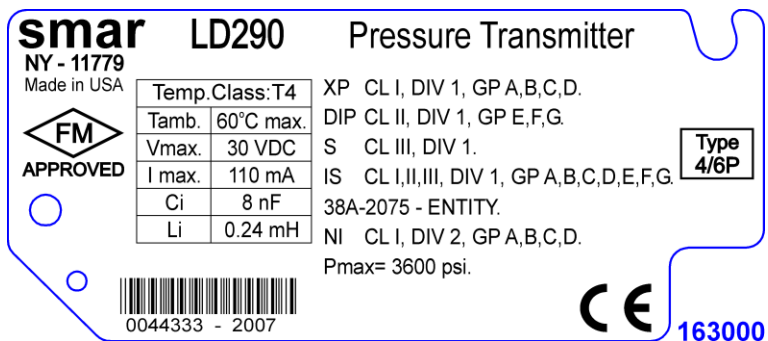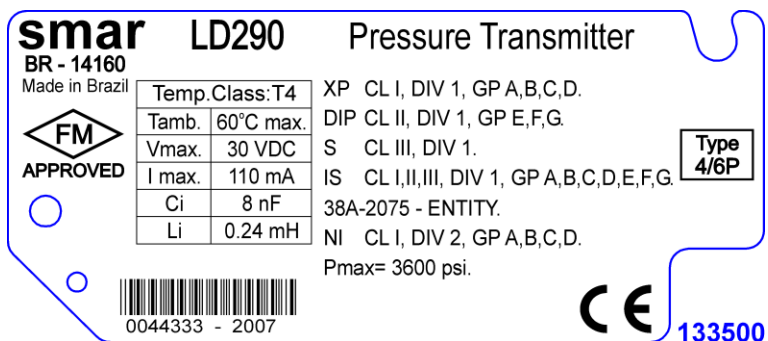


CSA

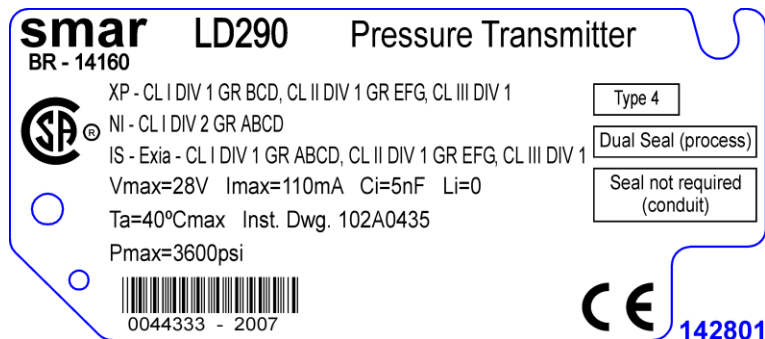


NEMKO and DMT

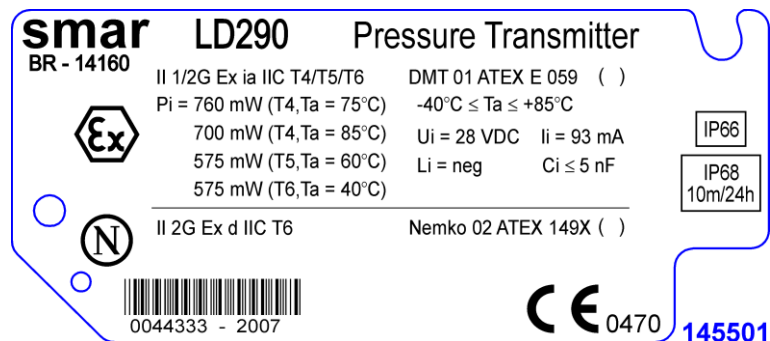


DMT

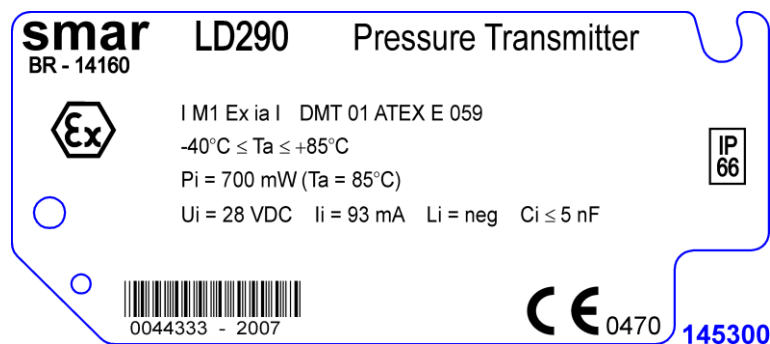


NEMKO

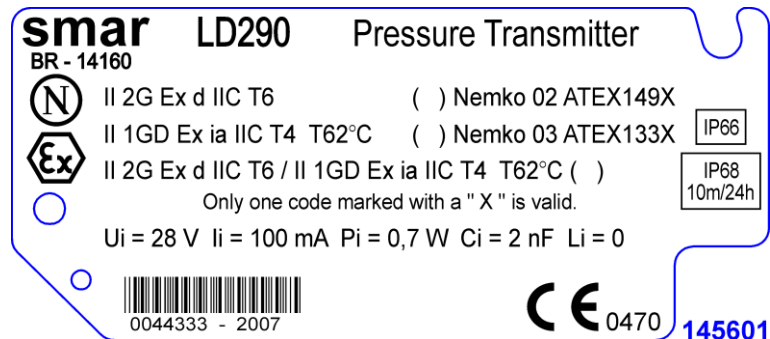

NEPSI


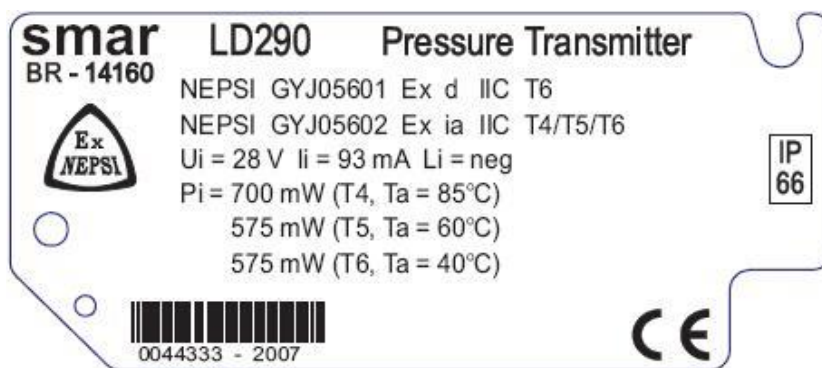


WITHOUT APPROVAL

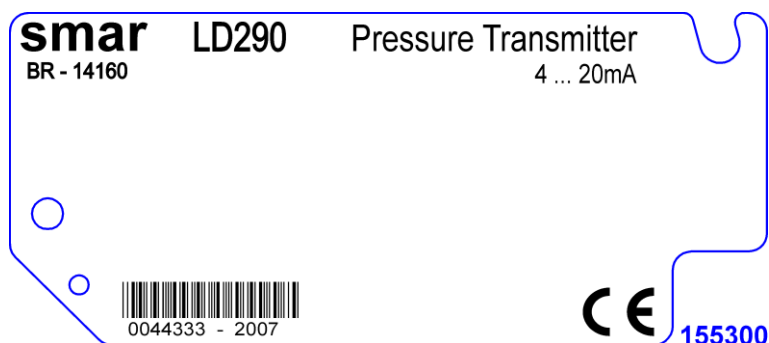

- Identification if Intrinsically Safe and Explosion Proof for saline atmospheres:

CEPEL

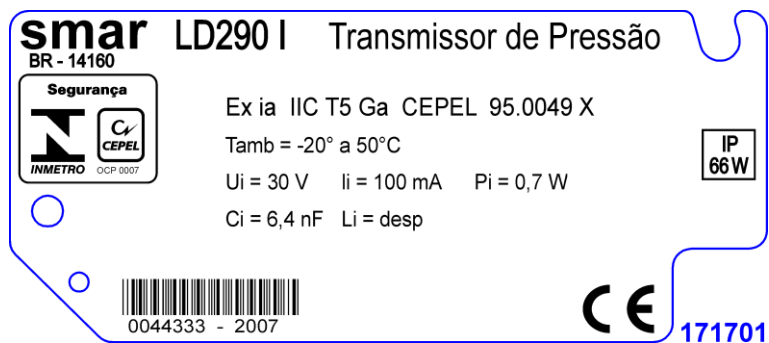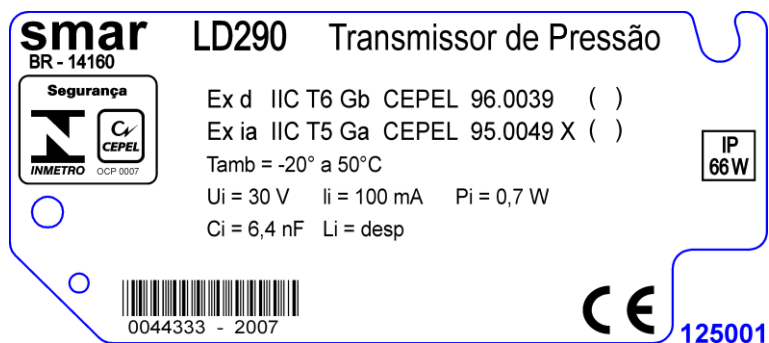

FM

smar LD290 Pressure Transmitter
BR - 14160
Made in Brazil

Temp. Class: T4	
Tamb.	60°C max.
Vmax.	30 VDC
I max.	110 mA
Ci	8 nF
Li	0.24 mH

XP CL I, DIV 1, GP A,B,C,D.
DIP CL II, DIV 1, GP E,F,G.
S CL III, DIV 1.
IS CL I,II,III, DIV 1, GP A,B,C,D,E,F,G.
38A-2075 - ENTITY.
NI CL I, DIV 2, GP A,B,C,D.
Pmax= 3600 psi.

FM APPROVED

Type 4X/6P

0044333 - 2007

CE 121200

smar LD290 Pressure Transmitter
NY - 11779
Made in USA

Temp. Class: T4	
Tamb.	60°C max.
Vmax.	30 VDC
I max.	110 mA
Ci	8 nF
Li	0.24 mH

XP CL I, DIV 1, GP A,B,C,D.
DIP CL II, DIV 1, GP E,F,G.
S CL III, DIV 1.
IS CL I,II,III, DIV 1, GP A,B,C,D,E,F,G.
38A-2075 - ENTITY.
NI CL I, DIV 2, GP A,B,C,D.
Pmax= 3600 psi.

FM APPROVED

Type 4X/6P

0044333 - 2007

CE 163100

NEMKO and DMT

smar LD290 Pressure Transmitter
BR - 14160

II 1/2G Ex ia IIC T4/T5/T6
Pi = 760 mW (T4, Ta = 75°C)
700 mW (T4, Ta = 85°C)
575 mW (T5, Ta = 60°C)
575 mW (T6, Ta = 40°C)

DMT 01 ATEX E 059 ()
-40°C ≤ Ta ≤ +85°C
Ui = 28 VDC li = 93 mA
Li = neg Ci ≤ 5 nF

IP66W
IP68W 10m/24h

II 2G Ex d IIC T6
Nemko 02 ATEX 149X ()

Ex

N

0044333 - 2007

CE 0470 151101

NEMKO

smar LD290 Pressure Transmitter
BR - 14160

II 2G Ex d IIC T6 () Nemko 02 ATEX149X
II 1GD Ex ia IIC T4 T62°C () Nemko 03 ATEX133X
II 2G Ex d IIC T6 / II 1GD Ex ia IIC T4 T62°C ()
Only one code marked with a " X " is valid.
Ui = 28 V li = 100 mA Pi = 0,7 W Ci = 2 nF Li = 0


N
Ex

IP66W
IP68W 10m/24h

0044333 - 2007


CE 0470 151201

DMT

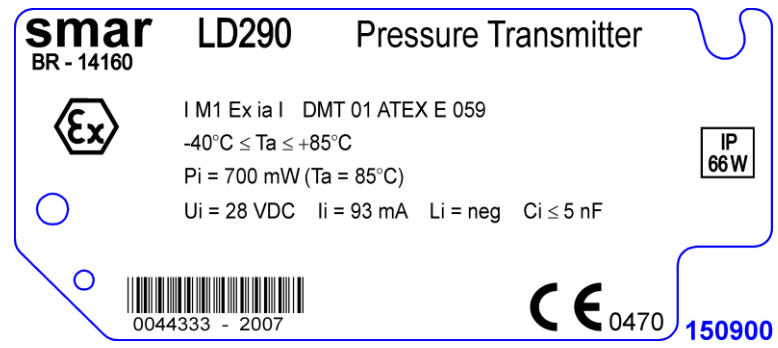


Control Drawing


CSA

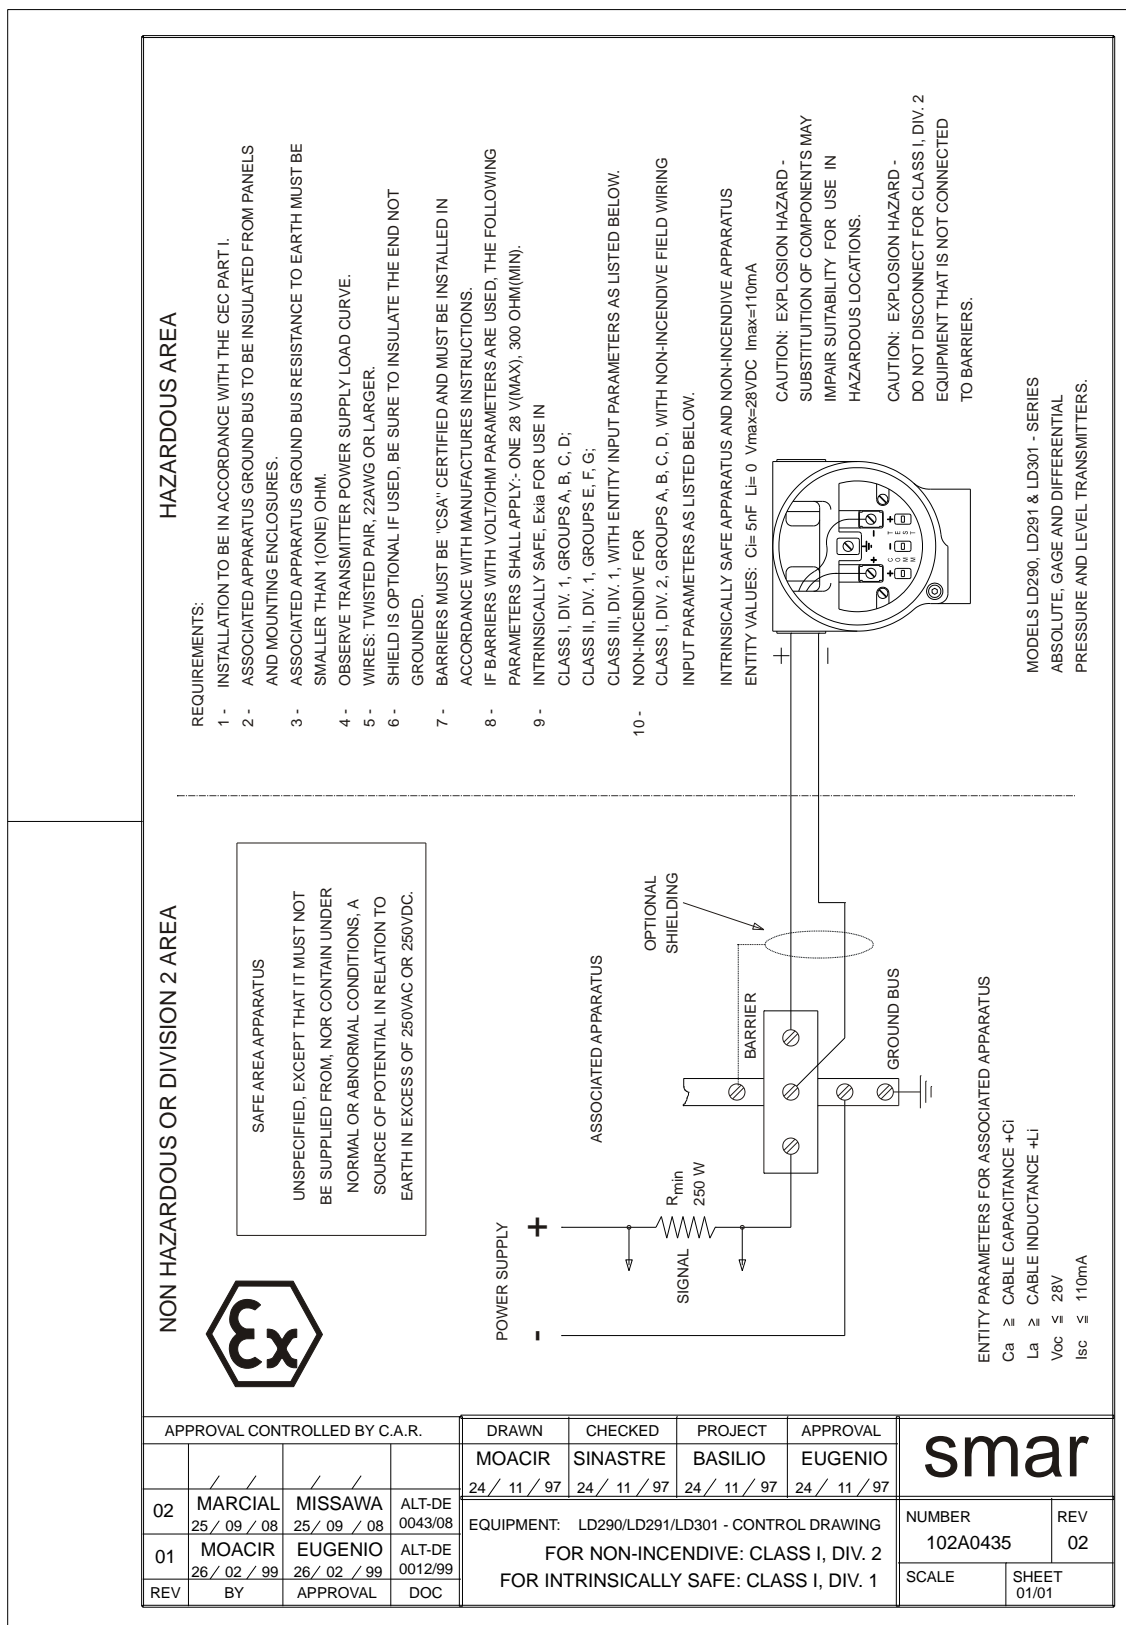


FM

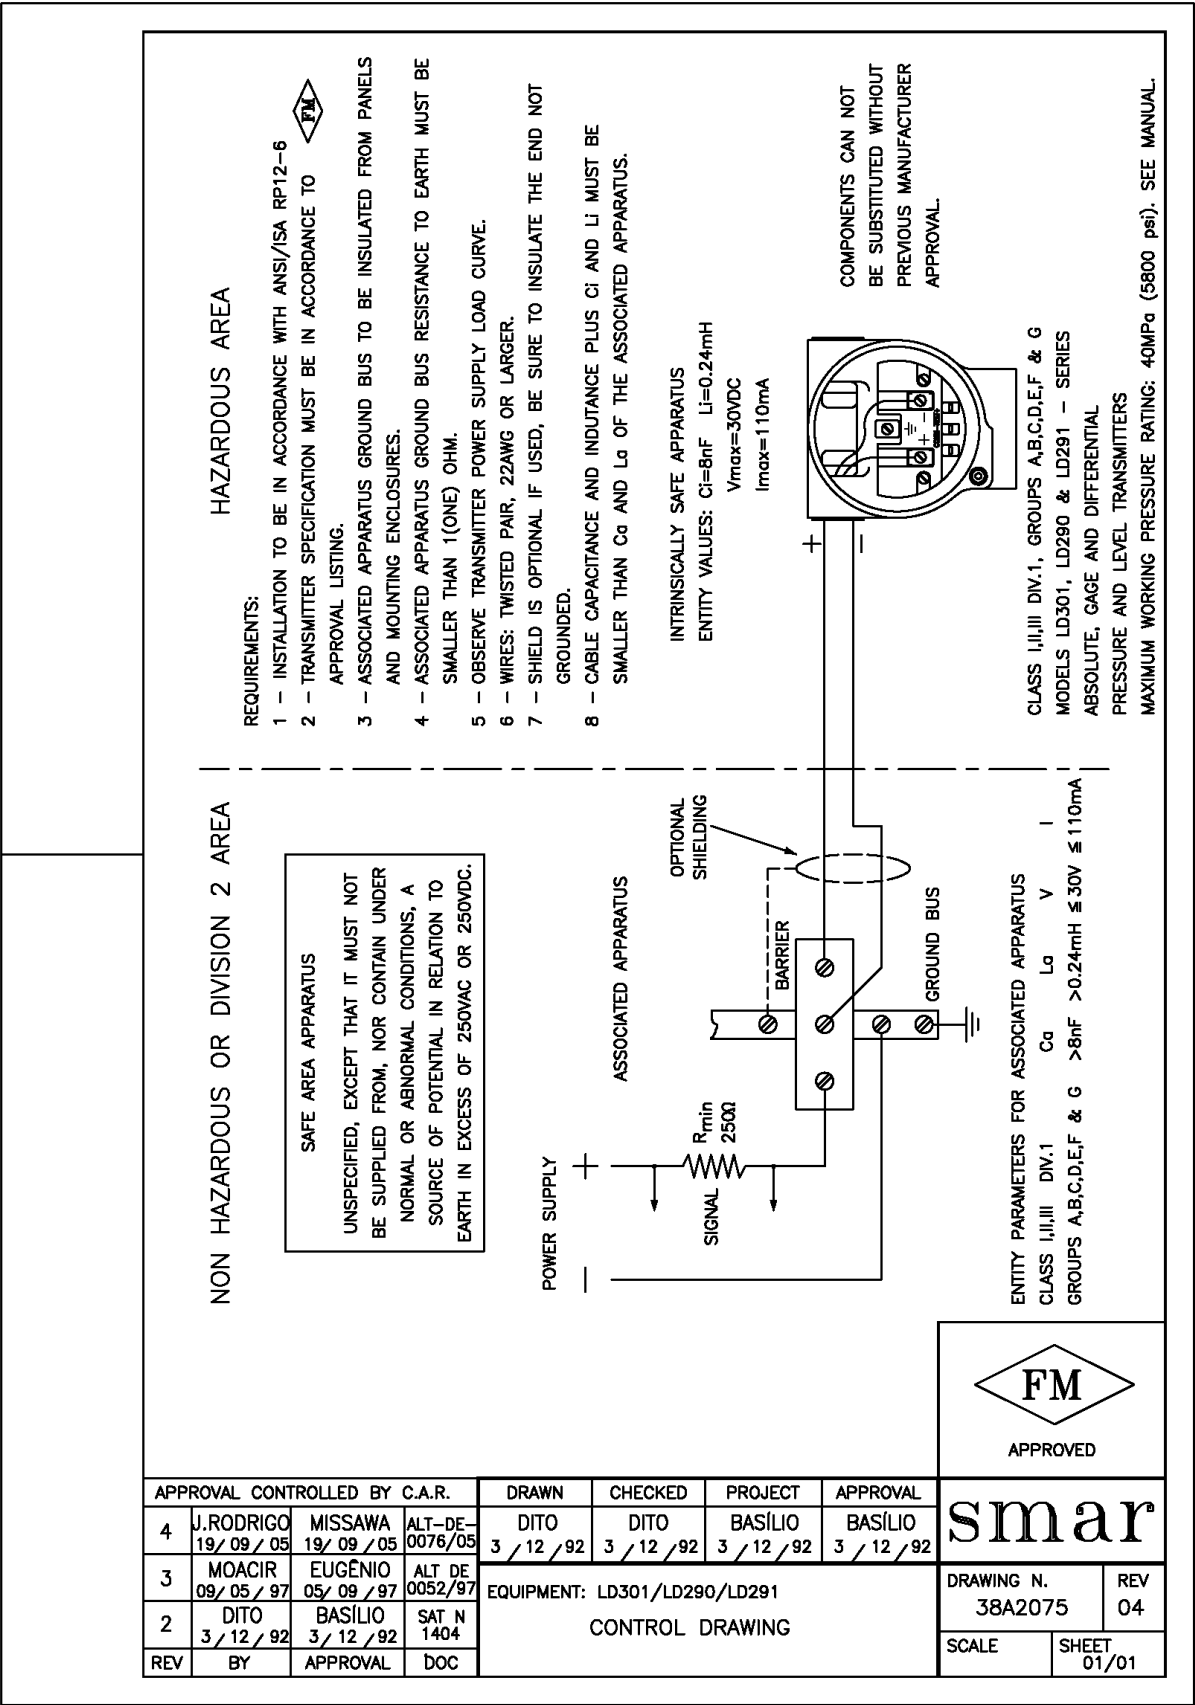

NEMKO

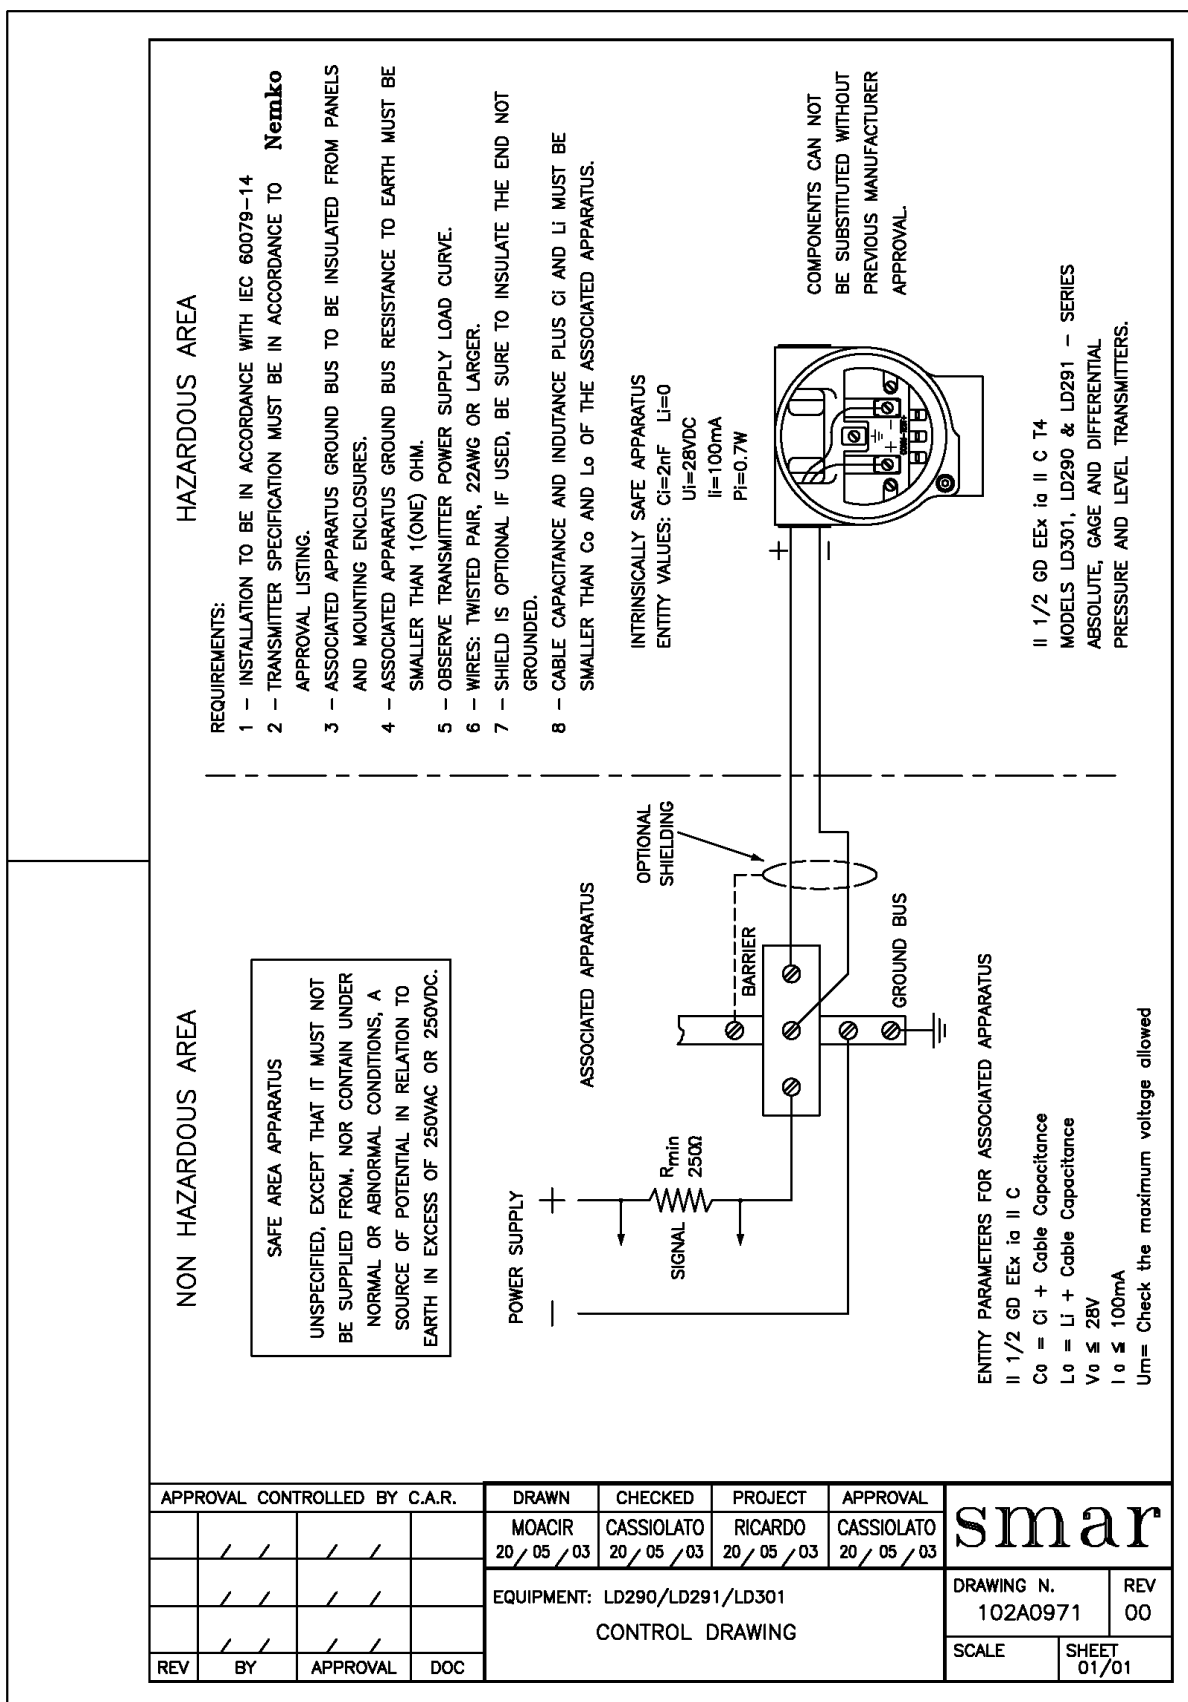

Appendix B

		SRF – Service Request Form Pressure Transmitters				Proposal No.:	
Company:				Unit:		Invoice:	
COMMERCIAL CONTACT				TECHNICAL CONTACT			
Full Name:				Full Name:			
Function:				Function:			
Phone:		Extension:		Phone:		Extension:	
Fax:				Fax:			
Email:				Email:			
EQUIPMENT DATA							
Model:				Serial Number:		Sensor Number:	
Technology: () 4-20 mA () HART® () FOUNDATION fieldbus™ () PROFIBUS PA						Version Firmware:	
PROCESS DATA							
Process Fluid:							
Calibration Range		Ambient Temperature (°F)		Process Temperature (°F)		Process Pressure	
Min.:	Max.:	Min.:	Max.:	Min.:	Max.:	Min.:	Max.:
Static Pressure		Vacuum					
Min.:	Max.:	Min.:	Max.:				
Normal Operation Time:				Failure Date:			
FAILURE DESCRIPTION (Please, describe the observed behavior, if it is repetitive, how it reproduces, etc.)							
OBSERVATIONS							
USER INFORMATION							
Company: Contact: _____ Title: _____ Section: _____ Phone: _____ Extension: _____ E-mail: _____ Date: _____ Signature: _____							
For warranty or non-warranty repair, please contact your representative. Further information about address and contacts can be found on www.smar.com/contactus.asp .							

